
Assembly Instructions

Caution: You must read this before you proceed

TV Stand

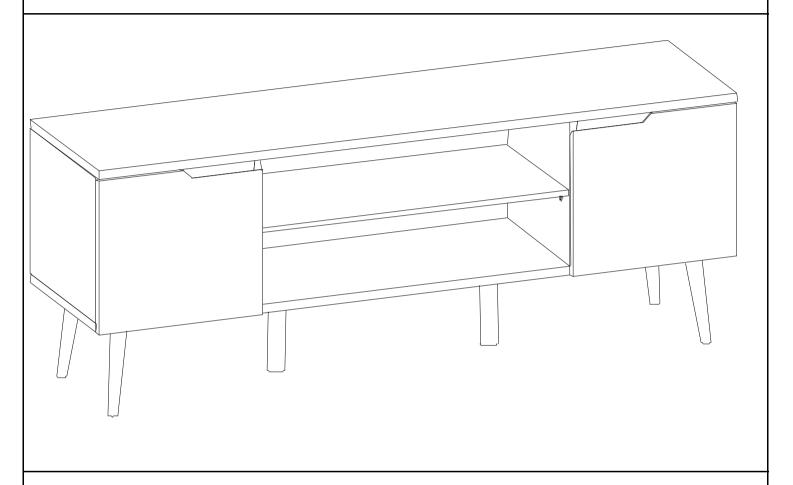

Thank You for purchasing one of our products, please carefully read through the instructions below.

Caution: The Table Top and other parts are heavy.

Two adults are required whenever lifting or moving them.


General Care: Keep your furniture out of direct sunlight. Use desk pads and coasters to protect the surface from dents, scratches, and moisture condensation from hot or cold liquids.

Cleaning: To clean, wipe the surface with damp (not wet) cloth or wipe dry with a clean lint free cotton cloth.

Part List			
Label	Picture	Description	QTY
А		Top Panel	1
В		Bottom Panel	1
С		Back Panel	1
D	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Left Side Panel	1
E		Right Side Panel	1
F	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Left Stand Panel	1
G		Right Stand Panel	1
Н		Door Rail	2
I		Left Door Panel	1
J		Right Door Panel	1
K		Glass Panel	1
М		Leg	4
N		Support Leg	2

<u>Hardware</u>			
Label	Picture	Description	QTY
1		Cam Lock	21
2		Cam Bolt	21
3		Positioning Dowel(φ 8*40mm)	17
4		Glass Clip	4
(5)		Screw(M3.5*14mm)	29
6		Connector	4
7		Bolt(M6*16)	17
8		Washer	17
9		Screwdriver	1

Assembly Preparation

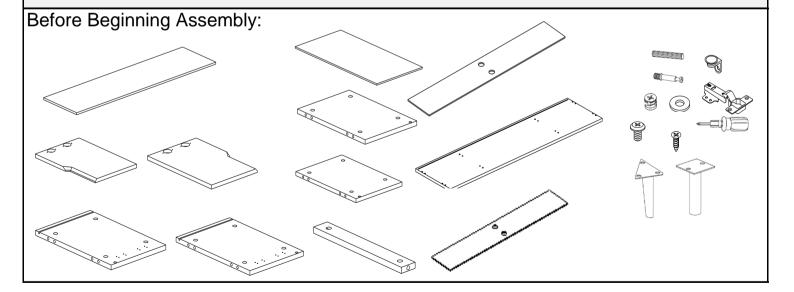



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

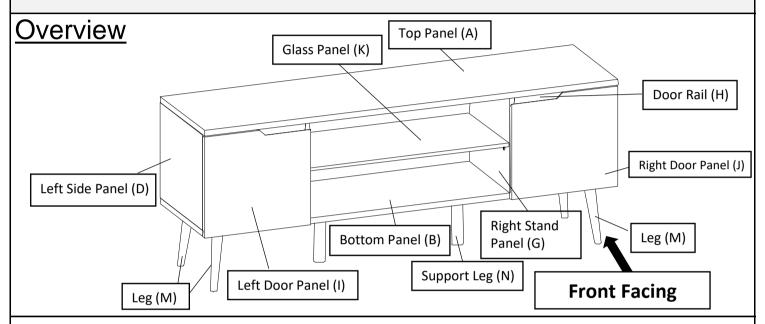

This TV Stand has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the TV Stand parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

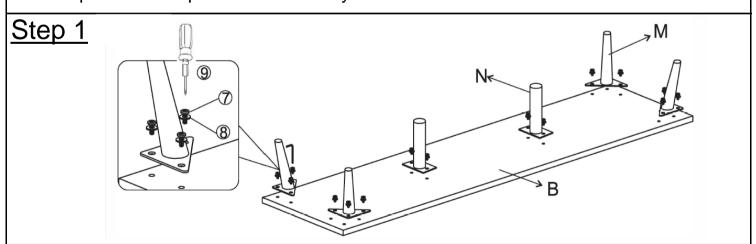


Take out all the Parts and Hardware, place them on a clean, non-marring surface. Place the Bottom Panel(B) facedown, then attach Legs(M) and Support Legs(N) to Bottom Panel(B) using Bolts(7) and Washers(8) with Screwdriver(9).

Tighten all Bolts fully in a sequential manner.

Note: Be certain to Align the marks "P" on Bottom Panel(B) and Legs(M) to ensure correct placement.

Step 2

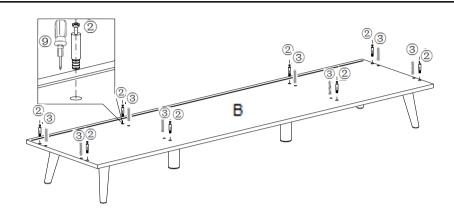


Stand the Bottom Panel(B) up.


Attach Cam Bolts(2) to mounting positions on the Bottom Panel(B) with Screwdriver(9) as pictured.

Insert Positioning Dowels(3) into mounting positions on the Bottom Panel(B) by hand.

Step 3

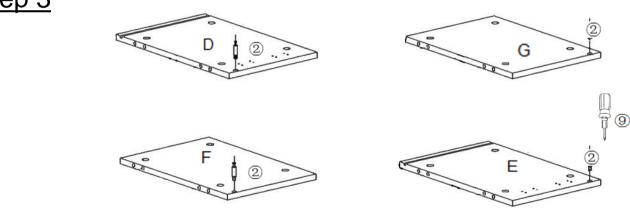


Attach Cam Bolts(②) to the mounting position on Left Side Panel(D), Left Stand Panel(F), Right Stand Panel(G) and Right Side Panel(E) using Screwdriver(⑨) as pictured.

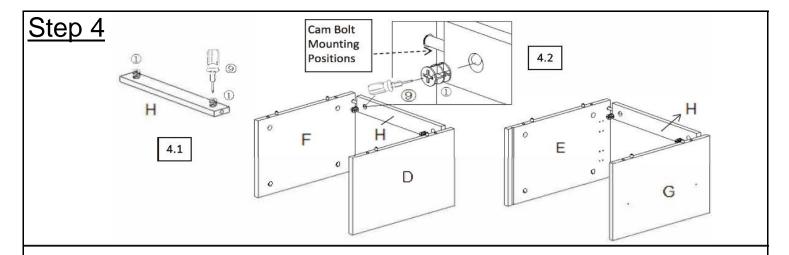


- **4.1)** Insert Cam Locks(①) on Left Stand Panel(F) and Left Side Panel(D) into the mounting positions of Door Rail(H) with Screwdriver(⑨) as shown in the picture.
- **4.2)** Attach Door Rail(H) to Left Stand Panel(F) and Left Side Panel(D) by turning the Cam Locks with Screwdriver(③) until they "Lock".

Repeat the same process to attach Door Rail(H) to Right Stand Panel(G) and Right Side Panel(E).

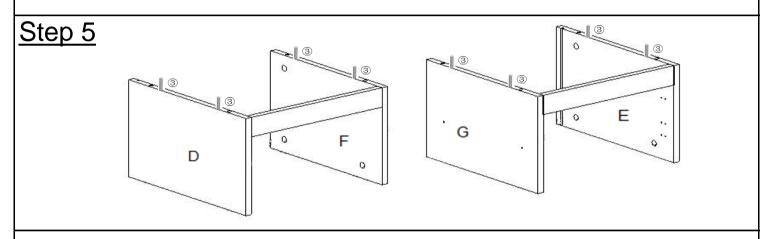

Insert Positioning Dowels(3) into mounting positions on Left Side Panel(D), Left Stand Panel(F), Right Stand Panel(G) and Right Side Panel(E) by hand as pictured above.

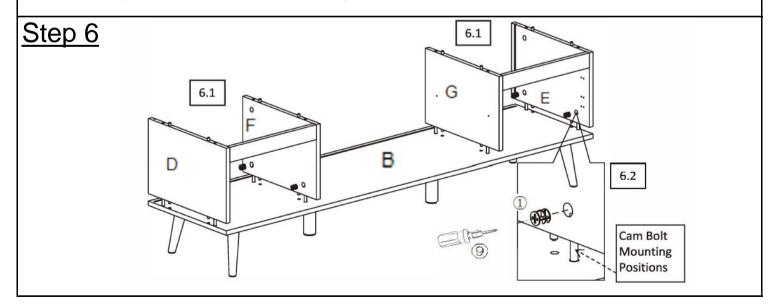


- **6.1)** Insert Cam Locks(①) into the mounting positions on Left Side Panel(D), Left Stand Panel(F), Right Stand Panel(G) and Right Side Panel(E) with Screwdriver(③).
- **6.2)** Attach Left Side Panel(D) and Left Stand Panel(F) to Bottom Panel(B) by turning the Cam Locks(1) with Screwdriver(9) until they "Lock".


Repeat the same process to attach Right Stand Panel(G) and Right Side Panel(E) to Bottom Panel(B).

Note: Make sure the side of groove on Left Side Panel(D), Right Side Panel(E) and Bottom Panel(B) are on back side.




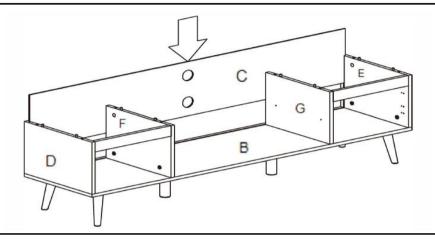


Insert the Back Panel(C) into the grooves on Left Side Panel(D), Right Side Panel(E) and Bottom Panel(B).

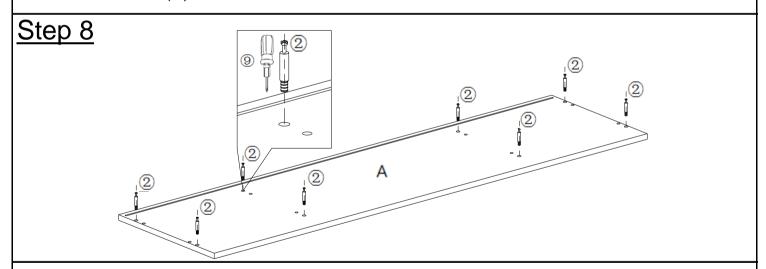

Attach Cam Bolts(②) to mounting positions on Top Panel(A) with Screwdriver(⑨) as pictured.

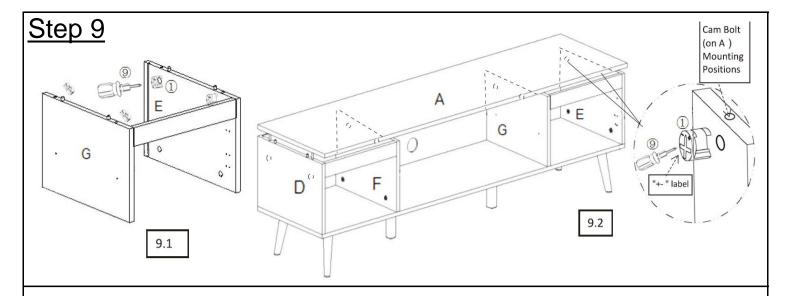


- **9.1)** Insert Cam Locks(①) into the mounting positions on Left Stand Panel(F), Left Side Panel(D), Right Stand Panel(G) and Right Side Panel(E) with Screwdriver(⑨) as pictured.
- **9.2)** Attach the Top Panel(A) to Left Stand Panel(F), Left Side Panel(D), Right Stand Panel(G) and Right Side Panel(E) by turning the Cam Locks(①) with Screwdriver(⑨) until they "Lock".

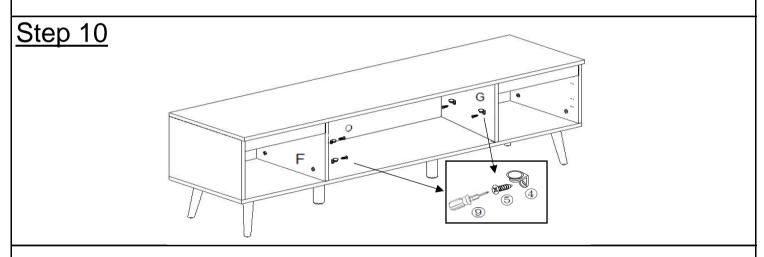

Attach Glass Clips(4) to Left Stand Panel(F) and Right Stand Panel(G) using Screws(5) with Screwdriver(9).


Tighten the Screws fully in a sequential manner.

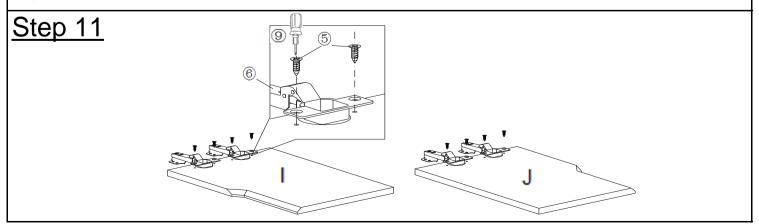

Attach Connectors(6) to the mounting positions on Left Door Panel(I) and Right Door Panel(J) using Screws(5) with Screwdriver(9) as pictured above.


Tighten the Screws fully in a sequential manner.

There are lead mounting positions on Left Door Panel(I) and Right Door Panel(J) to attach connector.

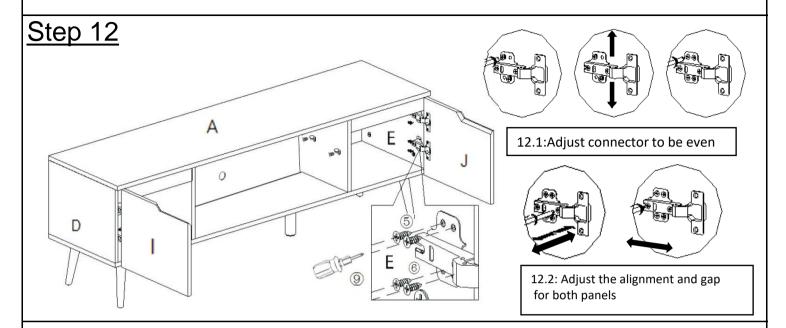



Attach Connectors(6) to Right Side Panel(E) and Left Side Panel(D) using Screws(5) with Screwdriver(9).

- **12.1)** First attach Connector(⑥) loosely using two Screws(⑤). Then make adjustments until Connector is even. Add remaining Screws and tighten completely.
- **12.2)** Adjust the alignment of the Right Door Panel(J) and Left Door Panel(I) by tightening the two middle screws on the Connectors(6) until the Panels are flush.

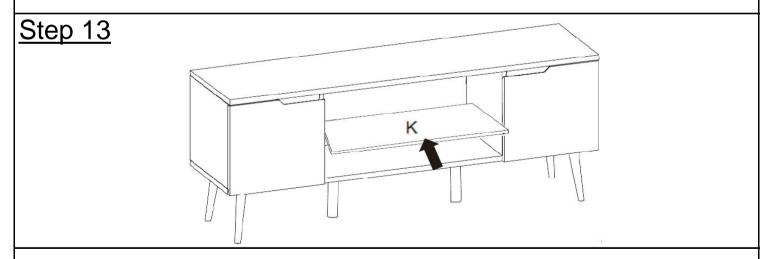

 Carefully place Glass Panel(K) onto the suckers on Glass Clips(4).



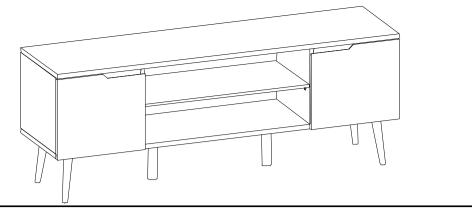

Inspect and make sure all parts are in place, and all Bolts are securely tightened. Your TV Stand is ready for use.

This TV Stand can only be used on a flat, level surface.

Care & Maintenance

- Do not put hot items directly on furniture surface
- Do not clean furniture with harsh cleansers or polish.
- Do not place furniture under direct sunlight.
- Do not place furniture near heating or cooling vents.
- Do not write on furniture without a padded barrier to protect the surface.
- Do not place furniture outside . For indoor use only .
- Not for commercial use. For residential use only .
- Stains may be removed with mild soap solution and damp cloth.
- Children should not climb or jump on the furniture.
- Dust and pick-up spills using a clean, non-colored, lint-free cloth.