


HINGE ADJUSTMENTS

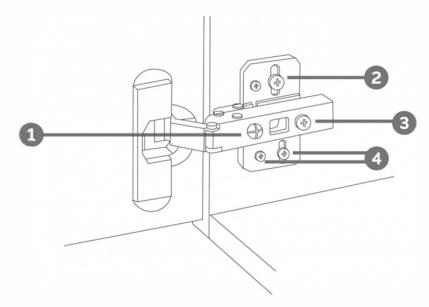


Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

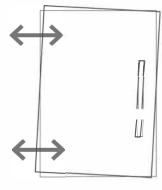

2 4 Height adjustment

While supporting the weight of the door, turn the screws **clockwise** to move the door up

anticlockwise to move the door down



If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw clockwise to decrease the gap between the door and the cabinet anticlockwise to increase the gap between the door and the cabinet

