
ASSEMBLY INSTRUCTIONS

36" BATHROOM VANITY

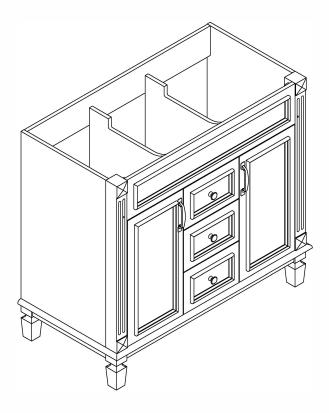

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present. "DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



- Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! Please assemble on a clean soft
- surface to avoid damage.













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will
 make the assembly easier, and will help eliminate damage to the product or injury to persons during
 assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

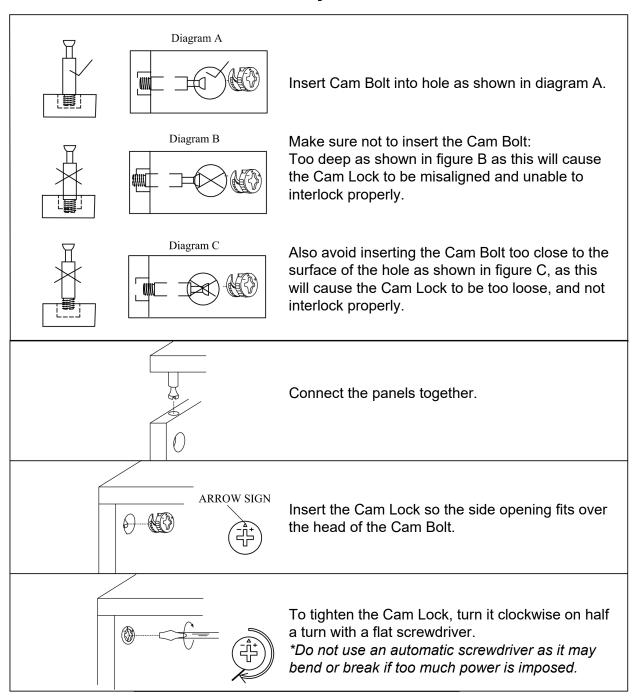

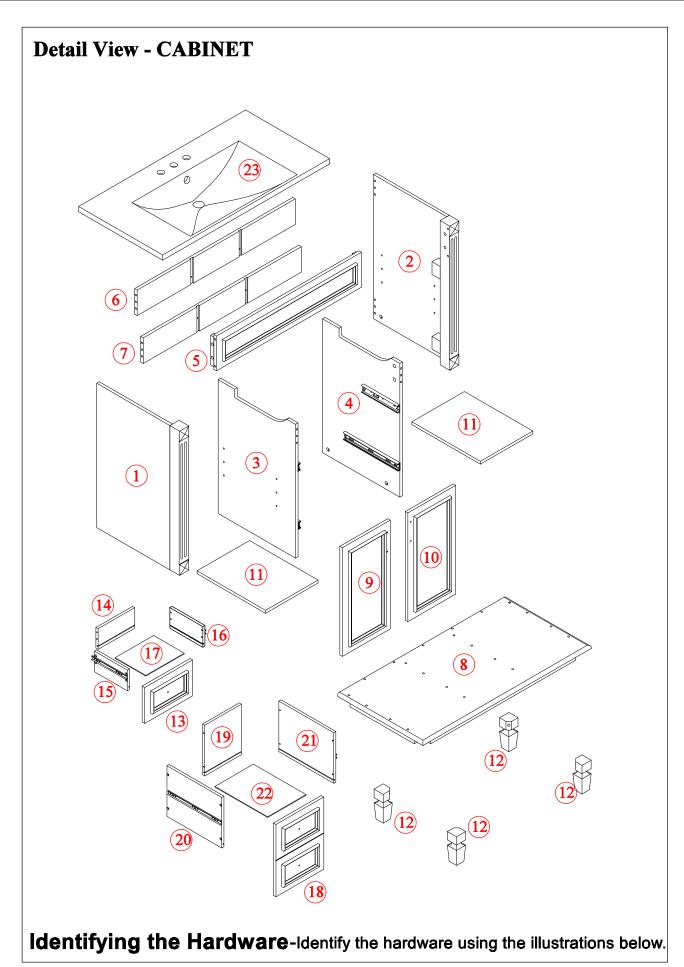


Part List - WF305078 2 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Mid Panel (R) - 1pc Mid Panel (L) - 1pc 5 6 Front Panel - 1pc Rear Panel Top - 1pc 8 7 Rear Panel Bottom - 1pc Frame Bottom - 1pc 10 9 Right Door - 1pc Left Door - 1pc 11 12 Foot - 4pcs Adjustable Shelf - 2pcs 13 14 Drawer Rear Top - 1pc Drawer Front Top - 1pc

Part List - WF305078

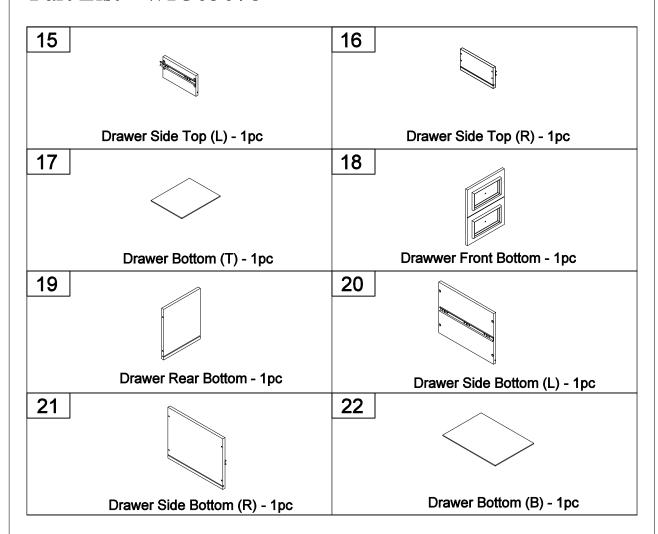



$Part\ List\ \textbf{-}\ WF305079\ (\text{if applicable})$

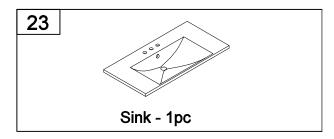



Hardware List - WF305078


Α		В		С	
	<u></u>		<u></u>		
ø13x1/4"x28mm		ø13x1/4"x40mm		ø1/4"x16x1mm	
Hex-Head bolts(4pcs)		Hex-Head bolts(4pcs)		Washer(8pcs)	
D		Е		F	
					E)mmmmm>
ø6x35mm		ø14.5x12mm		ø8xø4x25mm	
Three in one bolts(23pcs)		Three in one lock(23pcs)		Round head screw(4pcs)	
G		Н		I	6)
ø8xø4x32mm					
Round head screw(16pcs)		Handle (3pcs)		Handle (2pcs)	
J		K		L	
					216 P
ø5/32"x15mm			ø5/32"x32mm		7
Handle screw(4pcs)		Handle screw(3pcs)		Di	amping hinge (4pcs)
M		N		0	
(†)					9////
ø7xø3.5x15mm					ø8x30mm
Flat head screw(24pcs)		Laminate pad(8pcs)		Wood dowel(20pcs)	
Р		Q			
	4mm				
Allen key(1pc)		Anti fall hardware(1set)			

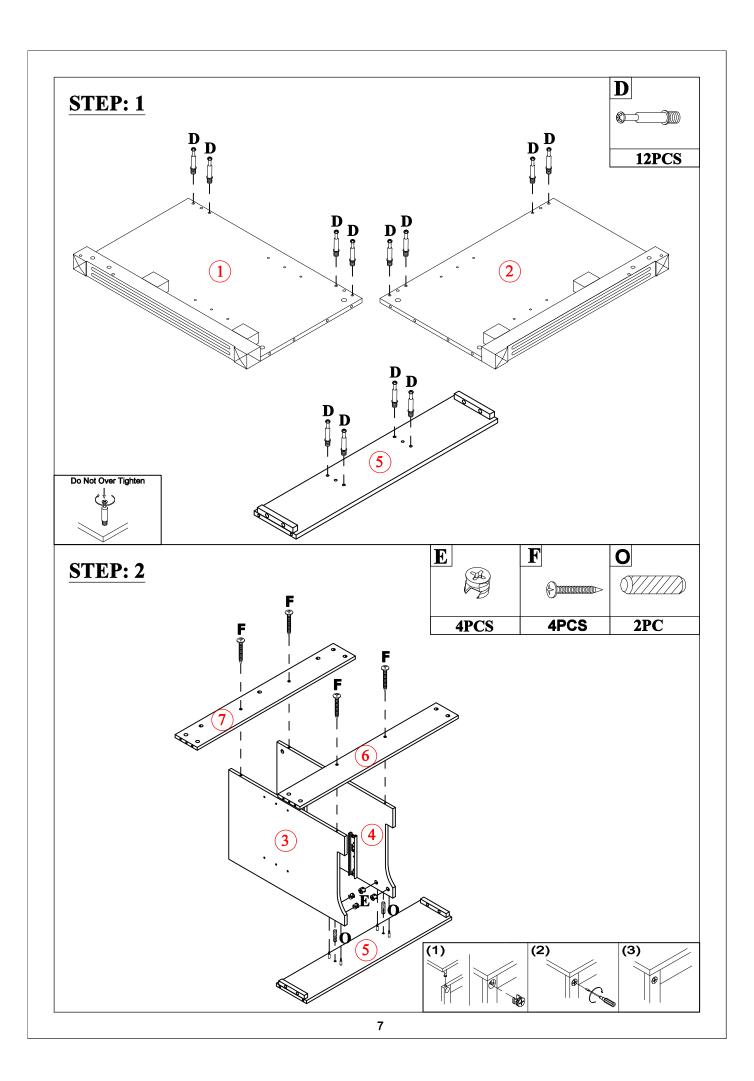


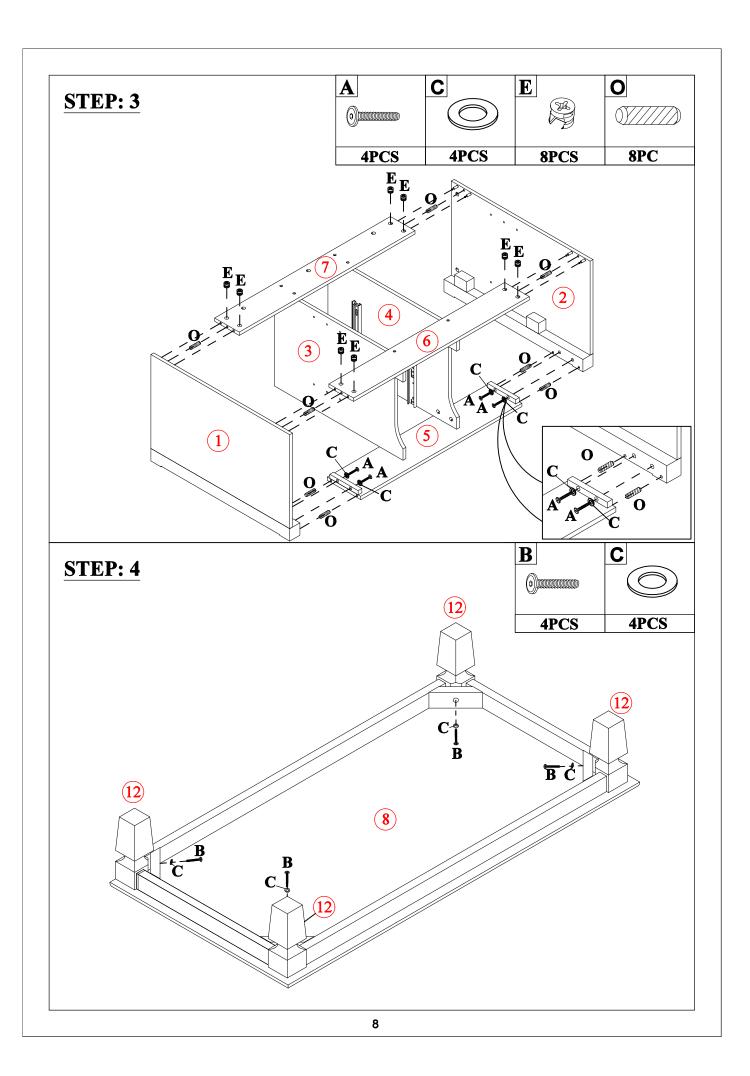


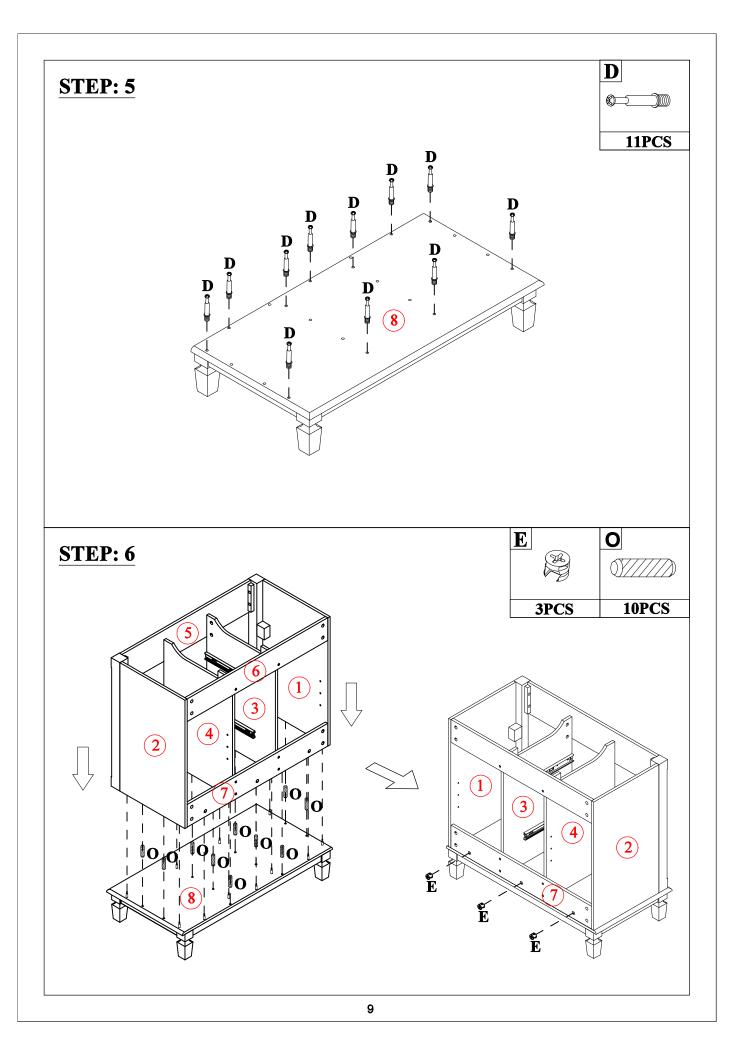

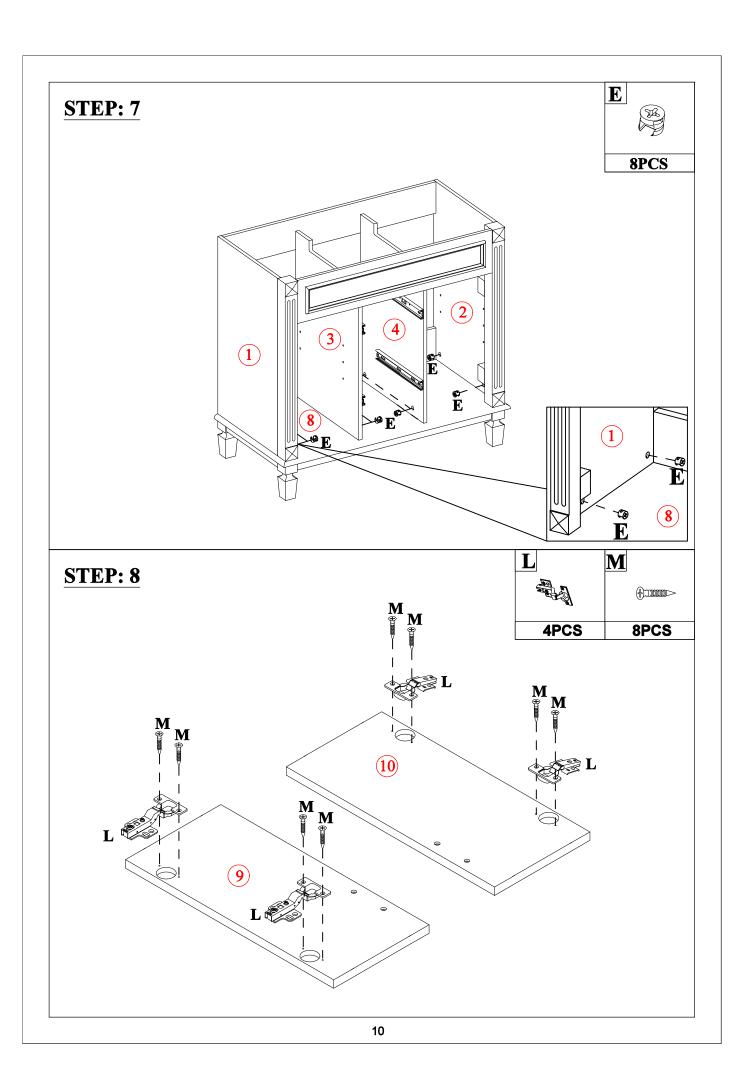

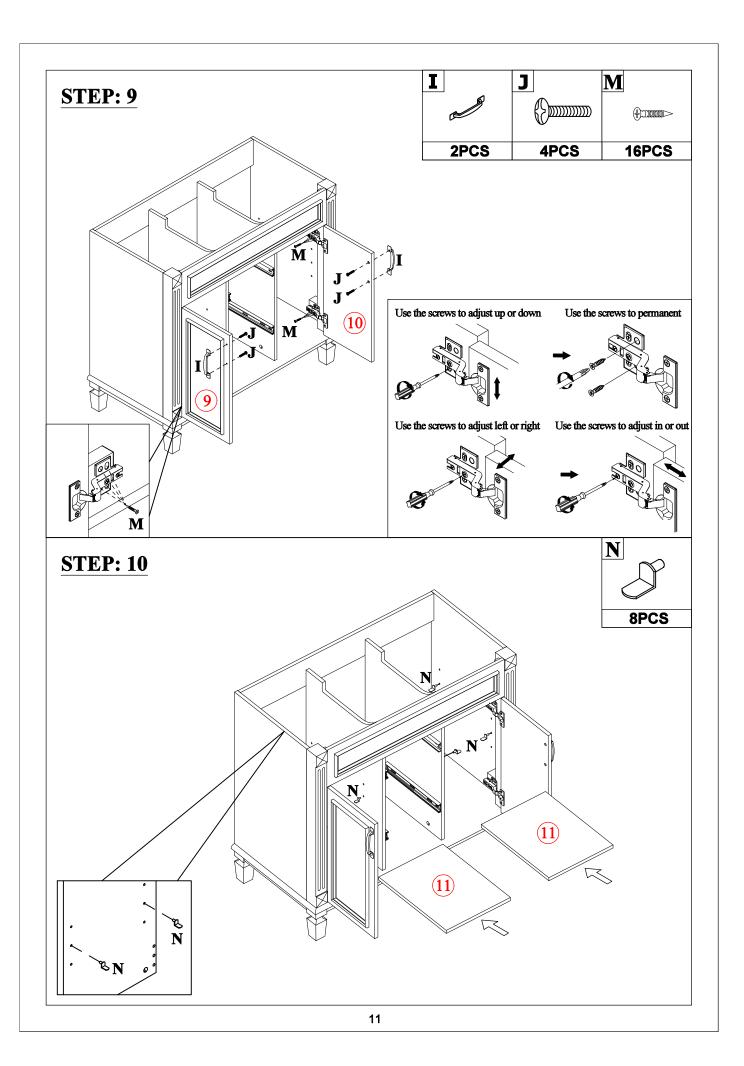


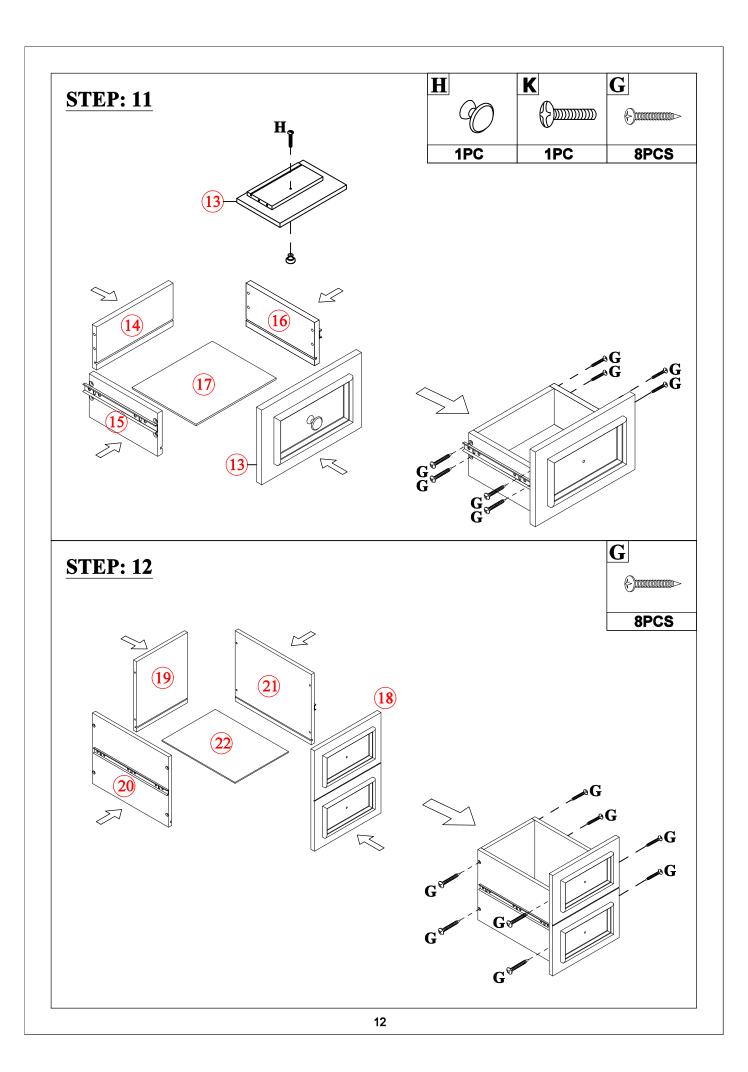

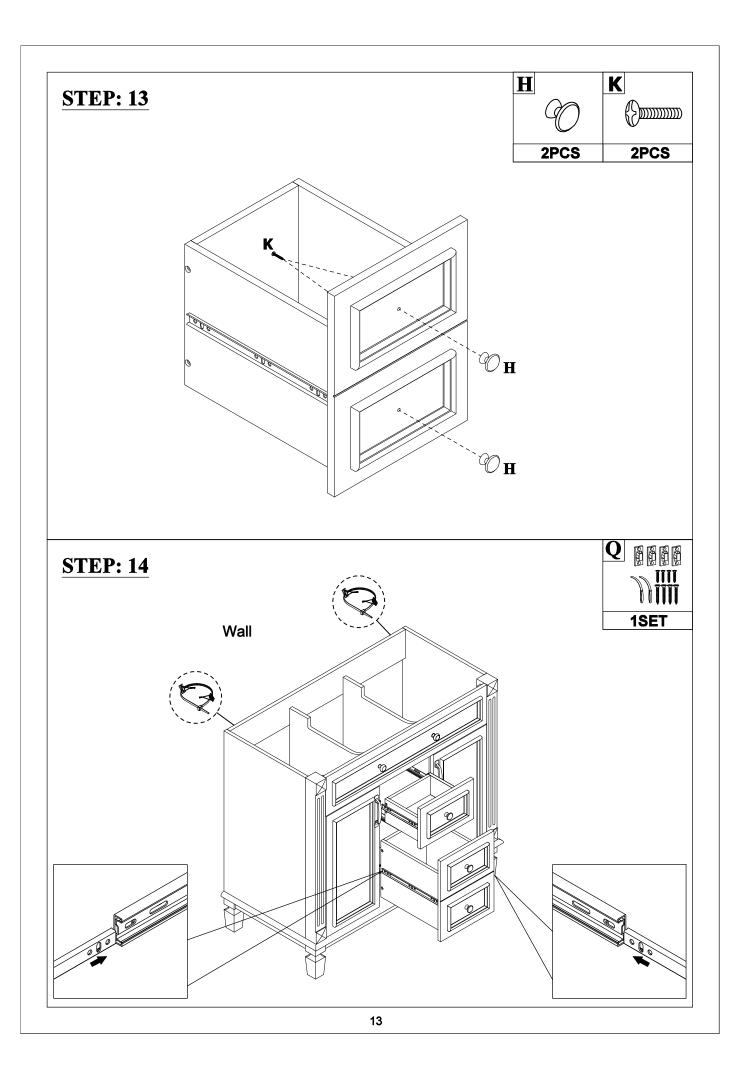


STEP: 15

Install the sink (if applicable) on the cabinet with glue. Let stand for 24 hours.

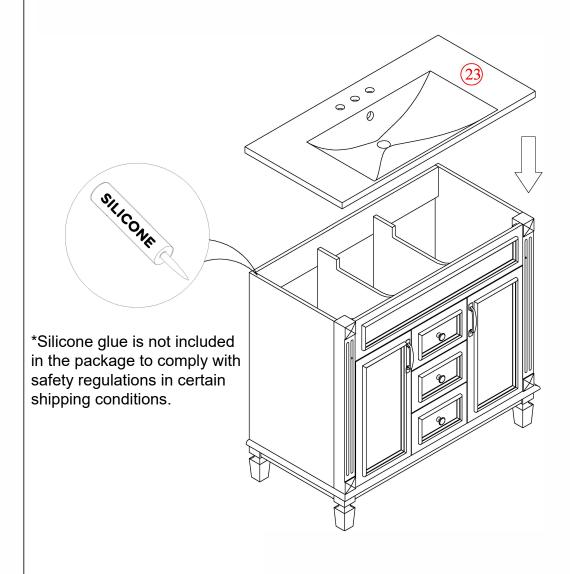


STEP: 17

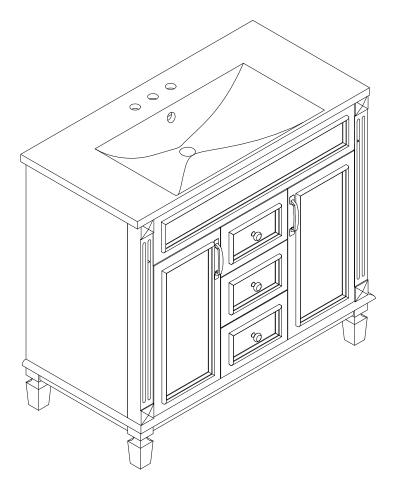




HINGE ADJUSTMENTS

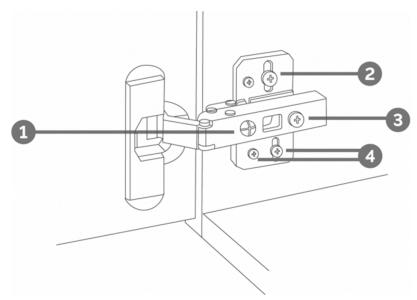

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

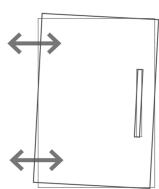

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up
anticlockwise to move the door down

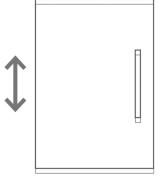


3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw


clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

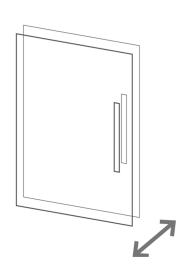

ASSEMBLY INSTRUCTIONS

36" BATHROOM CABINET

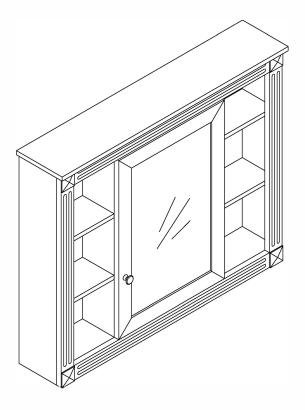

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



- * Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! * Please assemble on a clean soft
- * Please assemble on a clean soft surface to avoid damage.













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will
 make the assembly easier, and will help eliminate damage to the product or injury to persons during
 assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

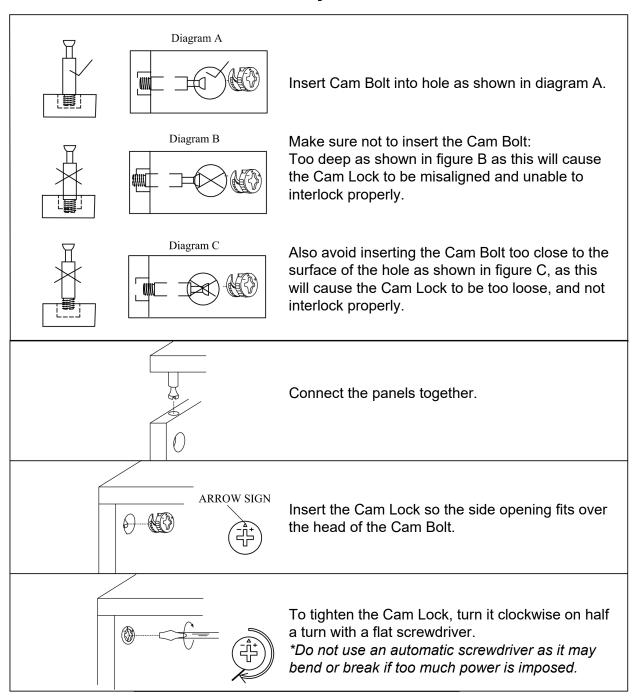

Detail View - CABINET

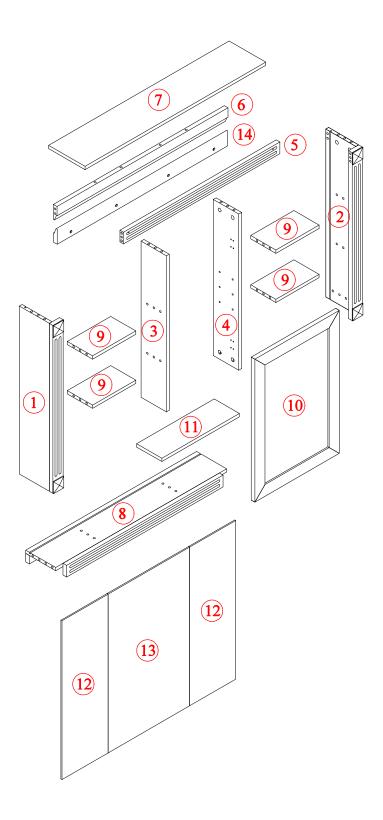



Identifying the Hardware-Identify the hardware using the illustrations below.


Part List - WF305081 2 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Mid Panel (R) - 1pc Mid Panel (L) - 1pc 5 6 Front Bar Top - 1pc Front Bar Rear - 1pc 7 8 Top Panel - 1pc Bottom Panel - 1pc 10 9 Side Panel (L-R) - 4pcs Door - 1pc 11 12 Back Panel (L-R) - 2pcs Adjustable Shelf - 1pc 13 14 Back Panel (M) - 1pc Connect Bar - 1pc


Hardware List - WF305081


Α	B	С	
		()	
ø6x35mm	ø14.5x12mm	ø10xø5x50mm	
Three in one bolts(40pcs)	Three in one lock(40pcs)	Flat head screw - 4pcs	
D	E	F	
	0	(S)	
ø12x55mm		ø5/32"x25mm	
Plastic stopper - 4pcs	Handle (1pc)	Handle screw(1pc)	
G	H	I	
	ø7xø3.5x15mm		
Damping hinge (2pcs)	Flat head screw(12pcs)	Laminate pad(4pcs)	
J	K		
OY////D)			
ø8x30mm			
Wood dowel(30pcs)	Round head screw(4pcs)		

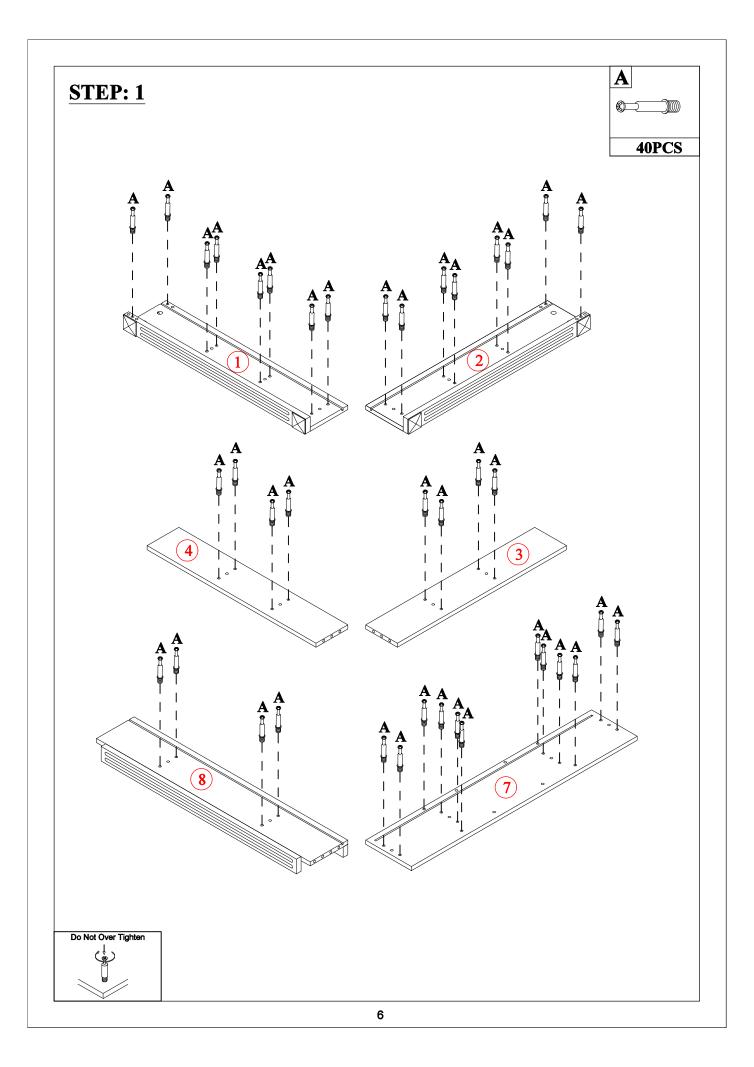


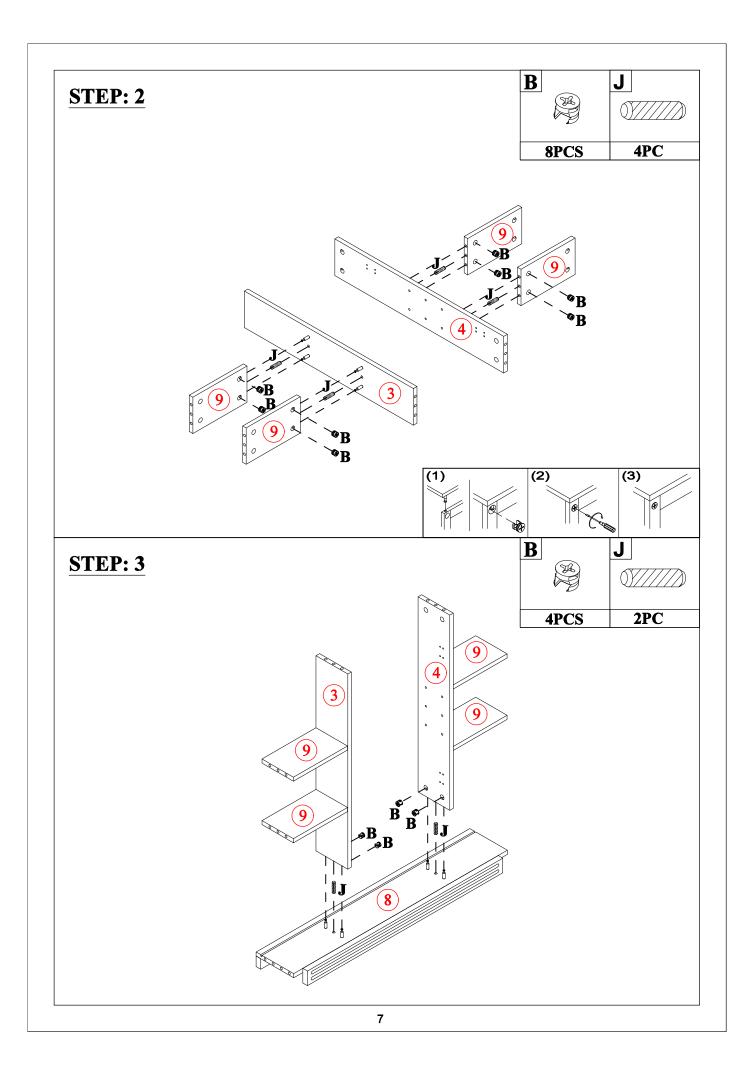


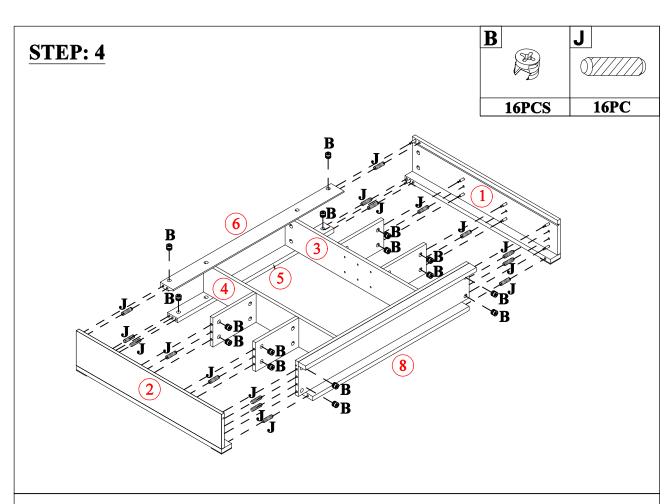

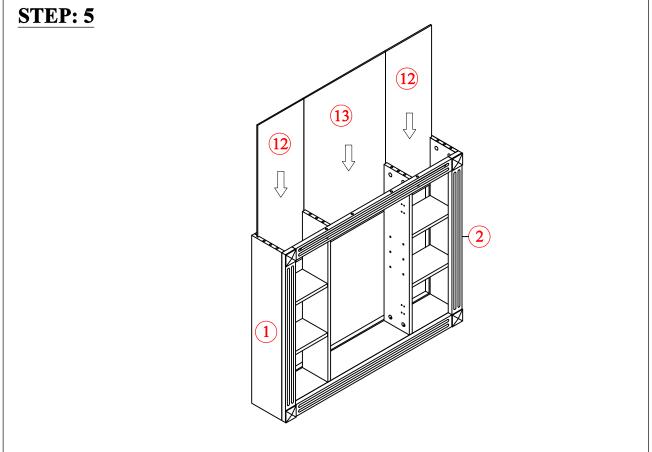

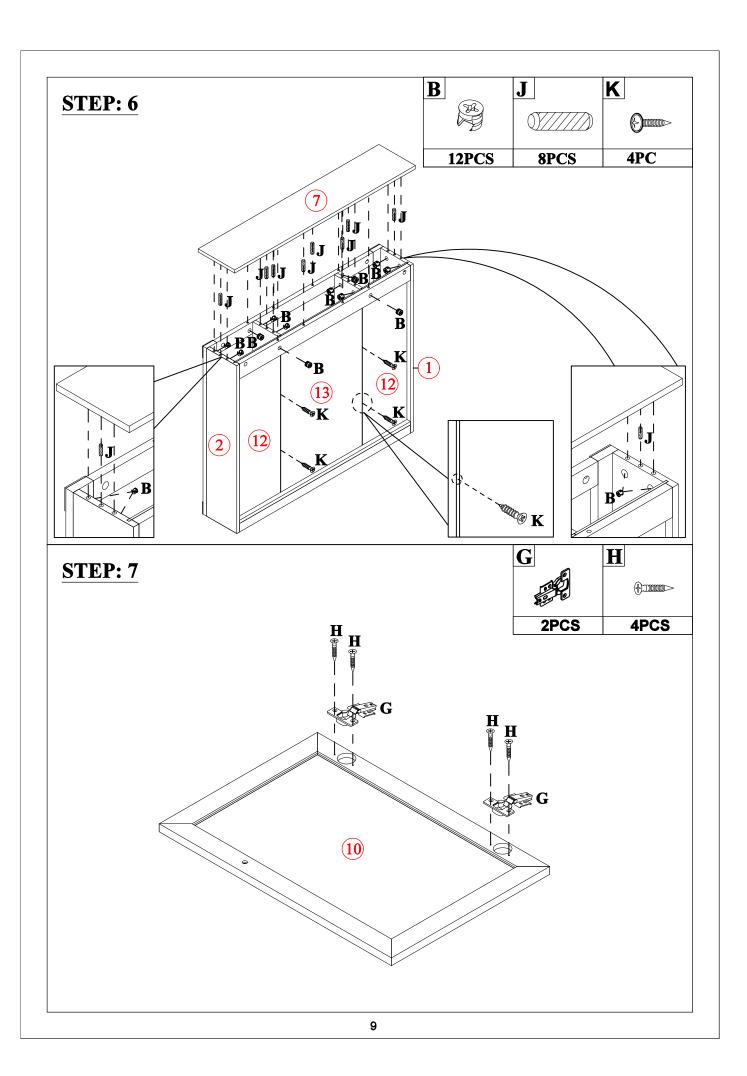


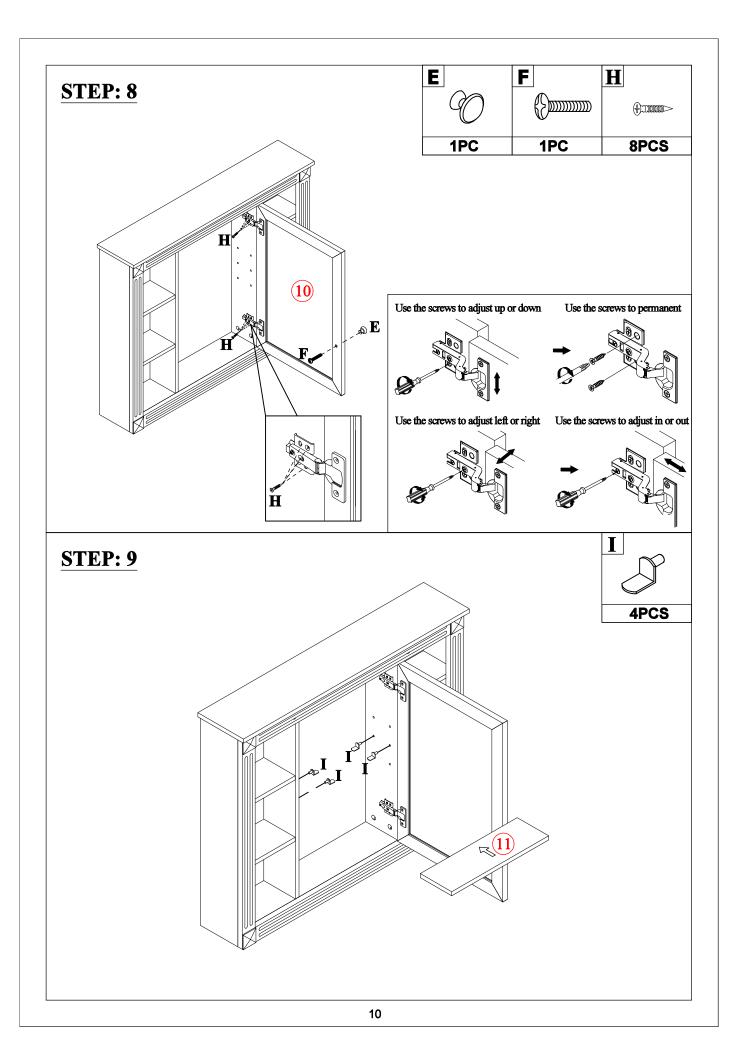

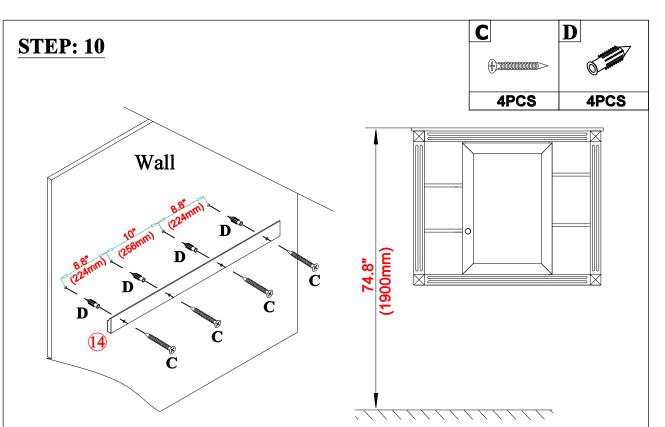


Draw the spacing between the walls and the No.14, punch holes in the wall, and fix the No.14 to the wall with screws.

Note: Appropriate distance from the top of mirror to the ground is 74.8".

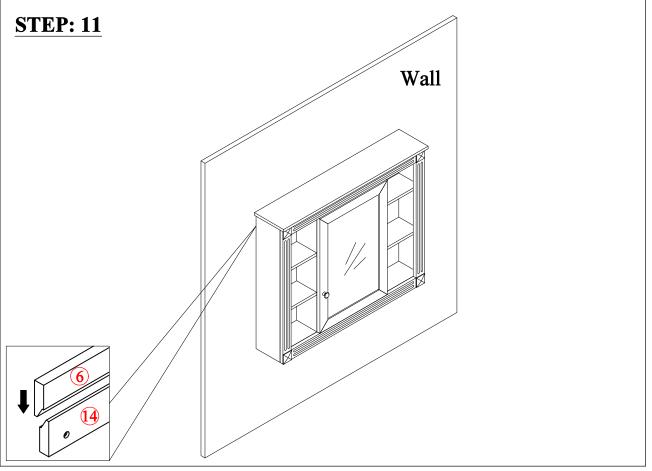


STEP: 12

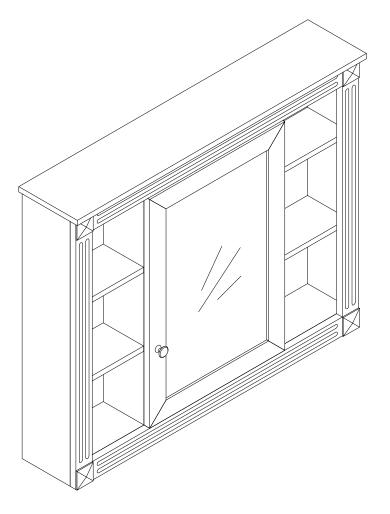




HINGE ADJUSTMENTS

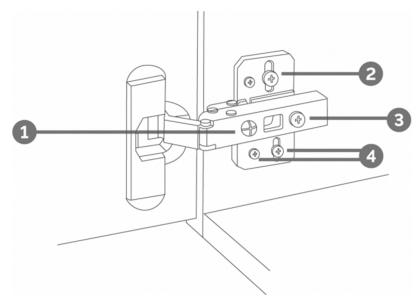

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

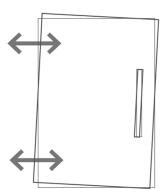

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up
anticlockwise to move the door down

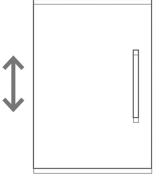

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

