 
 
 
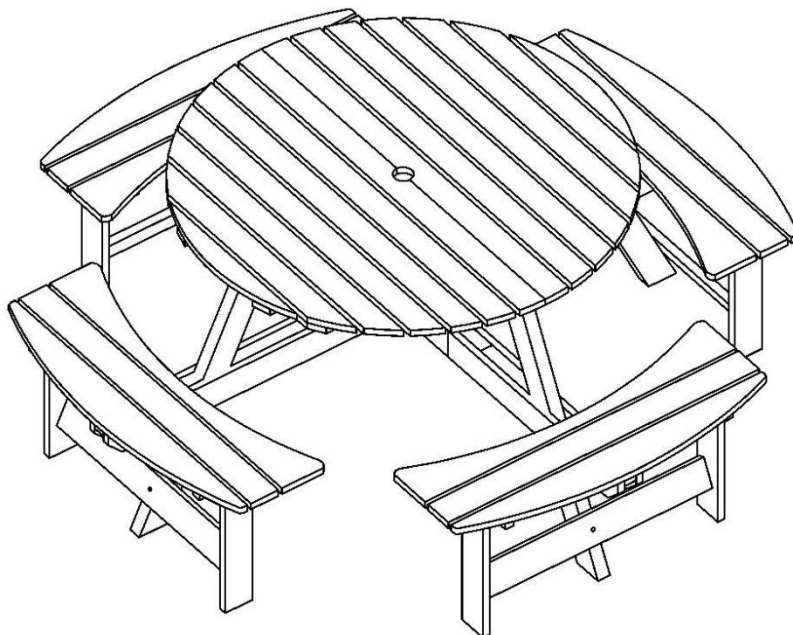 
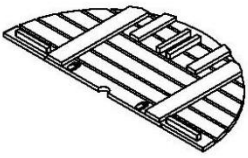 
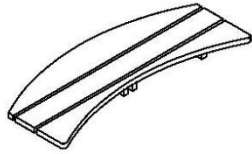 
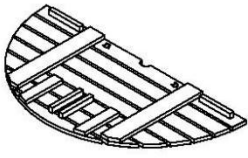 


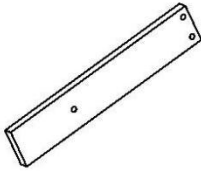 


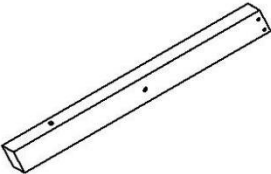

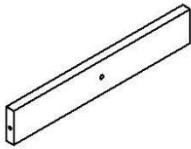 



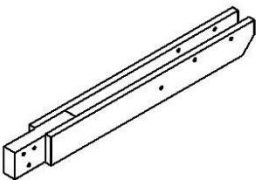 



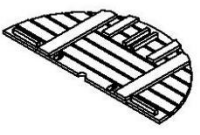 
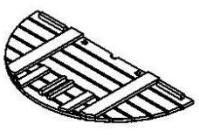 


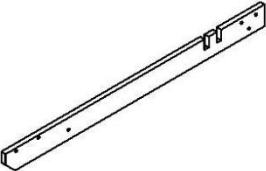
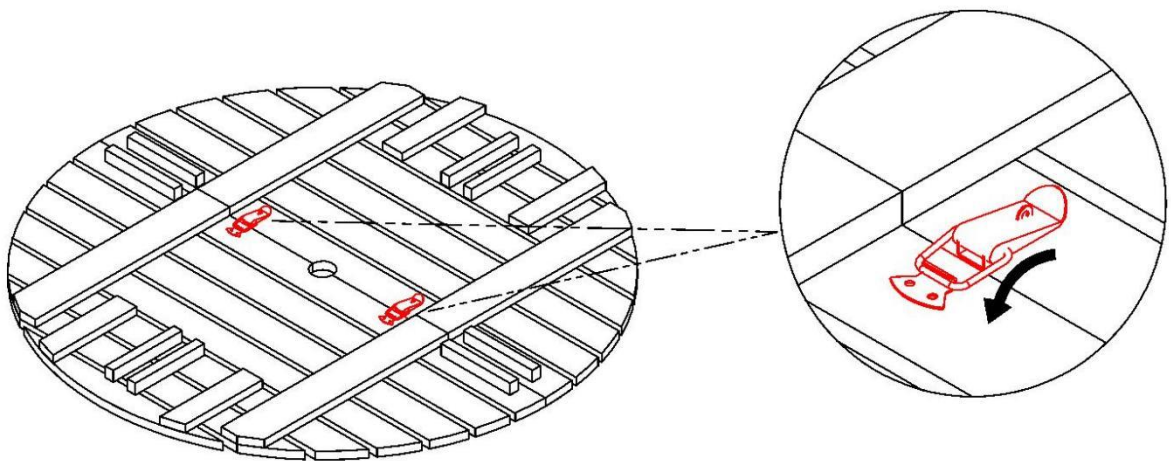 
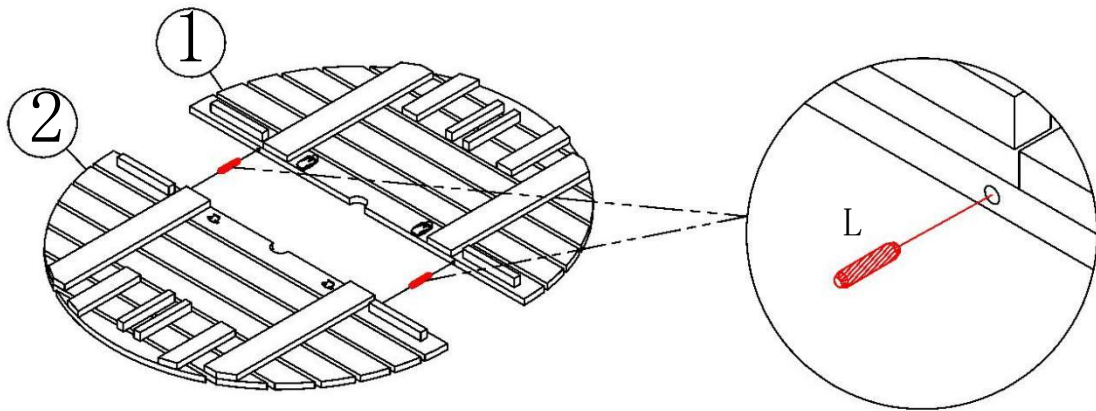 
ITEM#DX-004  
Outdoor Picnic Table Instruction  
Manual  
(8-Person)



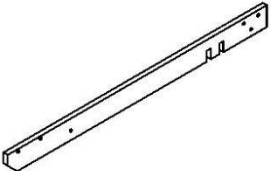 






①		1PC	⑦		4PC
②		1PC	⑧		8PC
③		4PC	⑨		4PC
			A		26PC
			B		28PC
④		2PC	C		10PC
			D		26PC
			E		26PC
			F		52PC
⑤		2PC	G		28PC
			H		28PC
			I		1PC
⑥		2PC	J		1PC
			K		1PC
			L		2PC

 
 
1

①	②	L
		
1PC	1PC	2PC



 
 
# 2

③	A	E	F	D	J	I
						
4PC	8PC	8PC	16PC	8PC	1PC	1PC

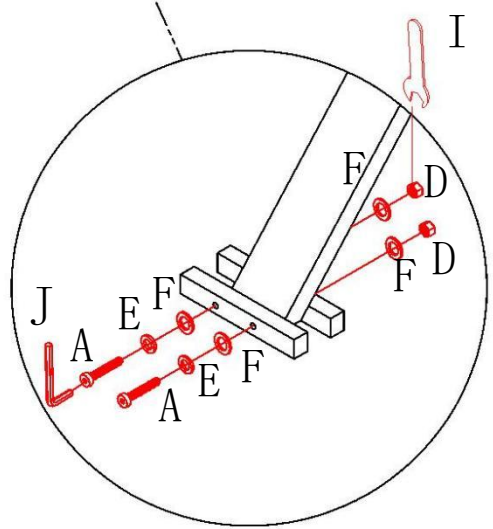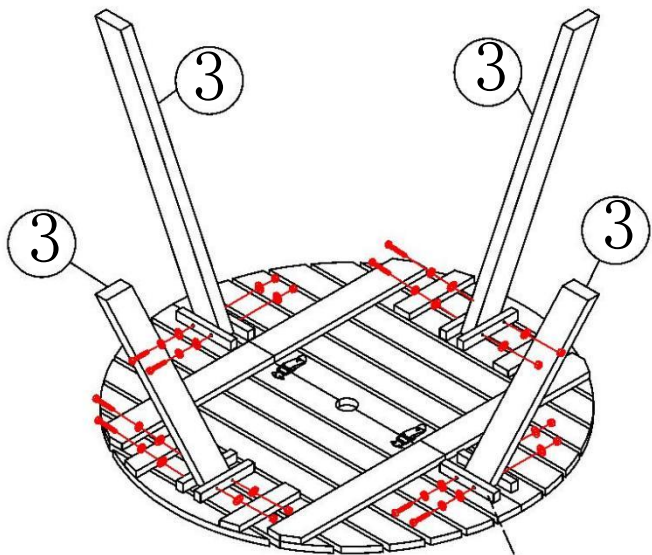





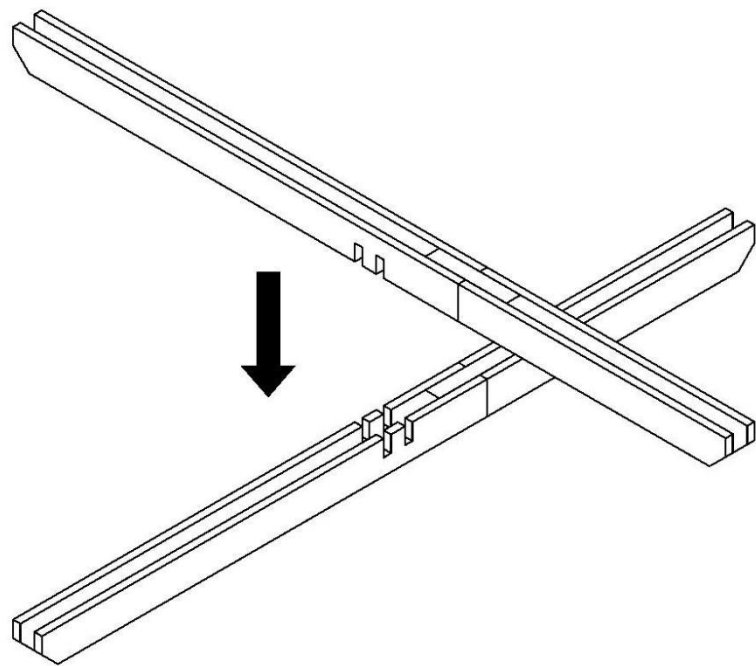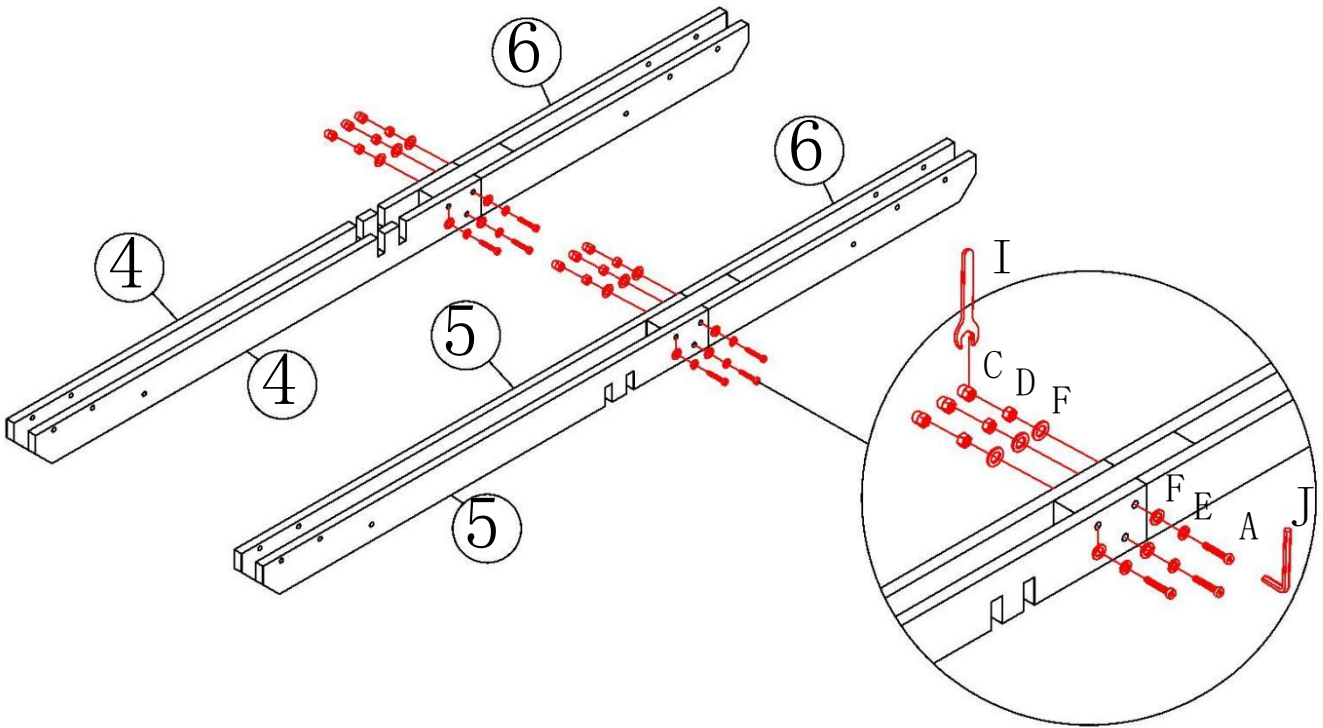


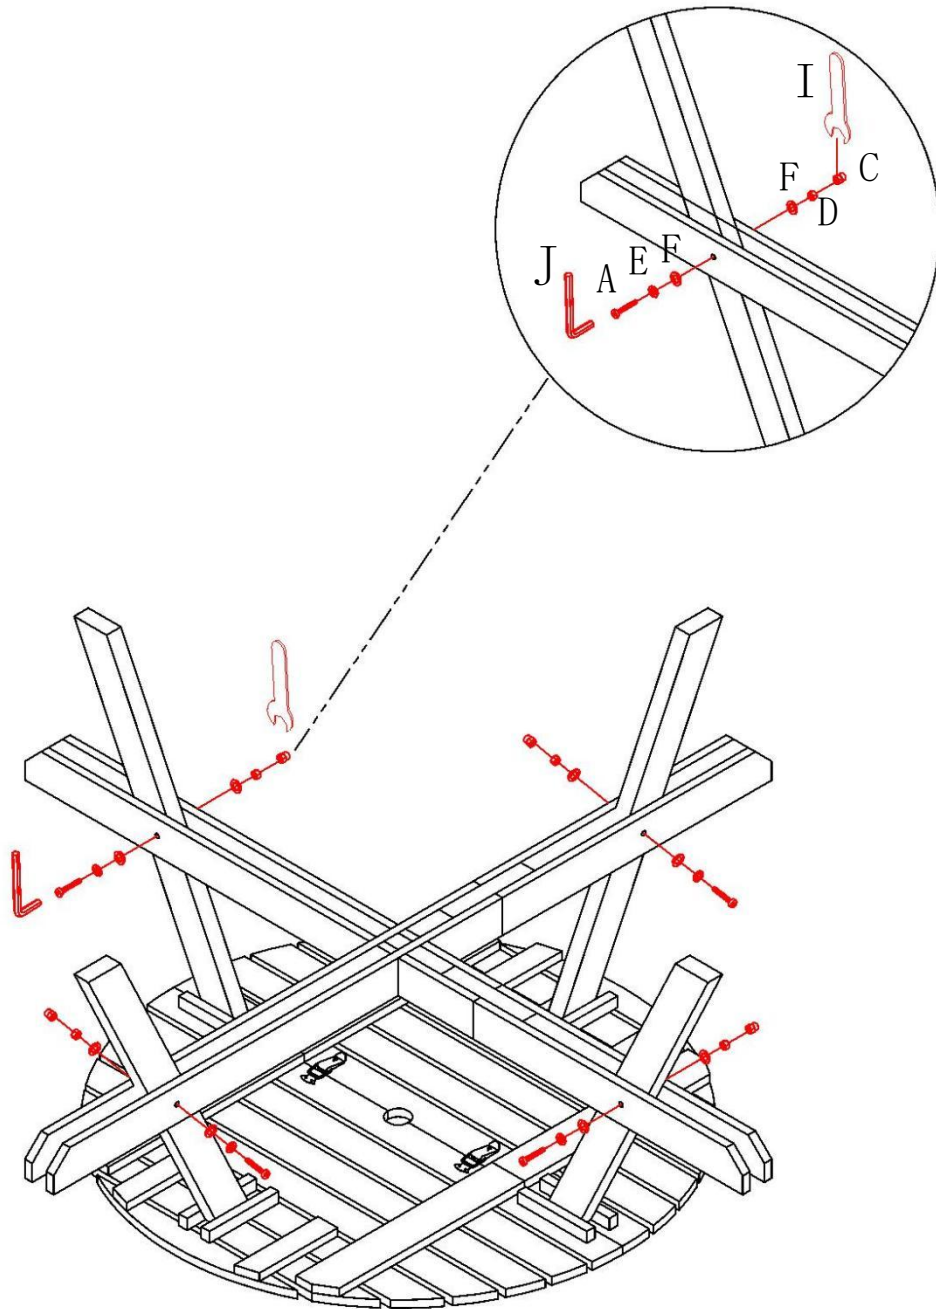 
3

④	⑤	⑥	A	E	F	D	C	J	I
2PC	2PC	2PC	6PC	6PC	12PC	6PC	6PC	1PC	1PC



 
 
 




# 4

 
 
A	E	F	D	C	J	I
						
4PC	4PC	8PC	4PC	4PC	1PC	1PC



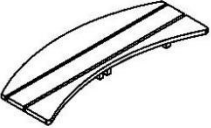





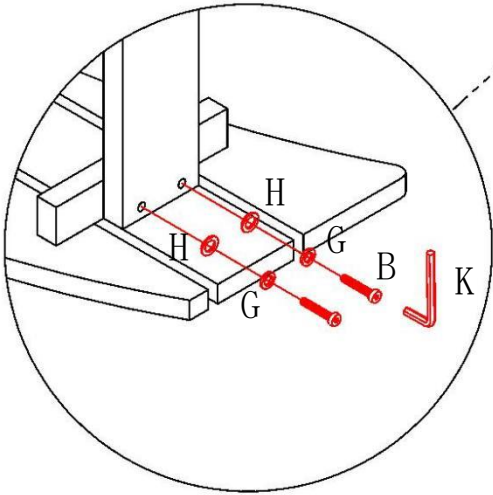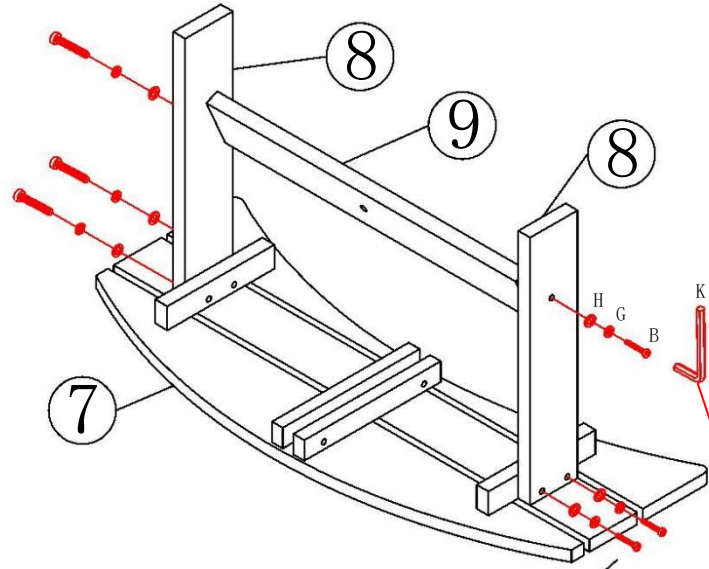

# 5

 
 
⑦	⑧	⑨	B	G	H	K
						
4PC	8PC	4PC	24PC	24PC	24PC	1PC



Note: Do not tighten the side plate (8) and side plate (9) screws completely. Wait until step 7 is completed before tightening. Prevent the board (9) holes from not fitting properly.



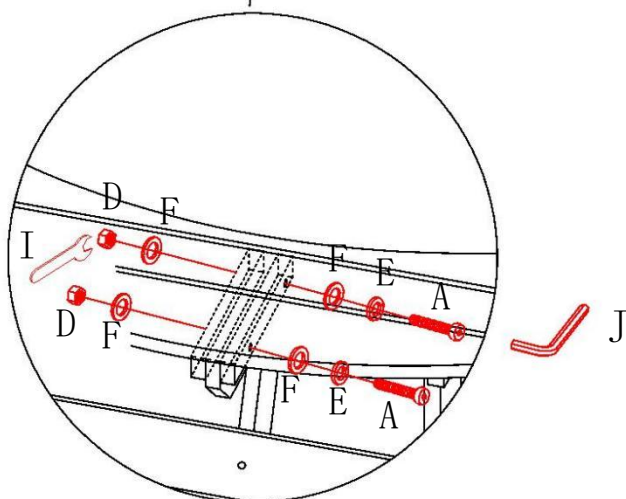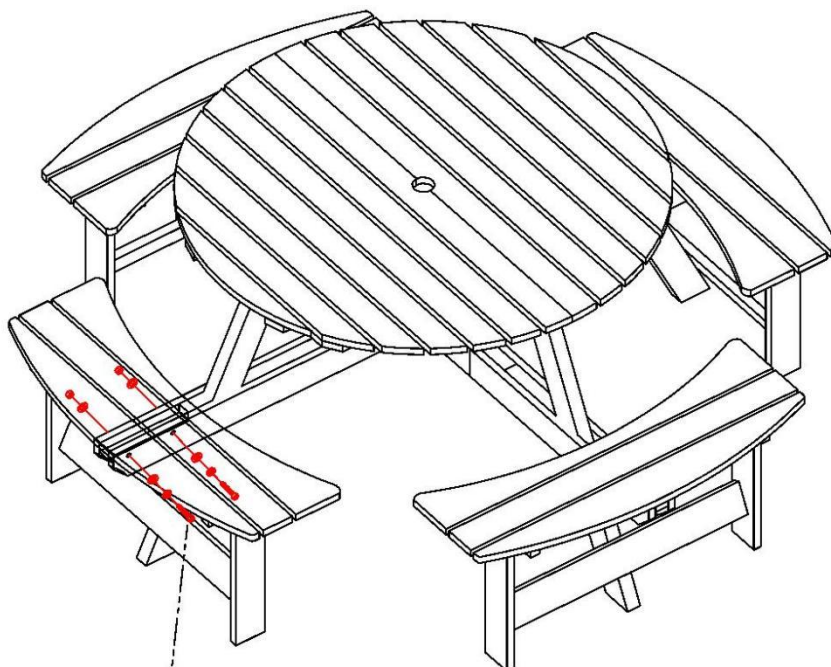

# 6

A	E	F	D	J	I
					
8PC	8PC	16PC	8PC	1PC	1PC





7

B	G	H	K
			
4PC	4PC	4PC	1PC

