



ASSEMBLY INSTRUCTIONS

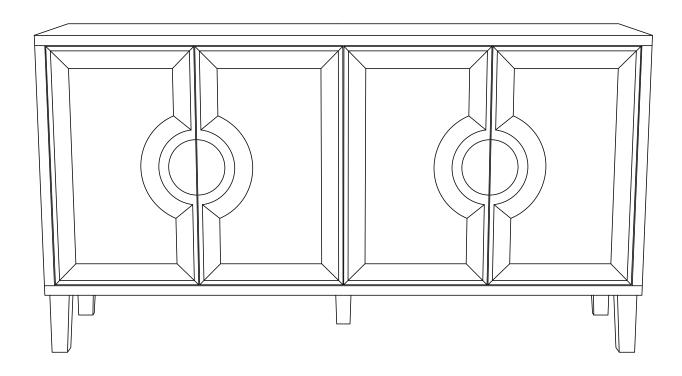


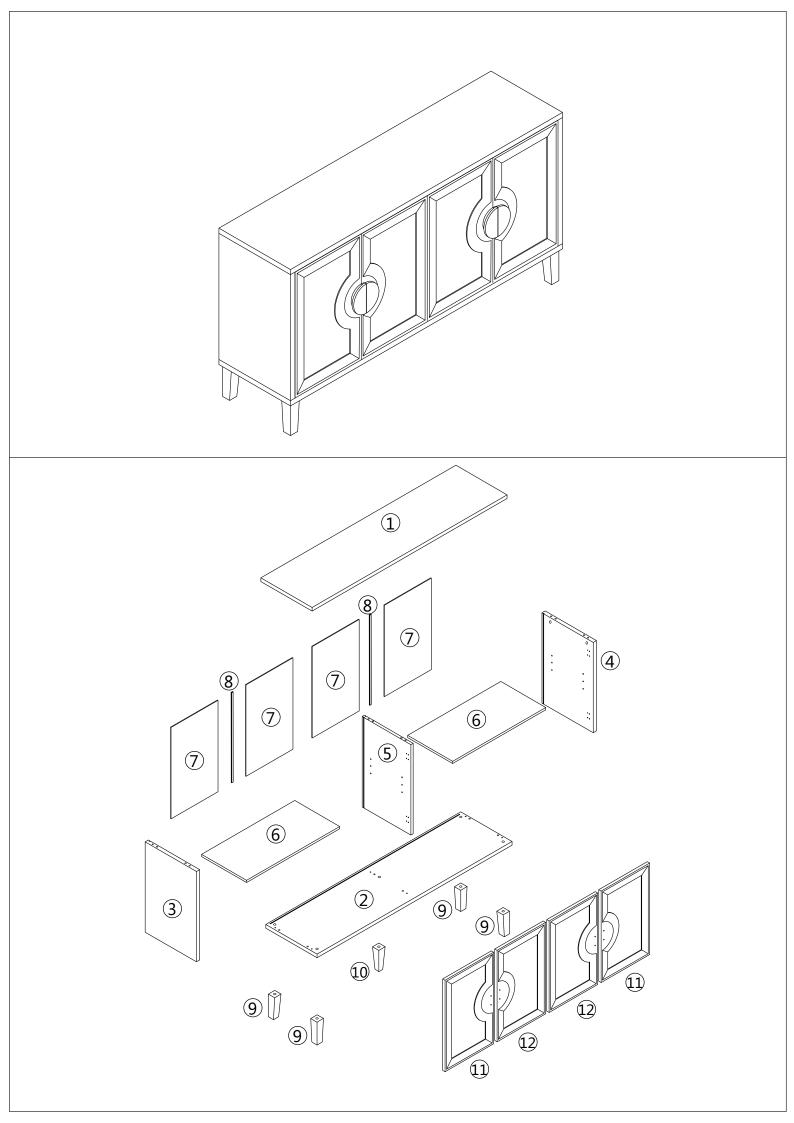


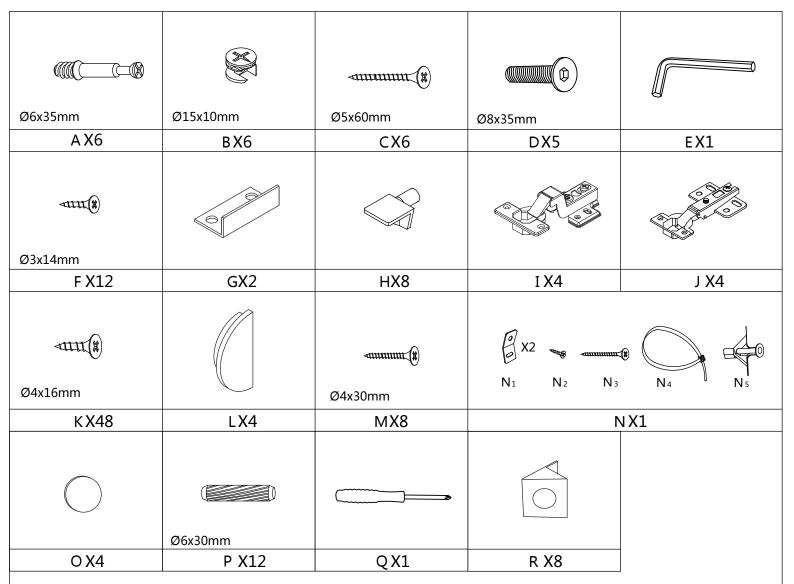


STEP 1

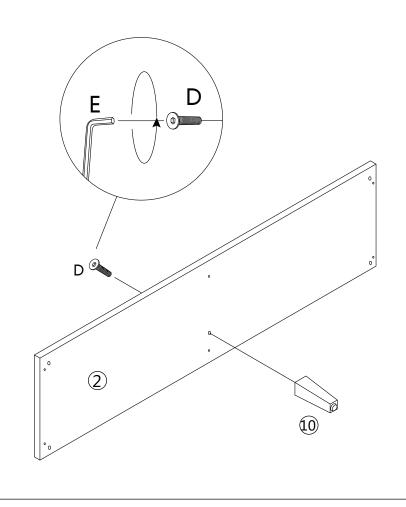


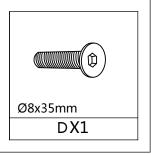

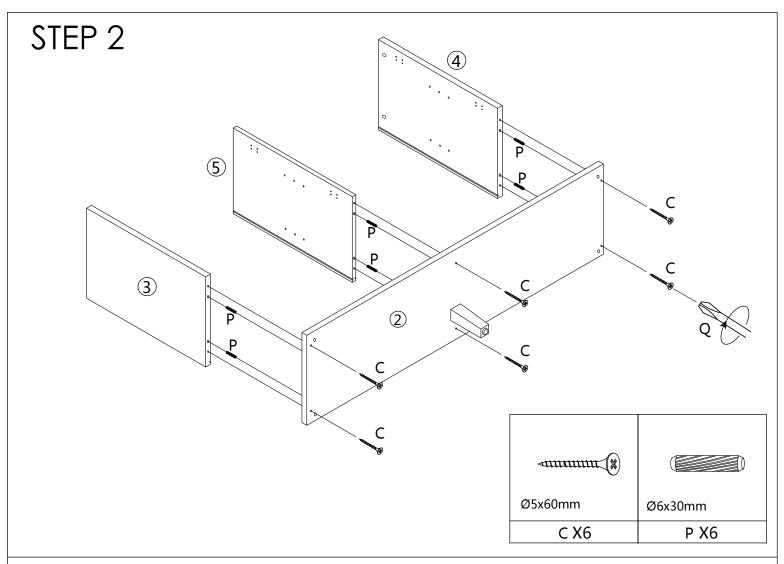


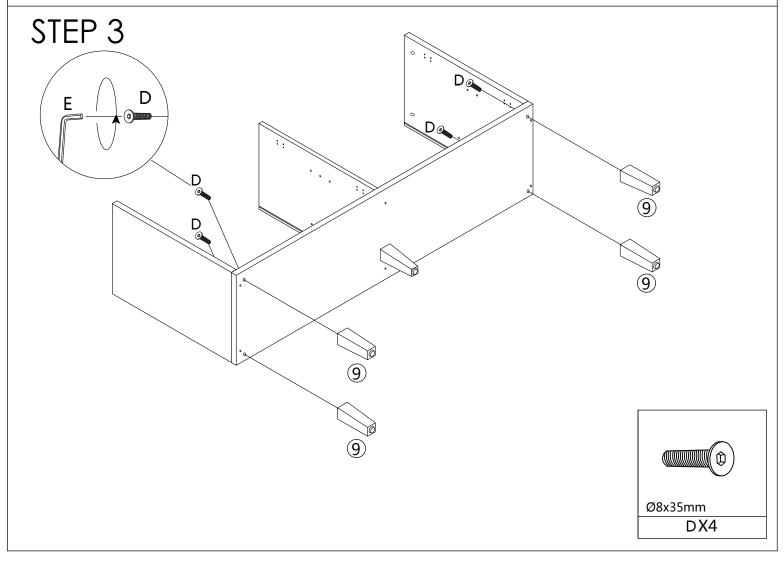


STEP 4

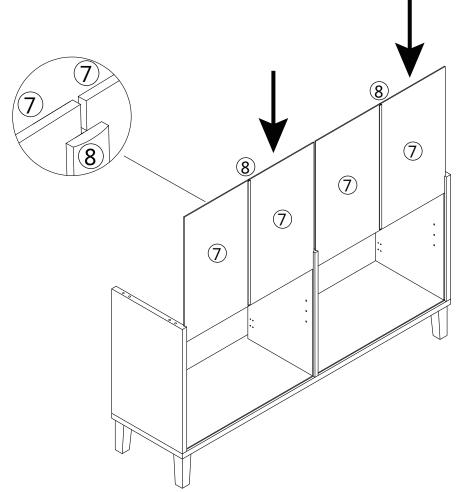


STEP 5

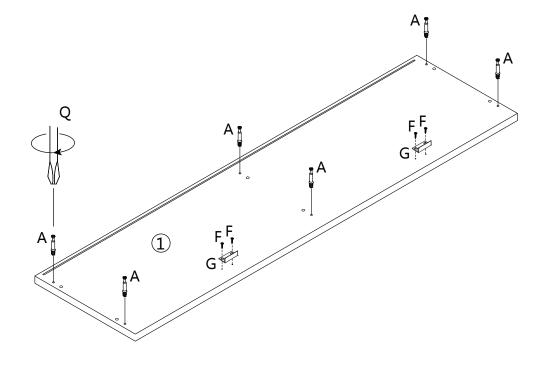

	₹1111(%)	
Ø6x35mm	Ø3x14mm	
A X6	F X4	GX2

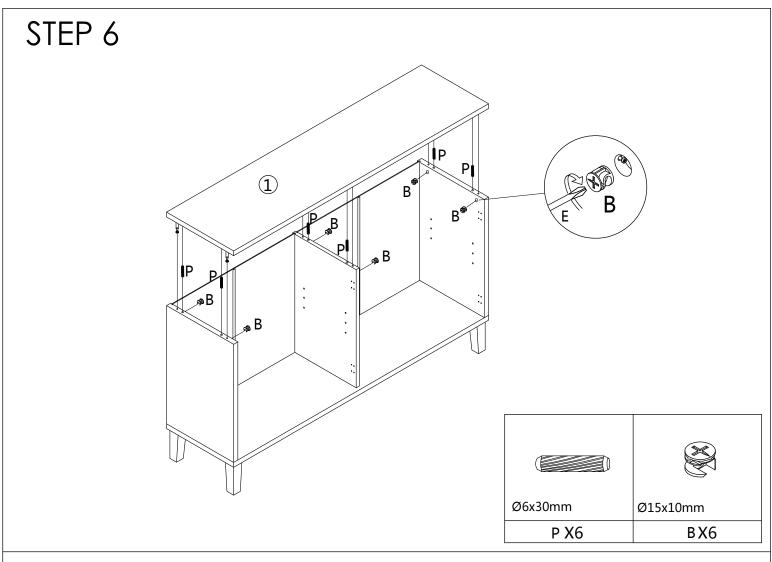

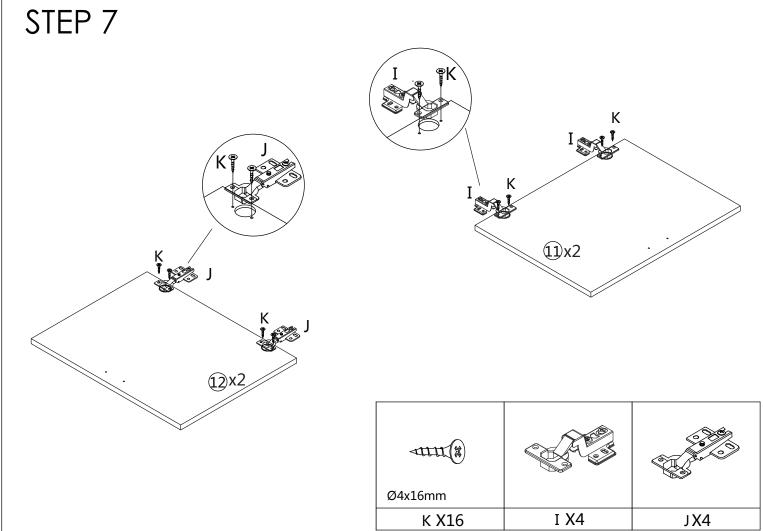


STEP 8 11 x2 12 x2 **₹11111111111** Ø4x30mm LX4 MX8 STEP 9 11 12


₹1111(**)


K X32

Ø4x16mm

O X4

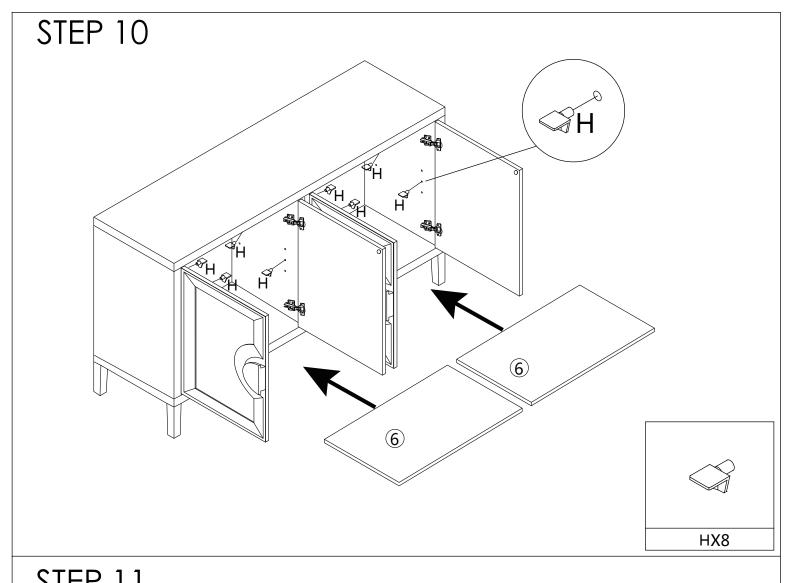

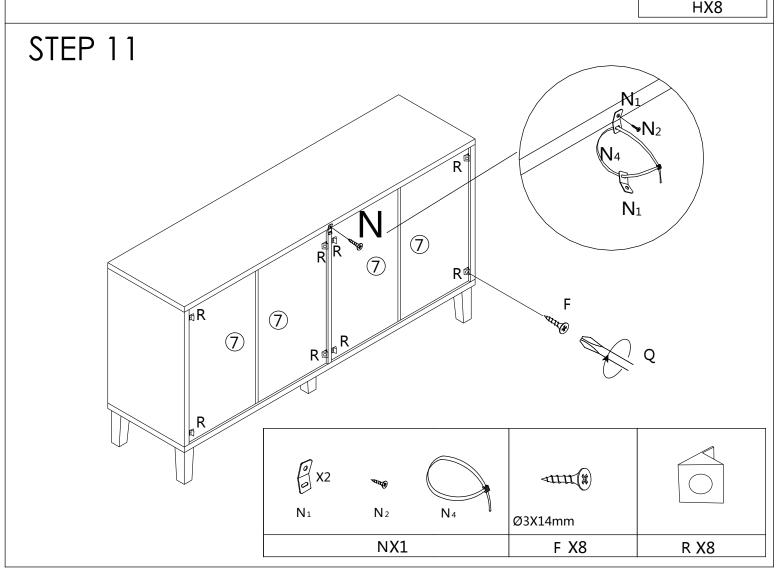

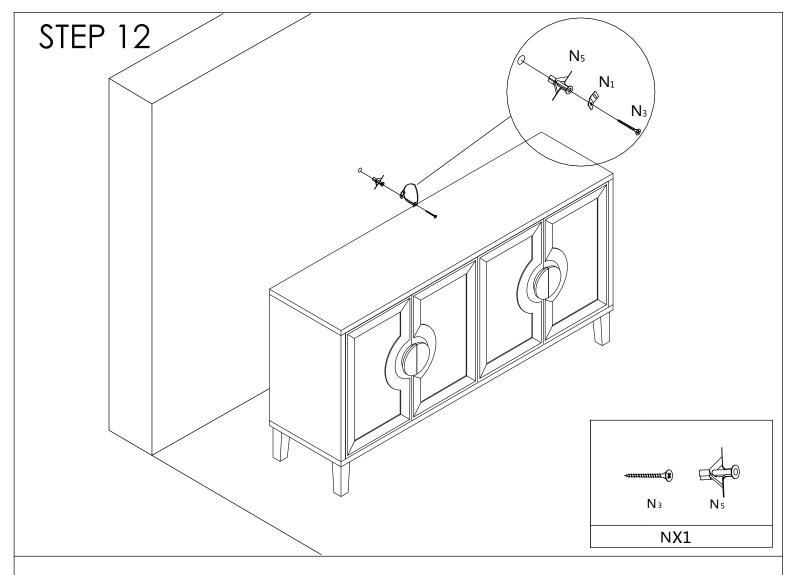


Assembly Steps(EN) / Montageschritte(DE)

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.


STEP 1

Open the door.

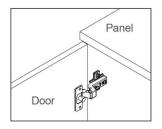

STEP 2

 Adjust the door panelsupward or downward



Unscrew 2 screws in round holes loosen 2 screws in oval holes a bit.



Tighten 2 screws in oval holes. Screw in 2 screws in round holes

STEP 3

 
Adjust the flush between door panel and side panel



MOVE DOOR OUTWARD by turning this screw counter-clockwise




KEEP DOOR IN RIGHT **POSITION**




MOVE DOOR OUTWARD by turning this screw clockwise

STEP 4

 
Adjust the Gap beteen door panel and side panel



Loosen this screw a bit.

 

MOVE DOOR BACK OR FORTH

 

Re-tighten this screw.