
Item NO.:BV C04724 / C04730 / C04736

Hardware

NO.	Draw	QTY	NO.	Draw	QTY
Α	Screws Ø4x14mm	44	I	Hinges	4
В	€	17			
С	€∭) Two-in-one connector	17	J		2
D	Wood plug	4		Handles	_
Е	وسوت Plastic anchor(Ø10mm)	4	K	Screws M4x20mm	4
F	O •3	4	L	Anti-collision gasket	4
G	Bracket (53x70x44mm)	2	М	Screwdriver	1
Н	Bracket (19x19x35mm)	2			

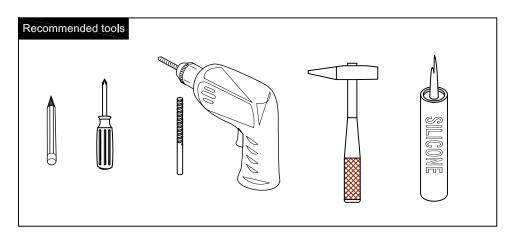

Dimensions Top View -605mm 755mm 905mm [23 13/16"] [29 3/4"] [35 5/8"] 14mm [9/16″]**7** [17 11/16] [18 3/16"] Front View **Back View**

CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft , dry cloth.
- 2. Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4. The sink top is resilient, but care needs to be taken to preserve its appearance.
- 5.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

