
# **Kitchen Islands Carts**

Assembly Instructions - Please keep for future reference

WF297003

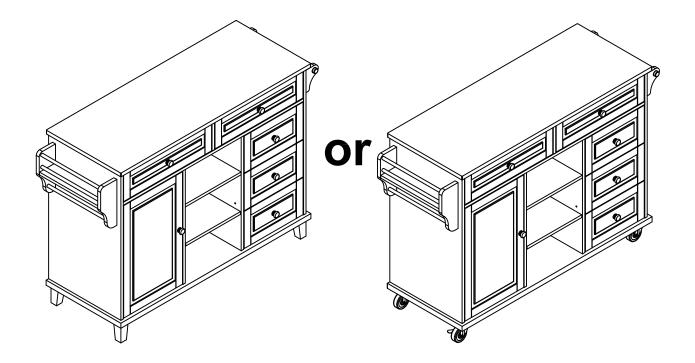

#### Dimensions

Width-46 inch

Depth-18 inch

Height-36.25 inch

Important – Please read these instructions fully before starting assembly

#### Safety and Care Advice

#### Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

#### Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

#### **Handy Hints**

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure That all bolts and fittings are tightend properly.

#### WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable) Do not allow children to climb or hang on the furniture Do not open more than one drawer at a time Do not place heavy items in the top drawers Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type

 
# **Components - Fittings**

#### Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

A	B	C	D A
Dowel x43	Cam Bolt x44	Cam lock x24	Male Camlock x20
E	F	G 🕜	(H)
4*50mm Screw x15	4*35mm Screw x25	Handle x6	4*18mm Bolt x6
	J	K E	L 🖋
Door Hinge x2	3.5*14mm Screw x12	Drawer slide 14" x10	3.0*12mm Screw x60
	(N)	0	P
Shelf Support Pin x8	6*32mm Bolt x8	6*90mm Bolt x6	Flat Washer x6
	R	S C	T
Lock Washer x6	Allen Key x1	Locking Caster x2	Caster x3
6*15mm Bolt x20			

#### **Tools required**




Phillips screwdriver (medium & large)

#### Ruler - Use this ruler to help correctly identify the screws

5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

The screws length is measured from the head to the point (35mm screw shown).

#### **Using Camlocks**

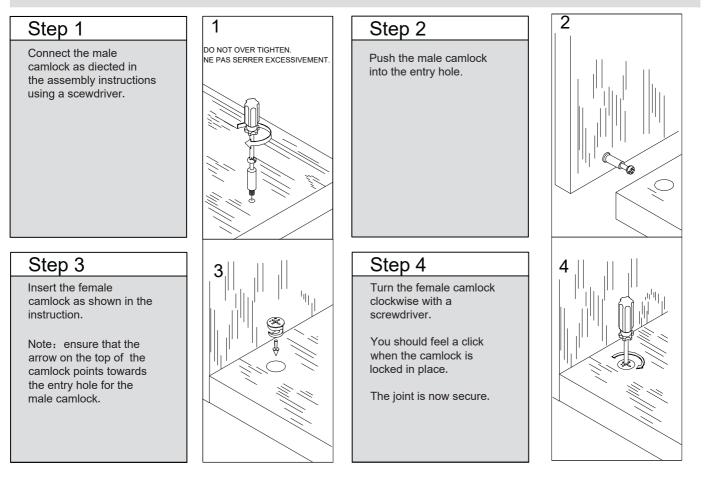

#### **Adjusting Hinges**


#### Hinge adjustment:


a: To move the top panel up or down, loosen screws shown and move top panel to suit

 
b.To move the top panel in or out, loosen screws shown and move top panel to suit.

Retighten screws

C:To move the top panel left or right, adjust screws shown.

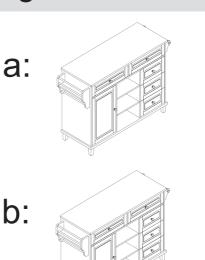


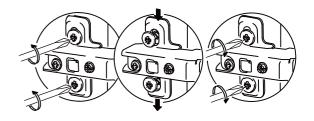







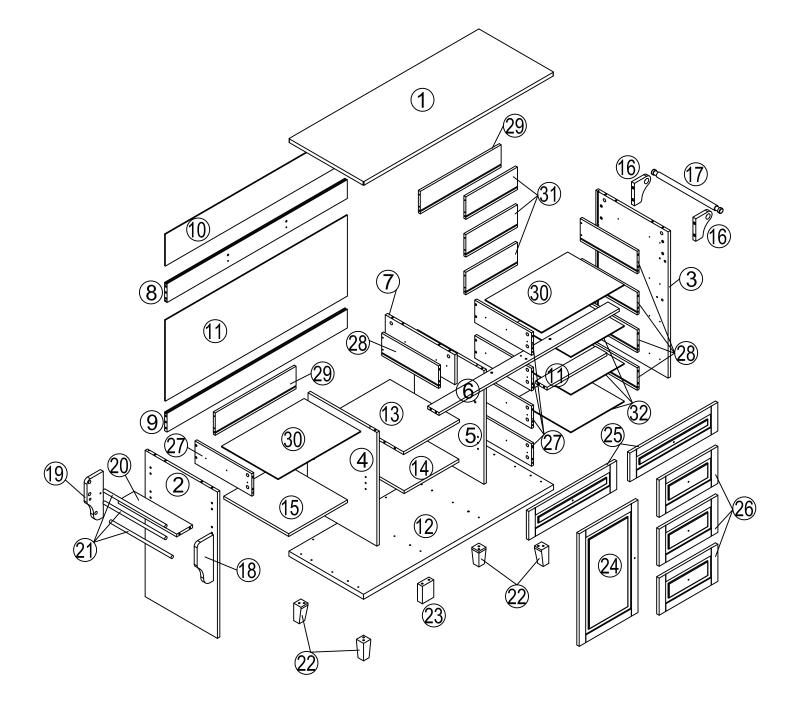

4

