

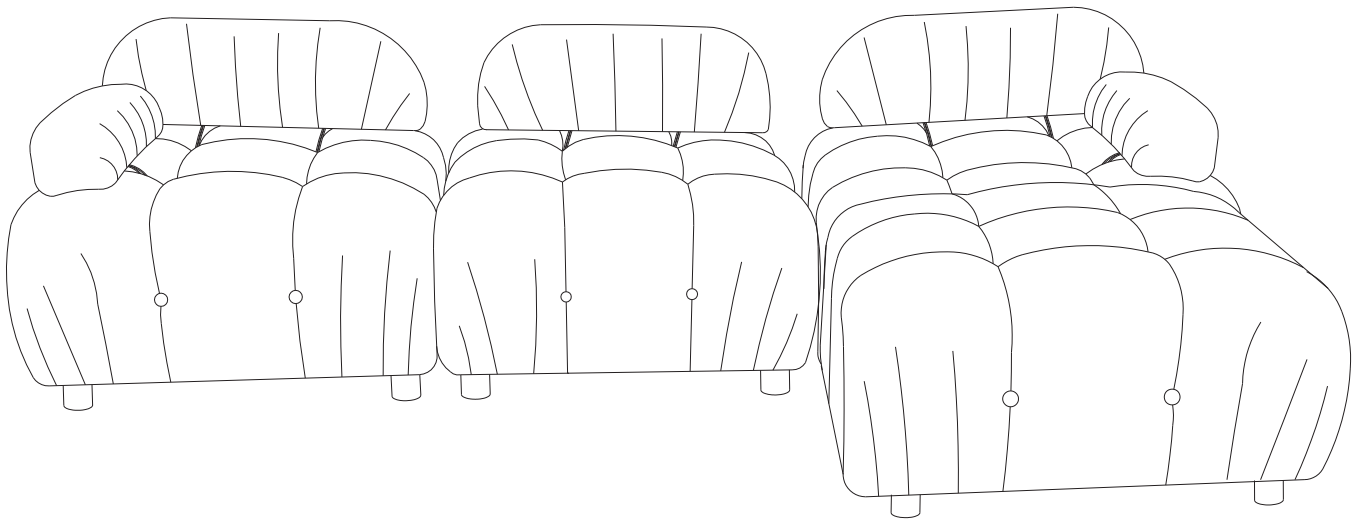
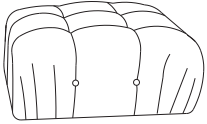
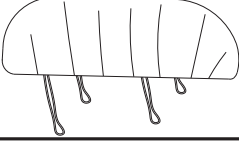


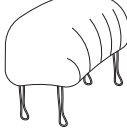


# ASSEMBLY INSTRUCTIONS

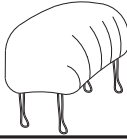


**WF309604/WF309605/WF309606/WF309607**

# PART LIST:

A		4PCS	<p>WF309604:A x1 B x1 C x1          WF309605:A x1 B x1 D x1          WF309606:A x1 B x1          WF309607:A x1 Ex16 Ex16 G x16</p>
B		3PCS	
C		1PCS	
D		1PCS	
E		16PCS	
F		16PCS	
G		16PCS	


1

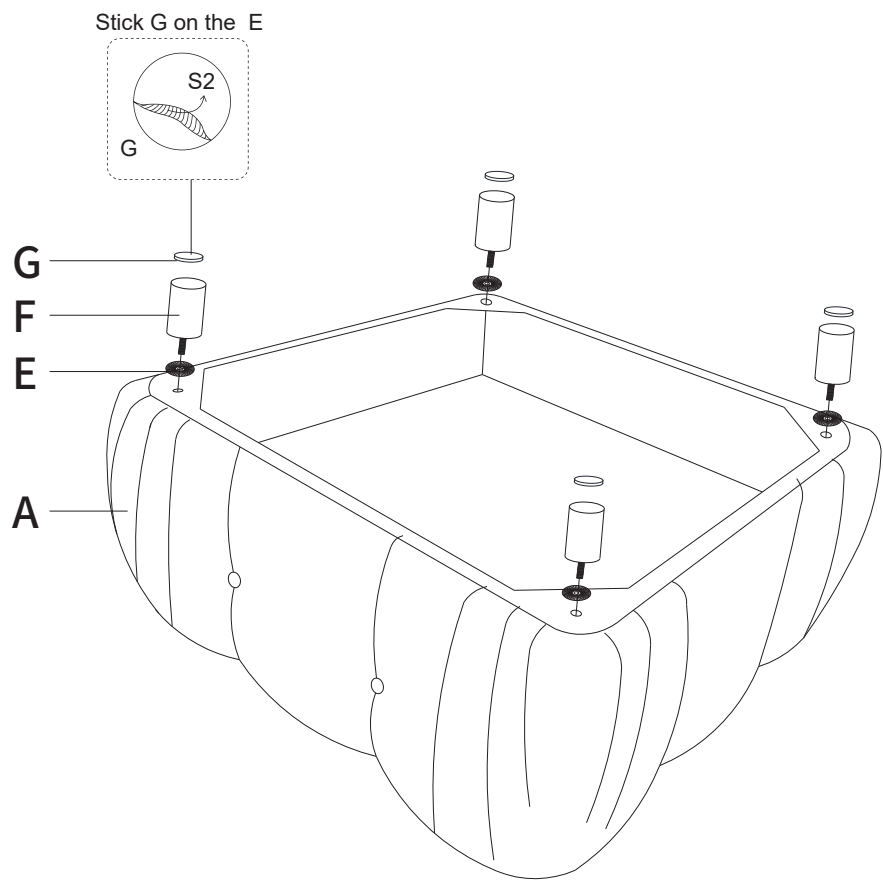

x 4

A x 1  
 E x 4  
 F x 4  
 G x 4


2

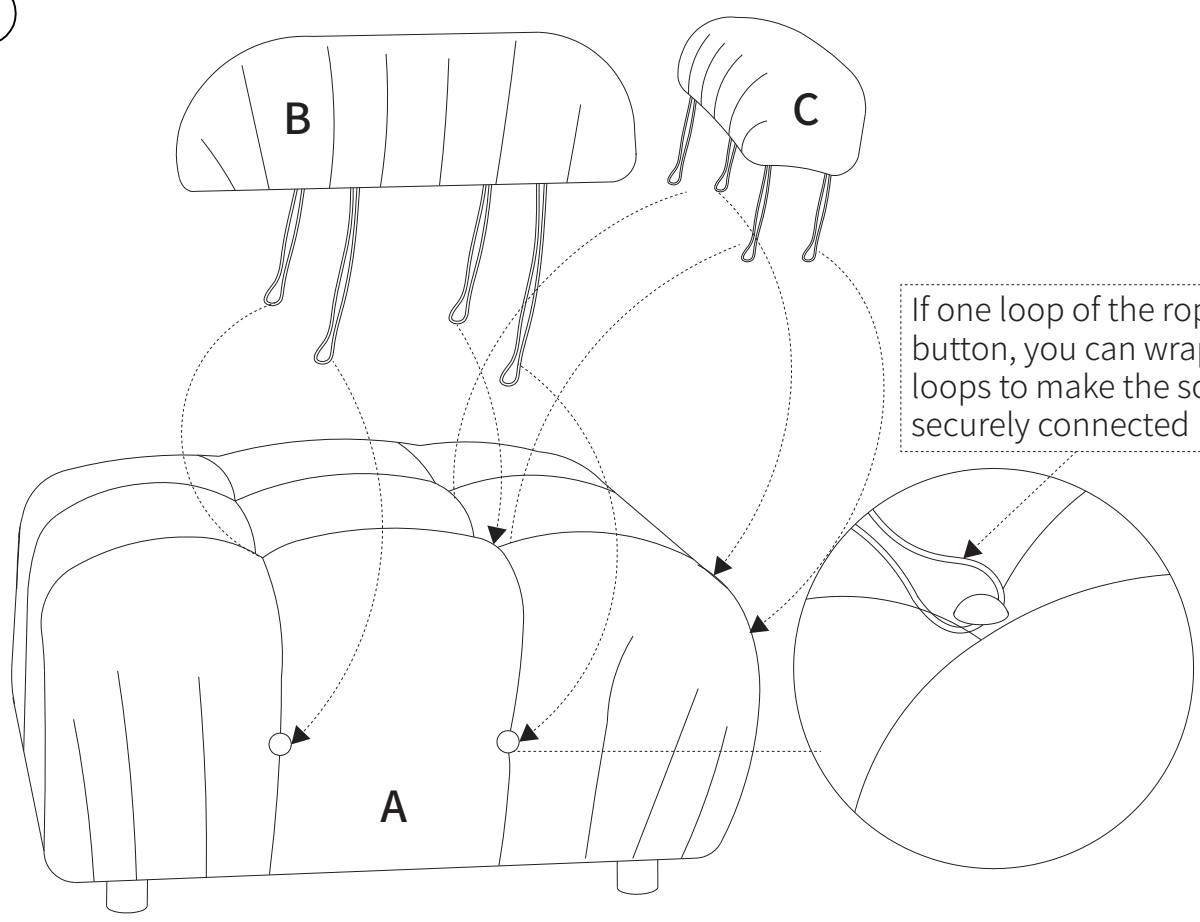

If one loop of the rope is loose on the button, you can wrap it a few more loops to make the sofa backrest more securely connected


A x 1  
 B x 1  
 C x 1

3

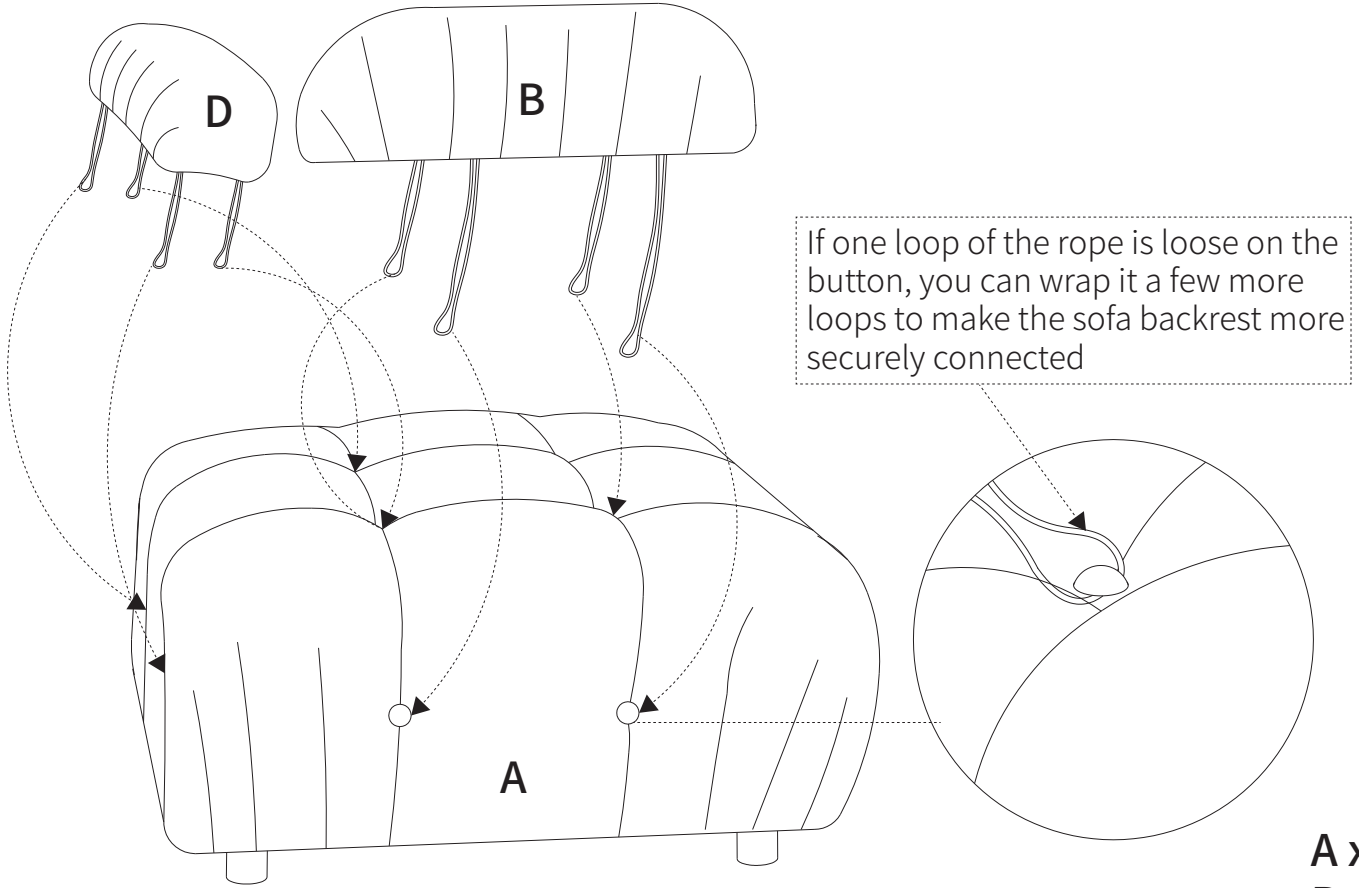

A x 1  
B x 1  
D x 1

4

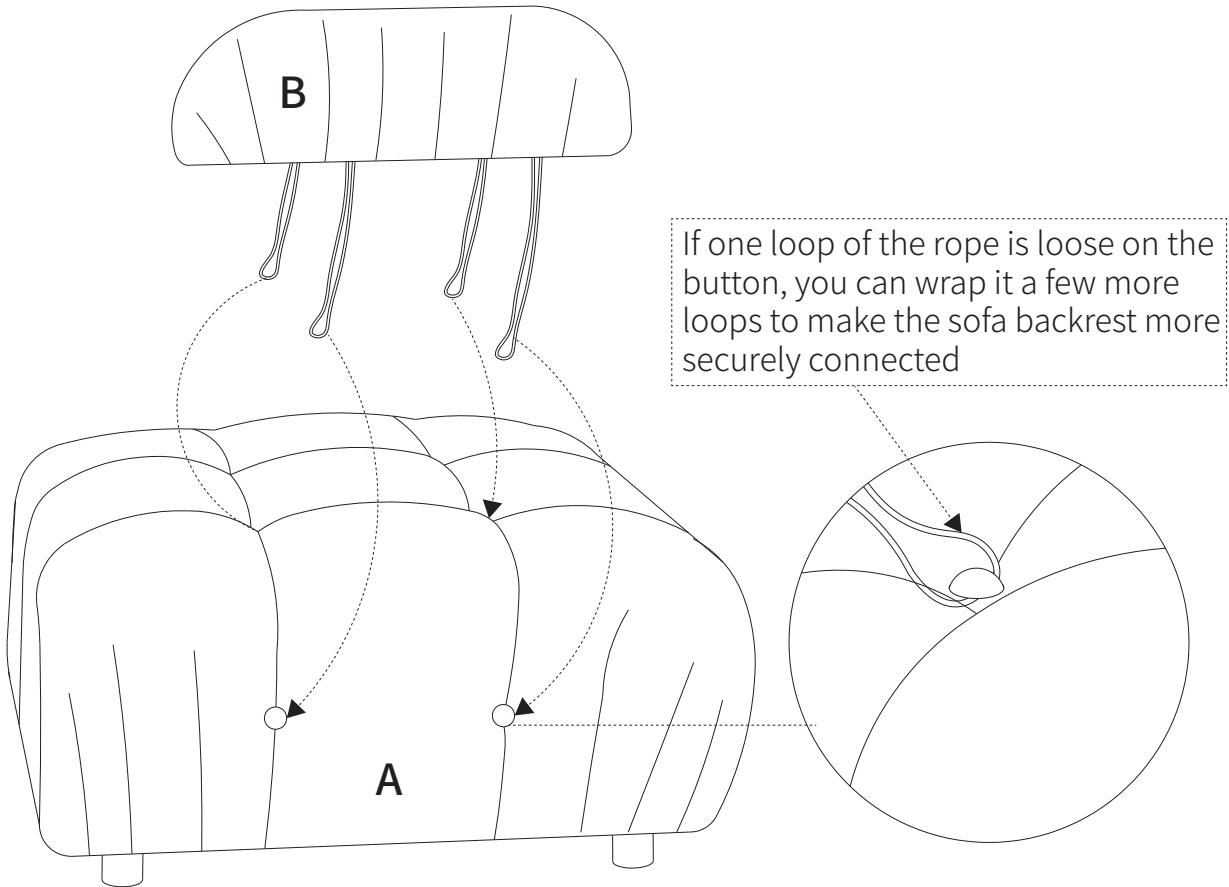

A x 1  
B x 1

5

