


Part list BOX 1:


M

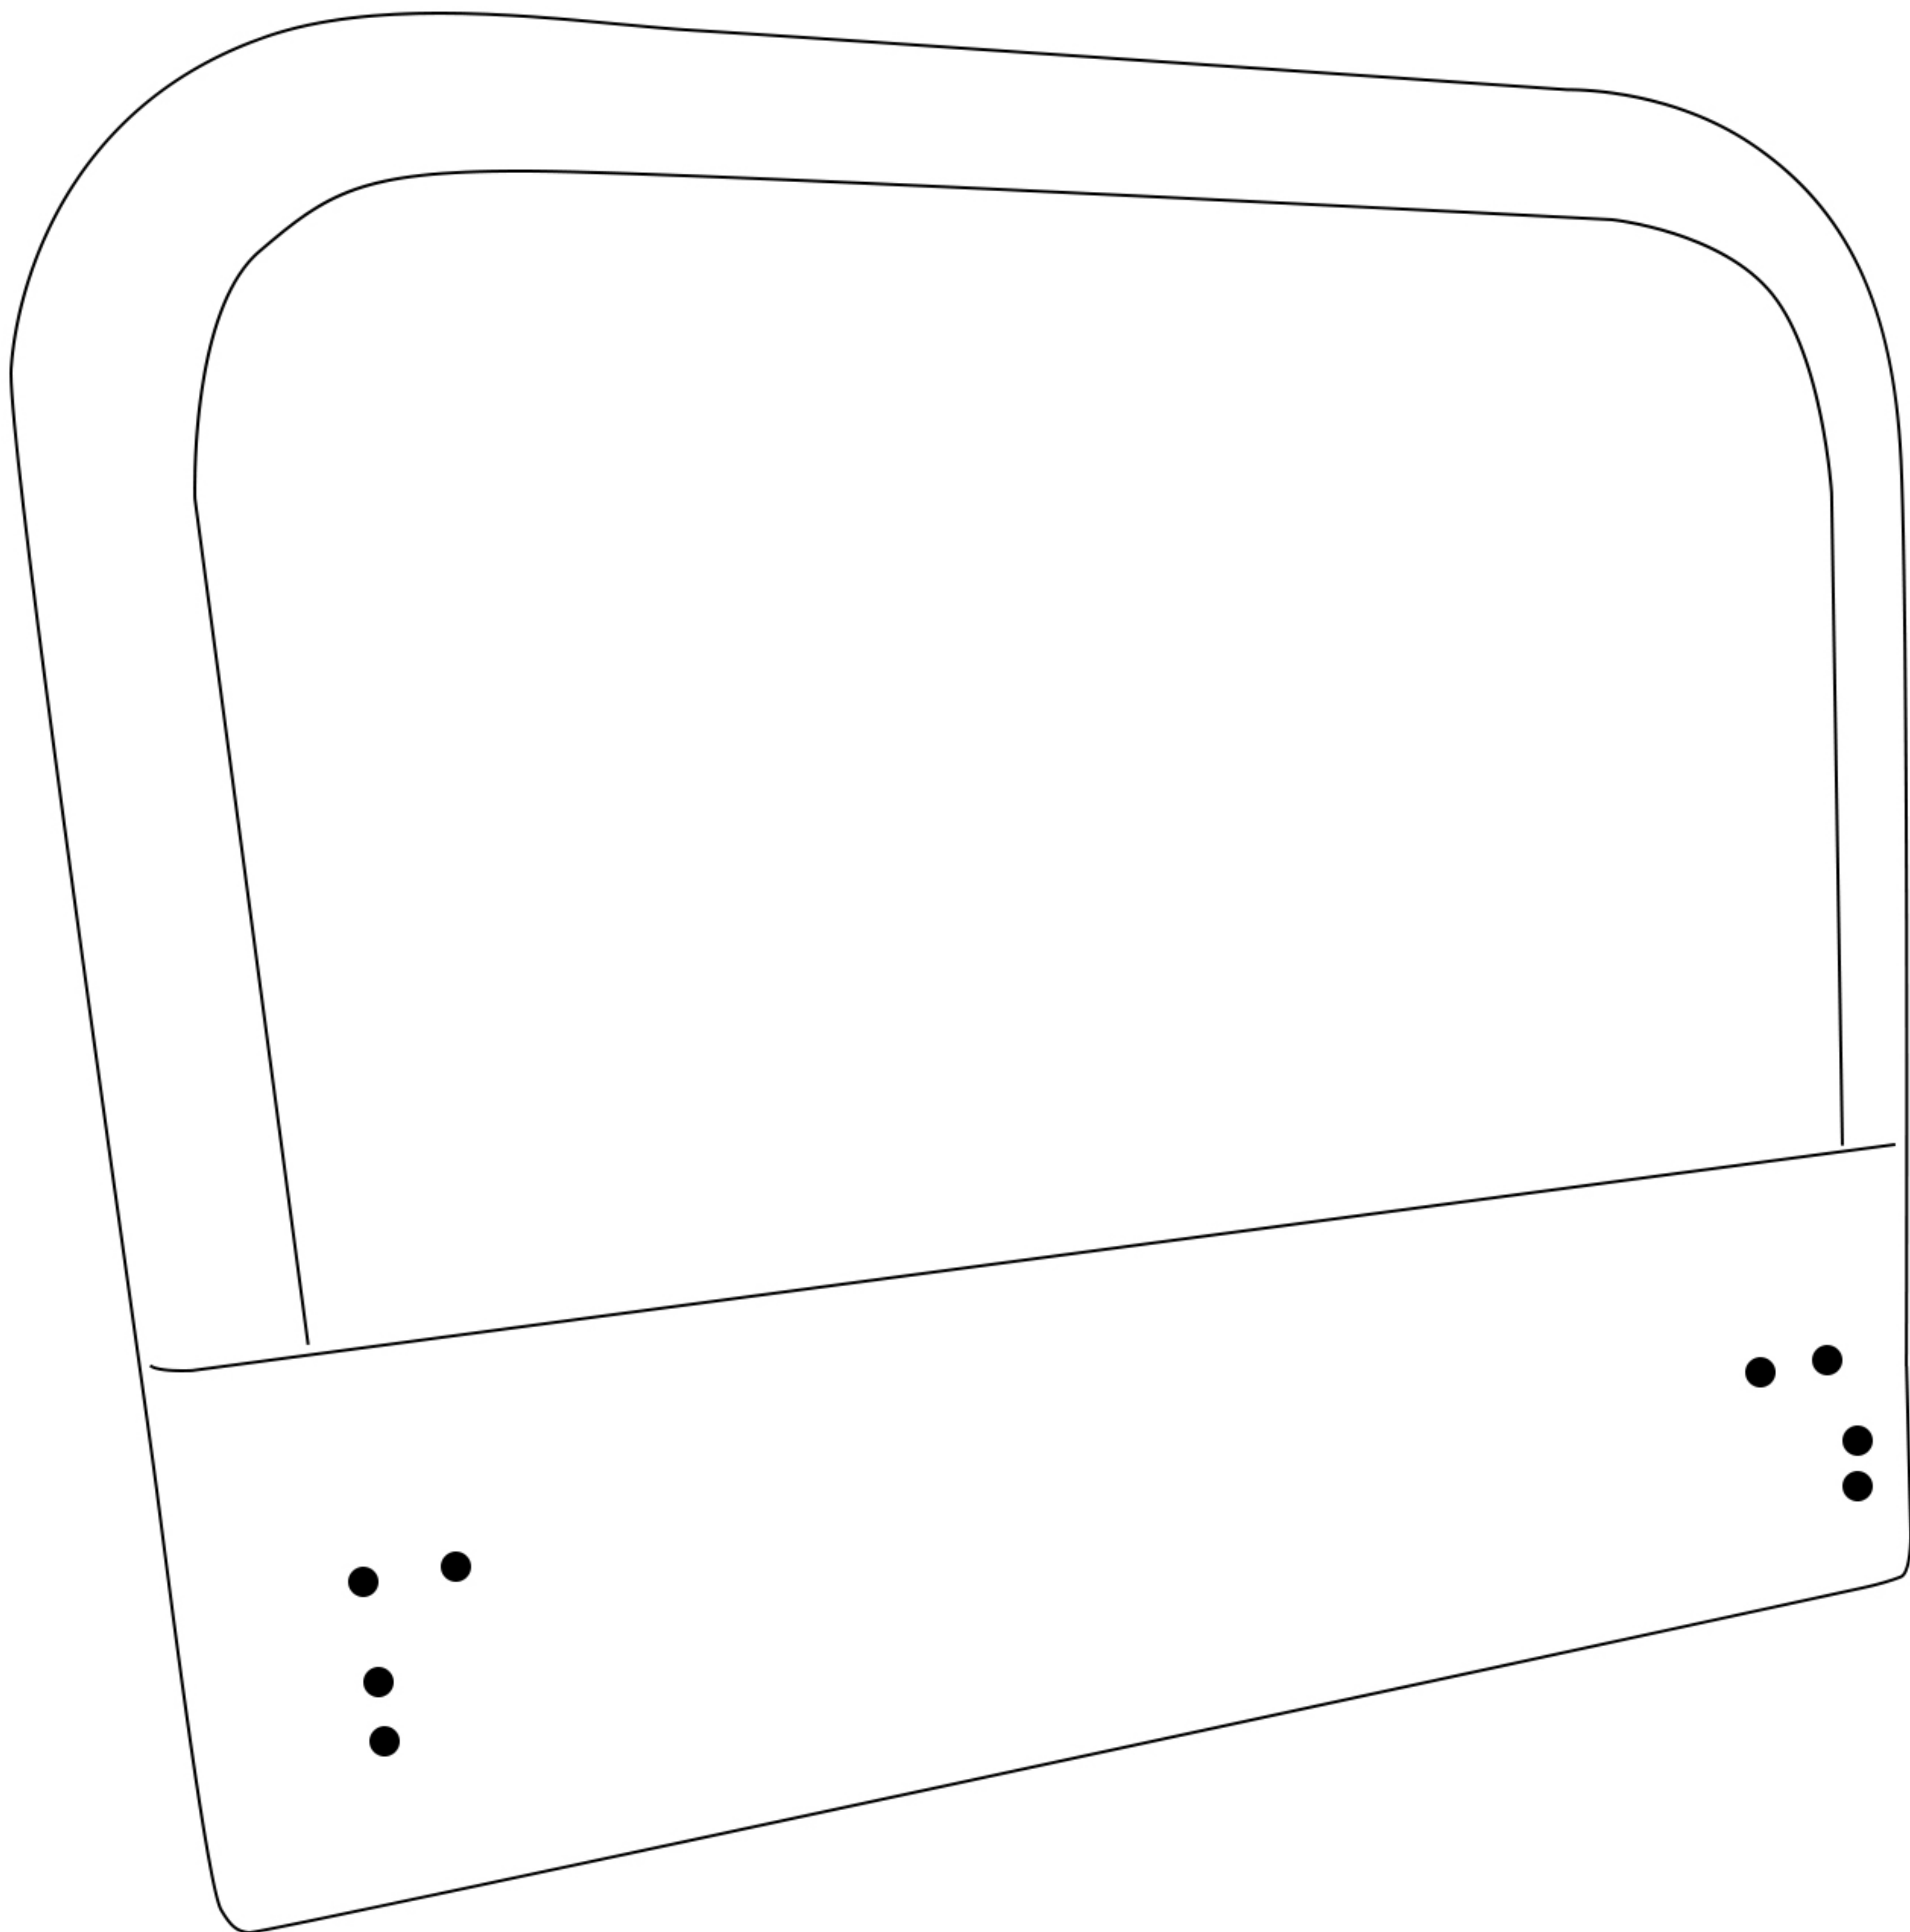

BEDHEA - (1 pcs)

G


PART LIST BC X 2:

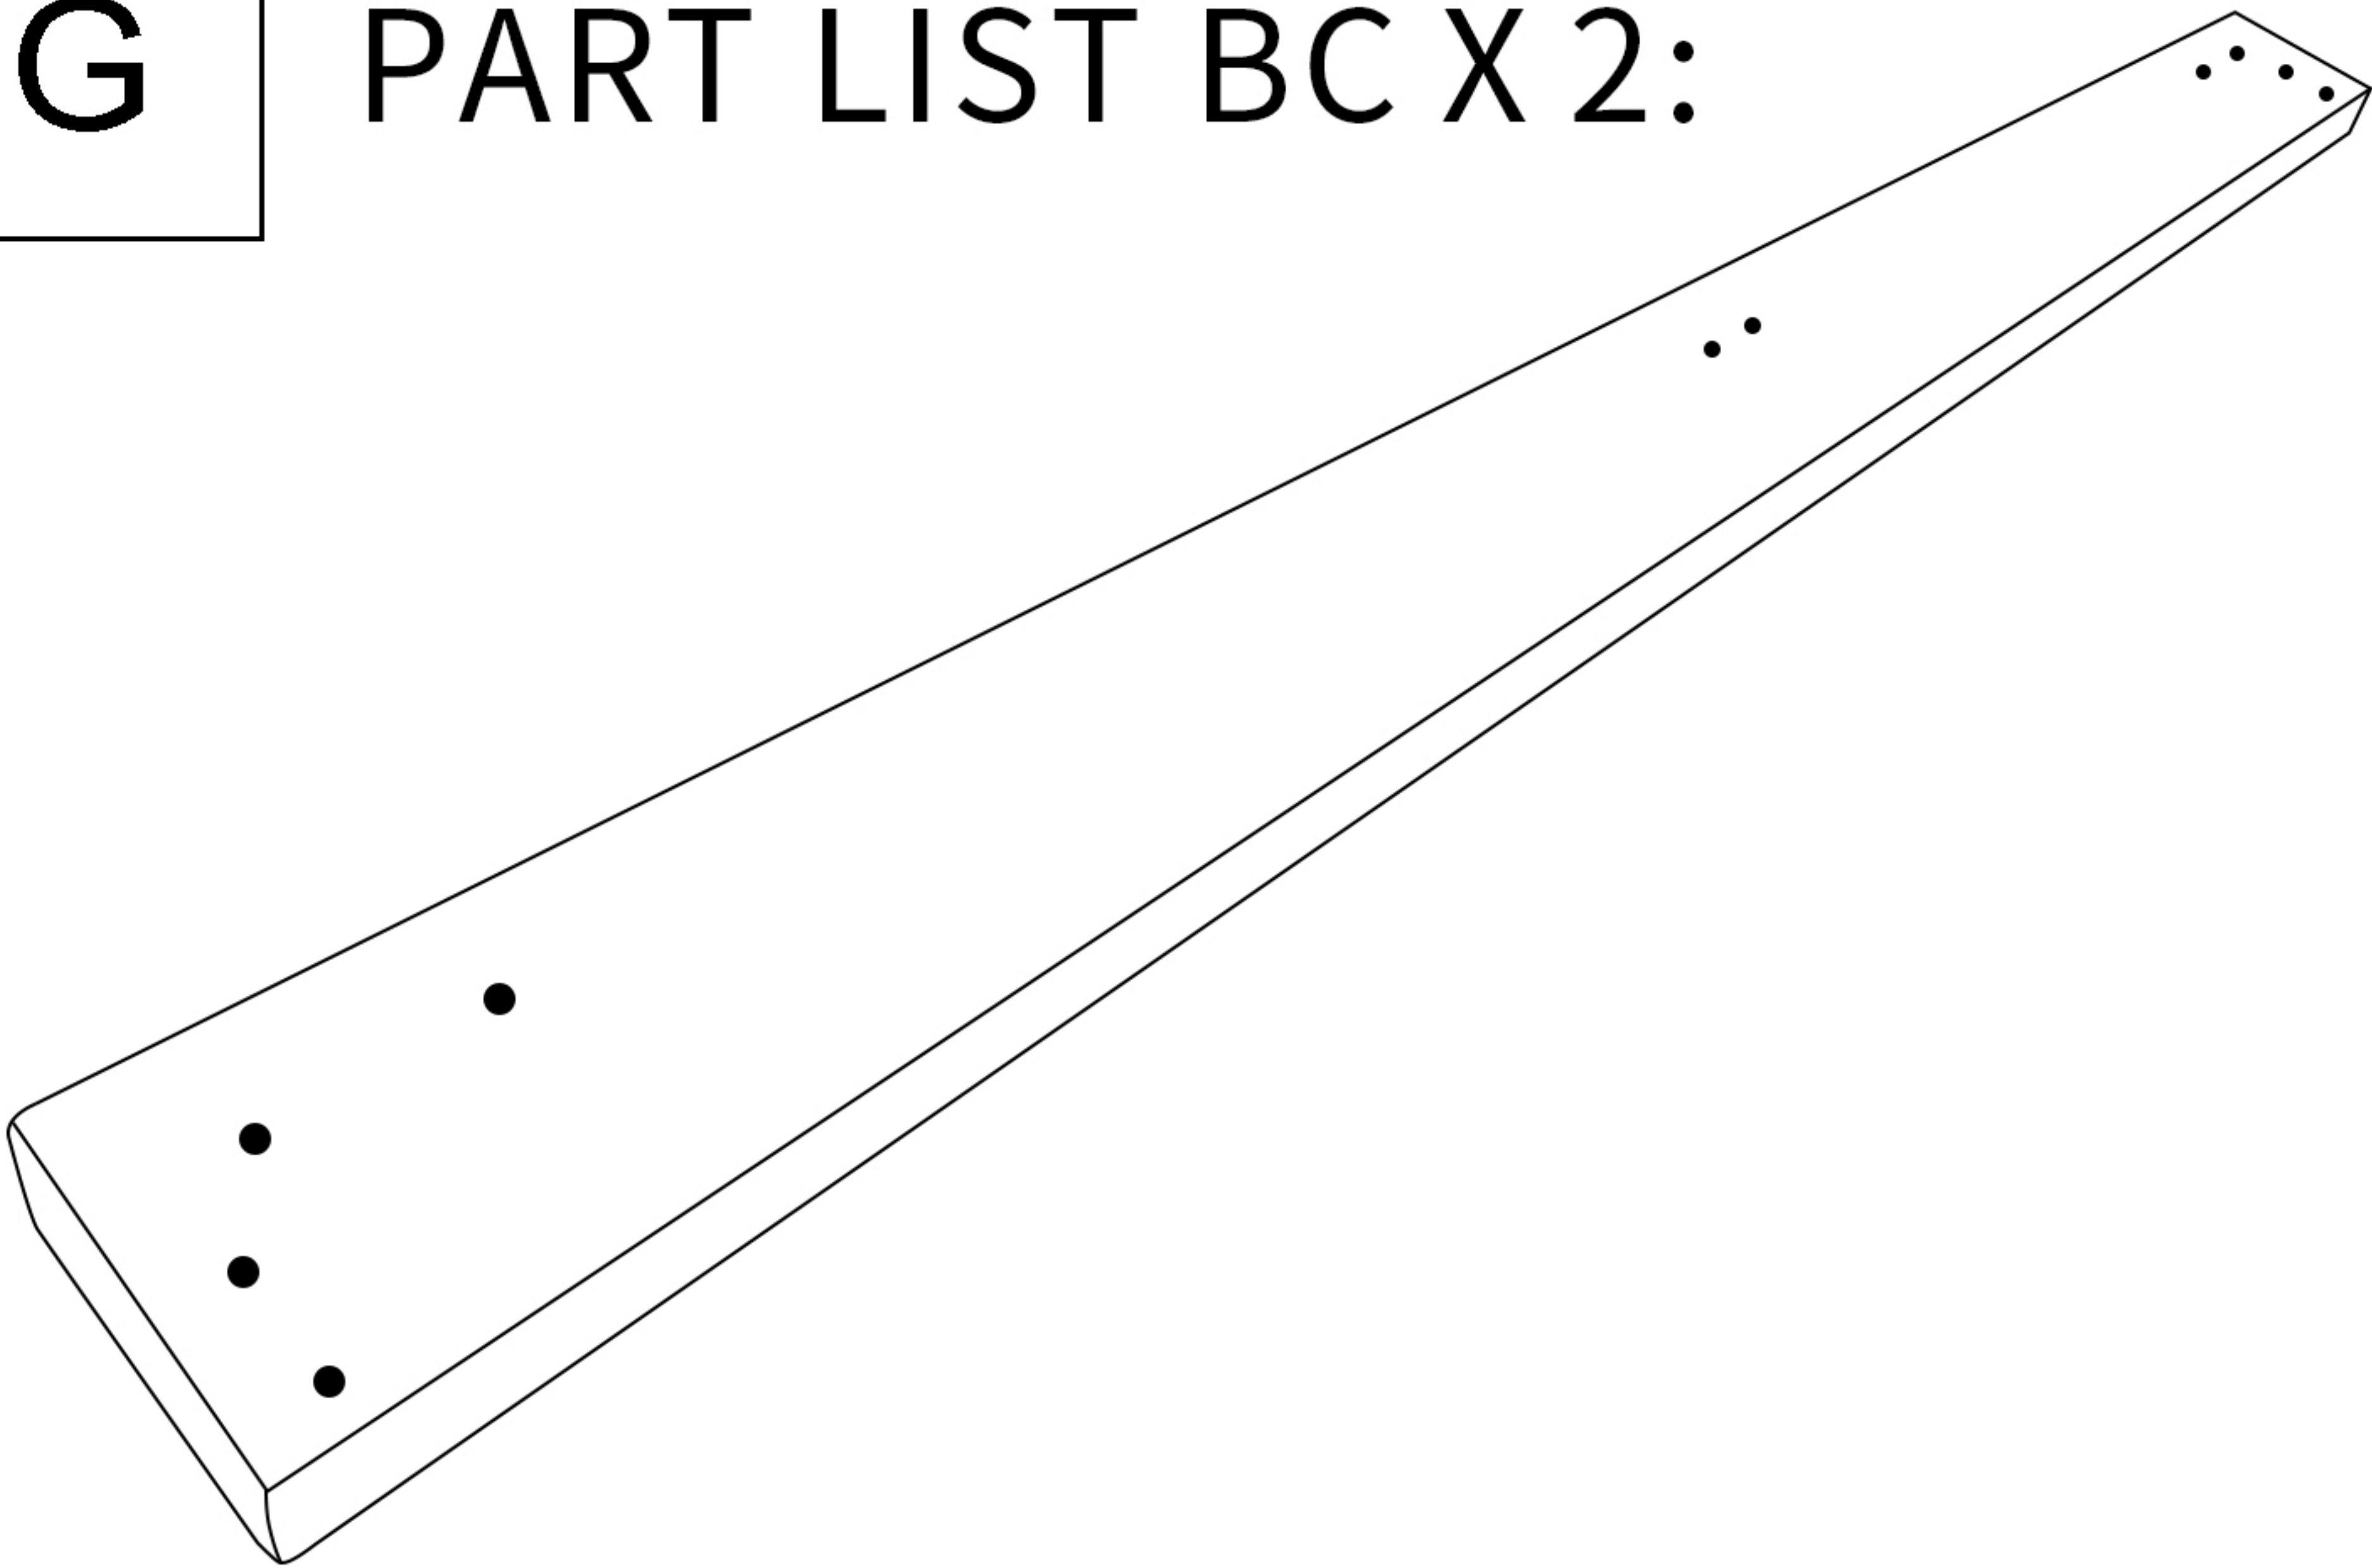

BEDSIDE - (2 pcs)

H

PART LIST BC X 2:

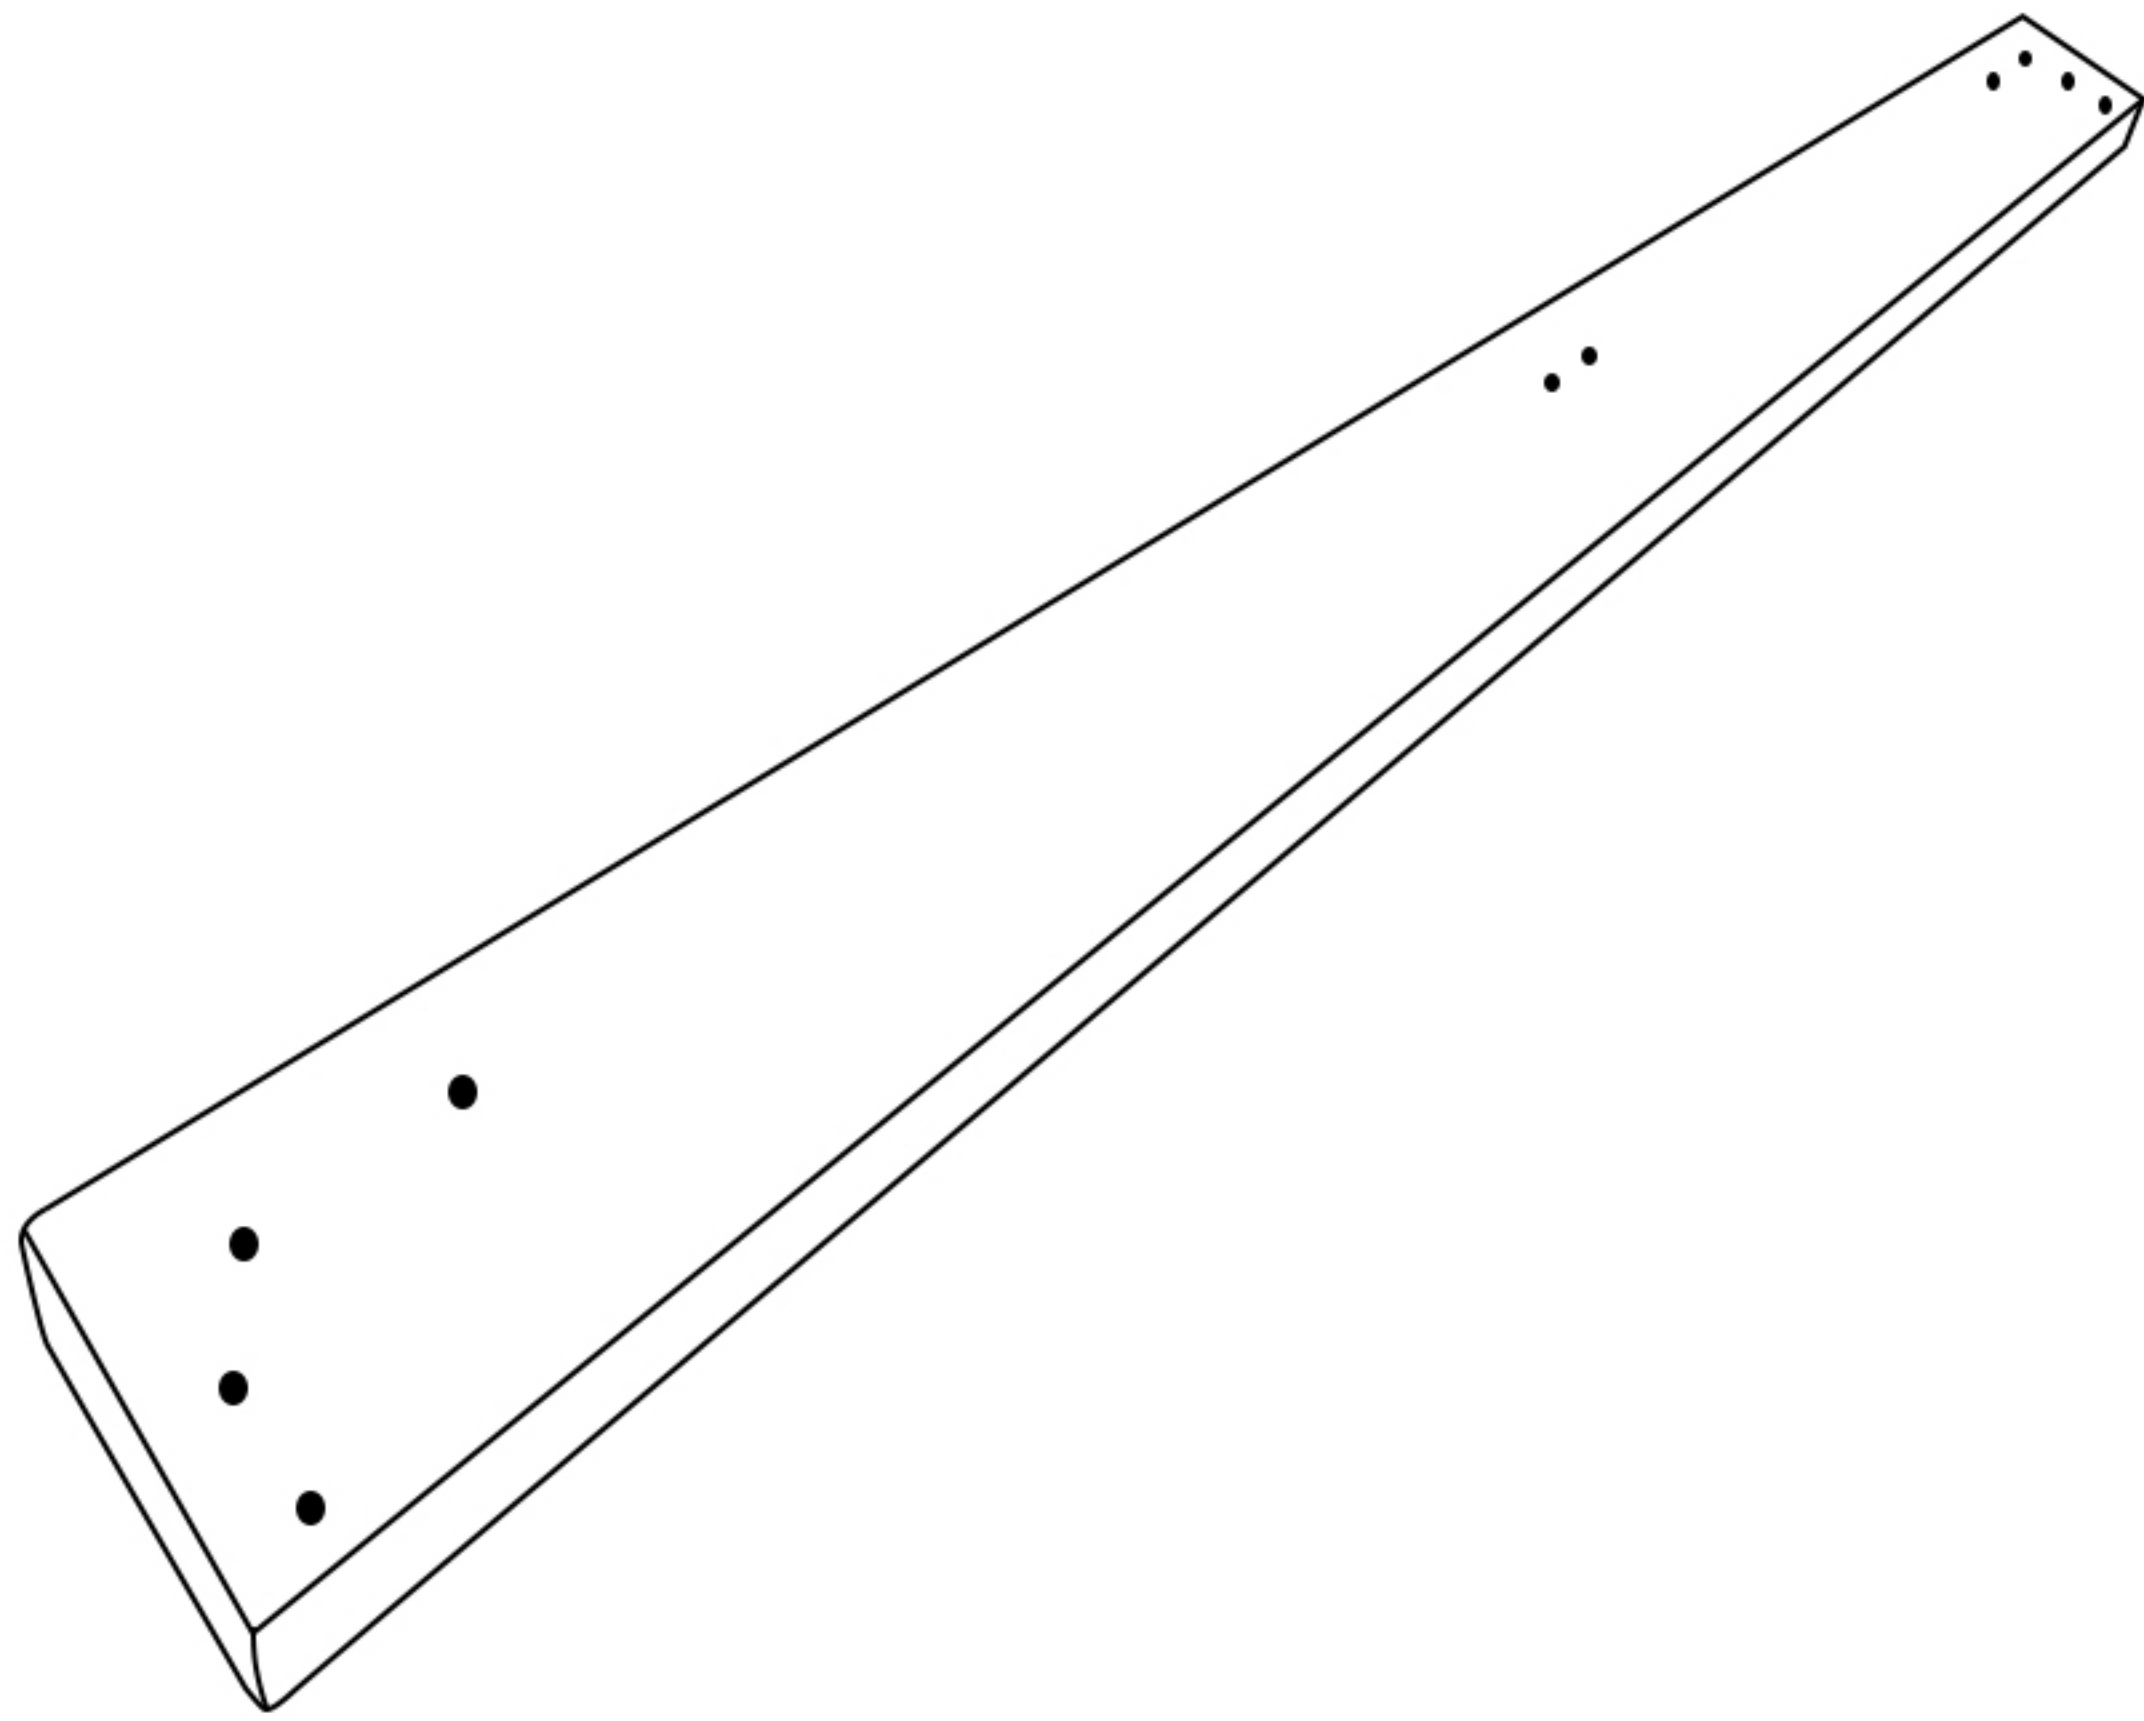

BED TAIL - (1 pcs)

P

PART LIST BC X 3:



BED RACK FRAMEWORKDE - (1 pcs)





# Hardware list


1	  1/4" x 50 mm Hex head bolts - 6 pcs	2	  1/4" x 25 mm Hex head bolts - 40 pcs	3	  m4 x 25 Wood screws - 12 pcs	4	  connecting bar - 4 pcs
5	  Ø25X3mm Mute pad-10 pcs	6	  41X99mm CORNER BRACE-4 pcs	7	  52X75mm CORNER BRACE-4 pcs	8	  40X175mm CORNER BRACE-4 pcs
9	  131X111mm BED FOOT-4 pcs	10	  111X197-330mm ADJUSTER FOOT-2 pcs	11	  45X197-330mm ADJUSTER FOOT-2 pcs	12	
13		14		15		16	
17	  Assemble tools required (Not included)						



1. AS SHOWN IN THE FIGURE, PLACE THE BED HEAD, BED FAIRY, BED TAIL, AND CORRESPONDING HARDWARE ACCESSORIES PROPERLY

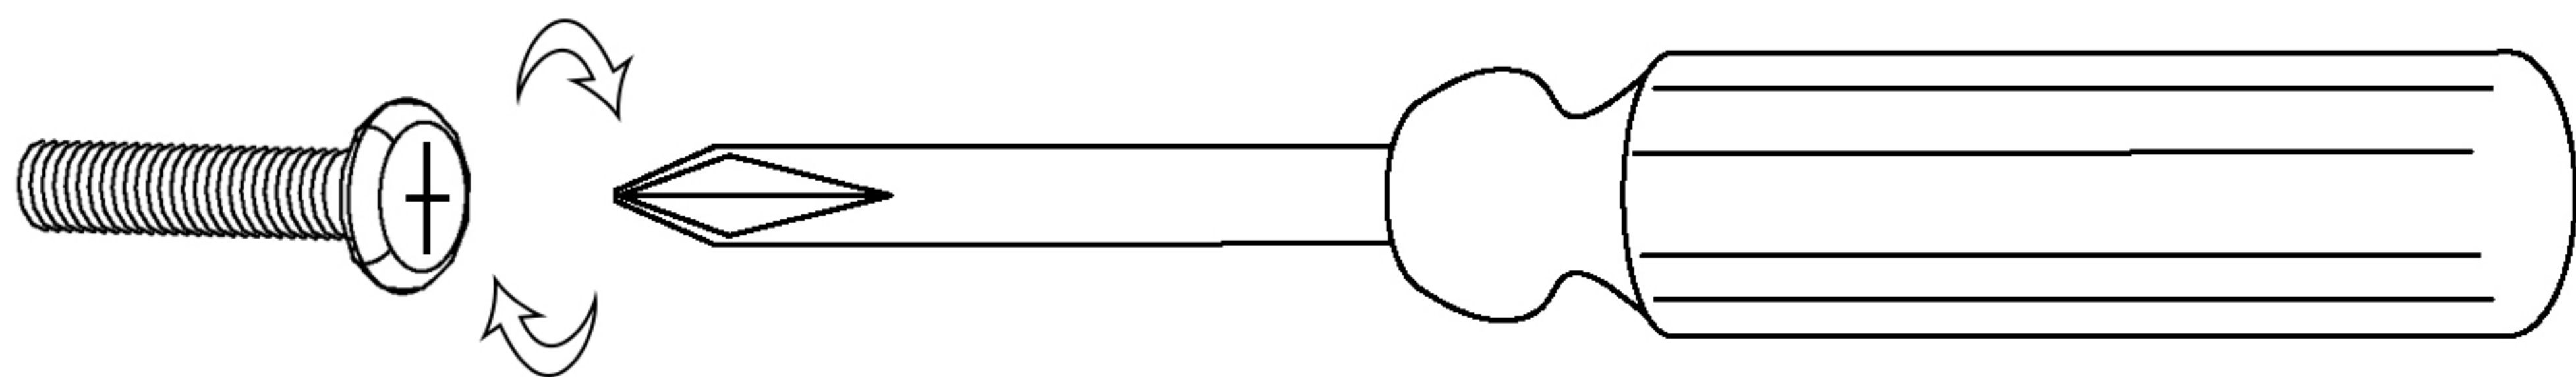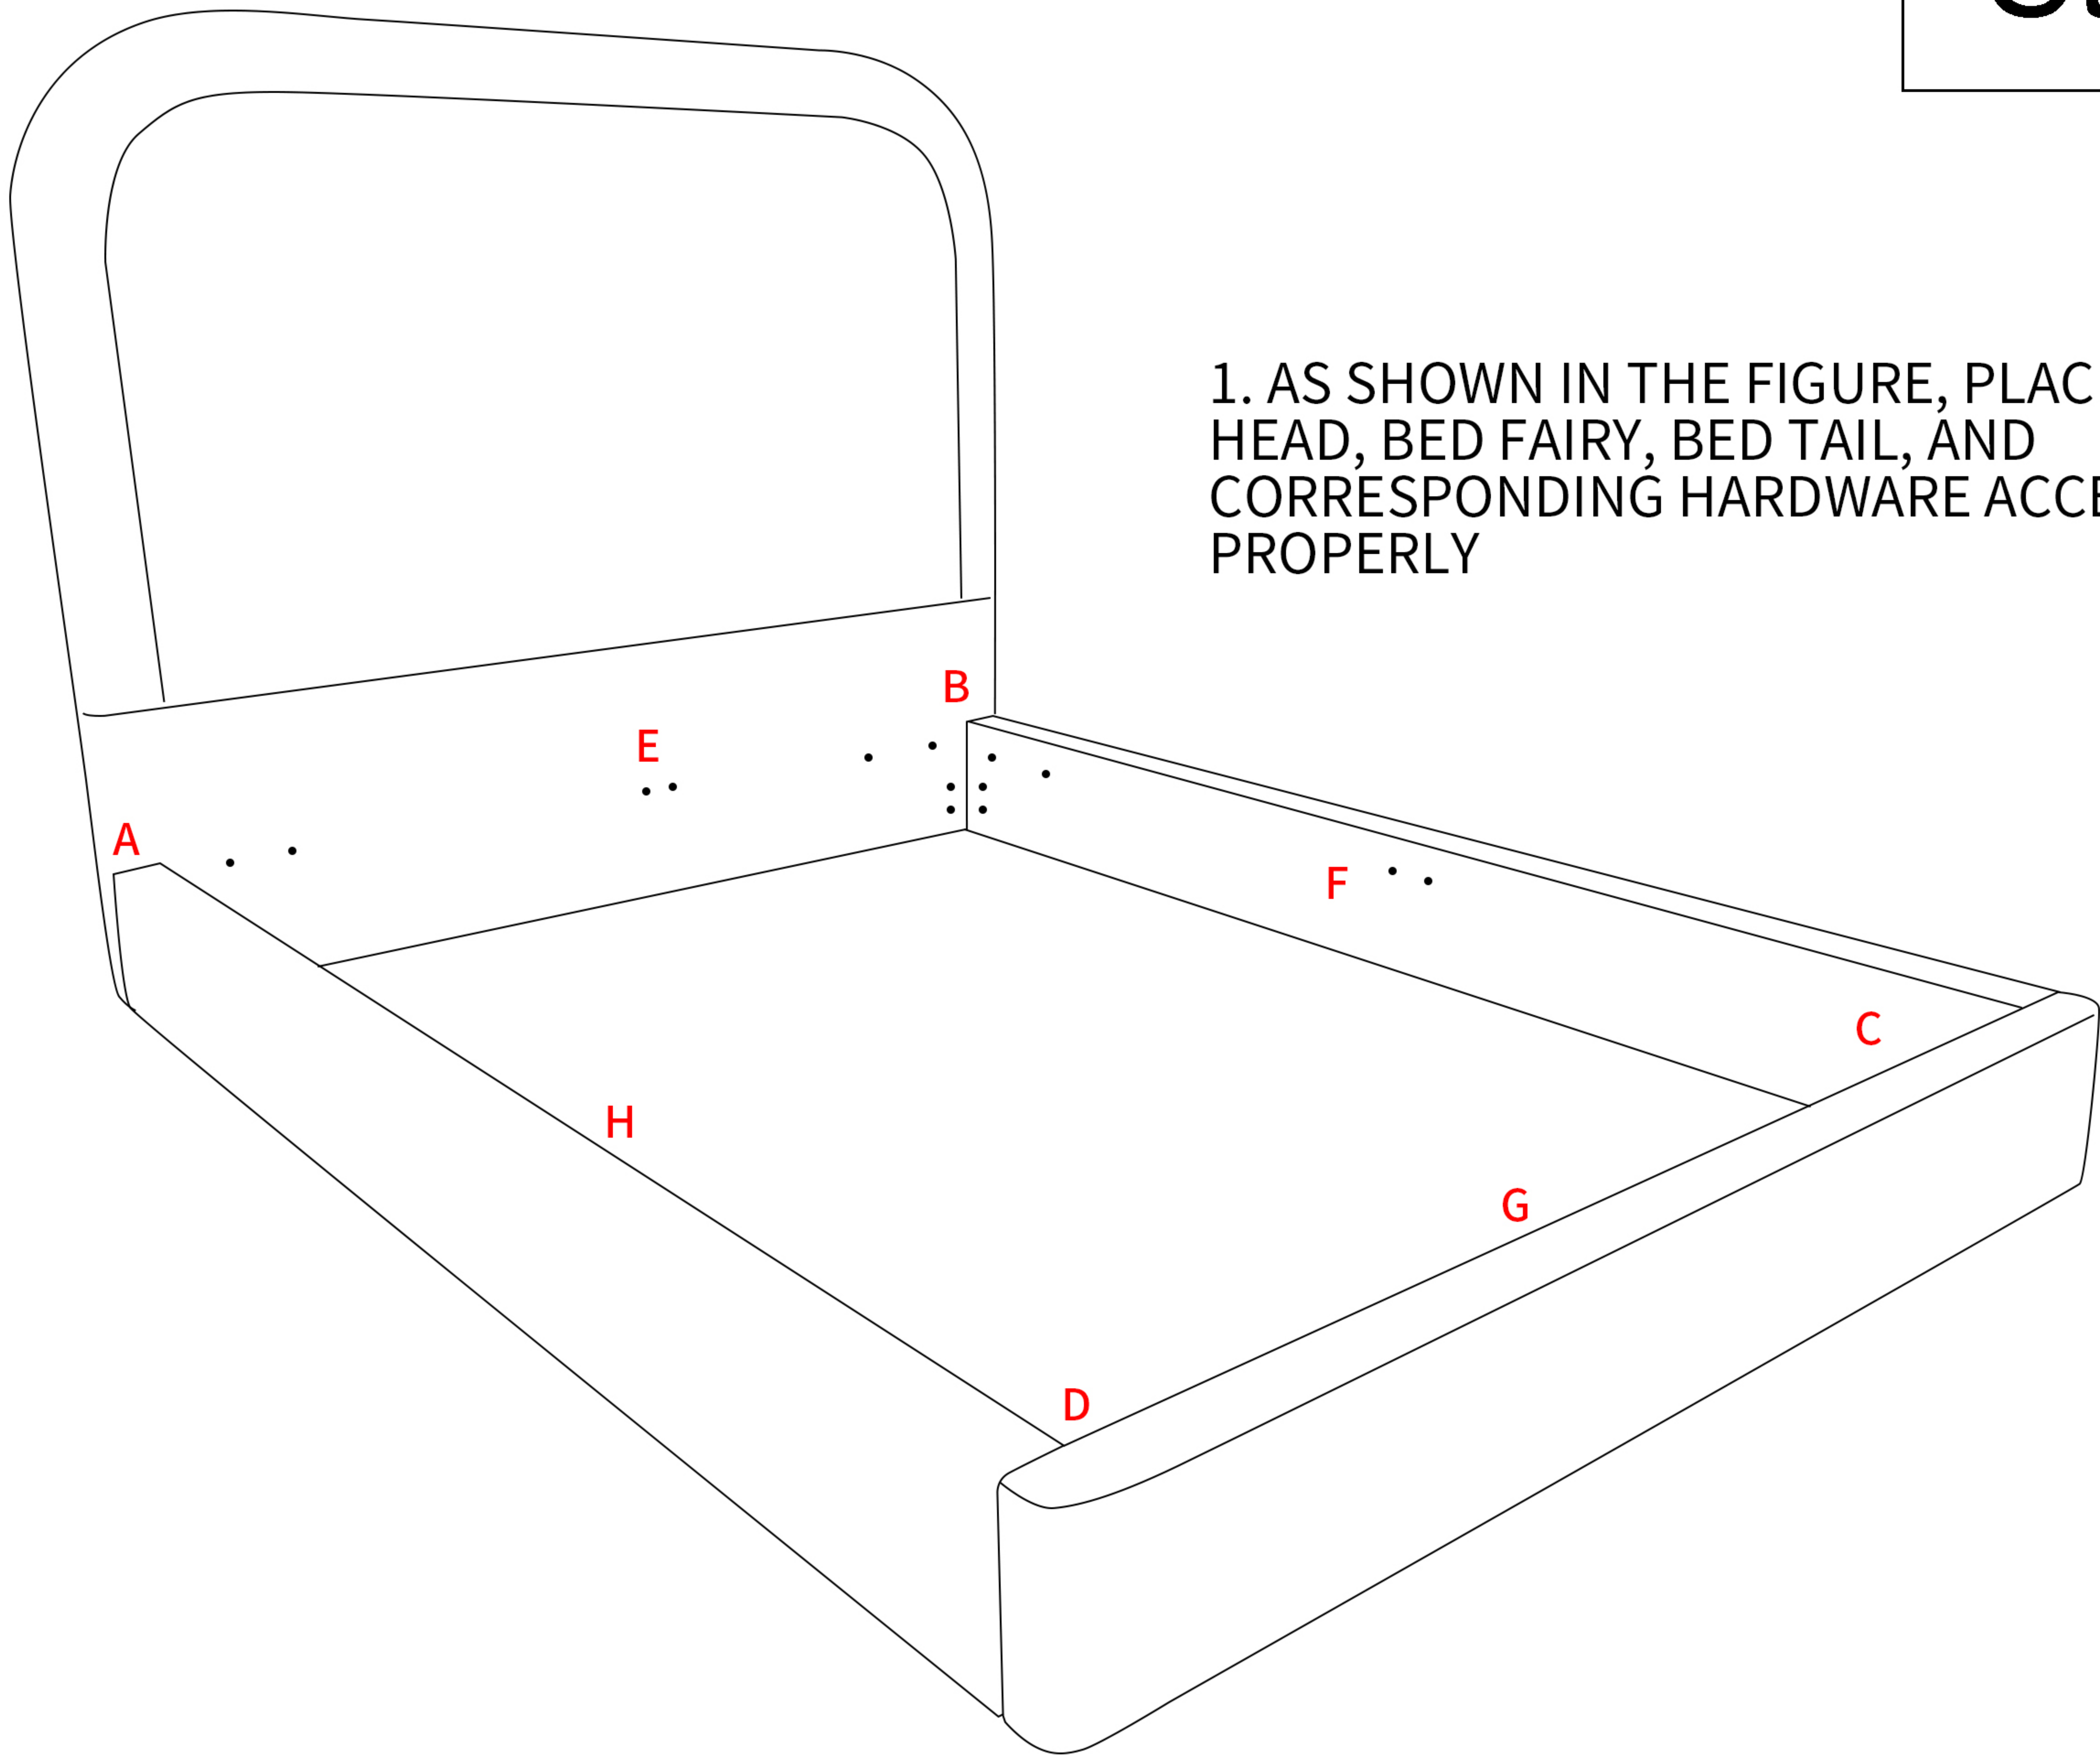

2

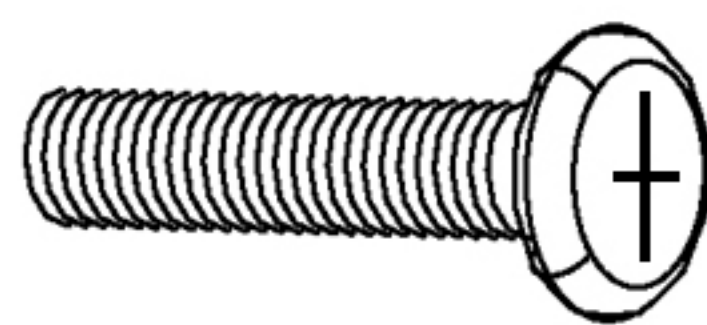

1/4" x 25 mm  
Hex head bolts - 16 pcs

7








52X75mm  
CORNER BRACE-2 pcs

8




40X175mm  
CORNER BRACE-2 pcs

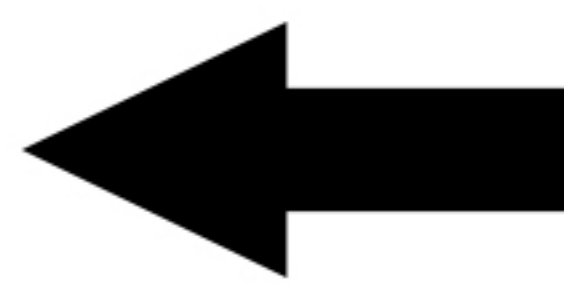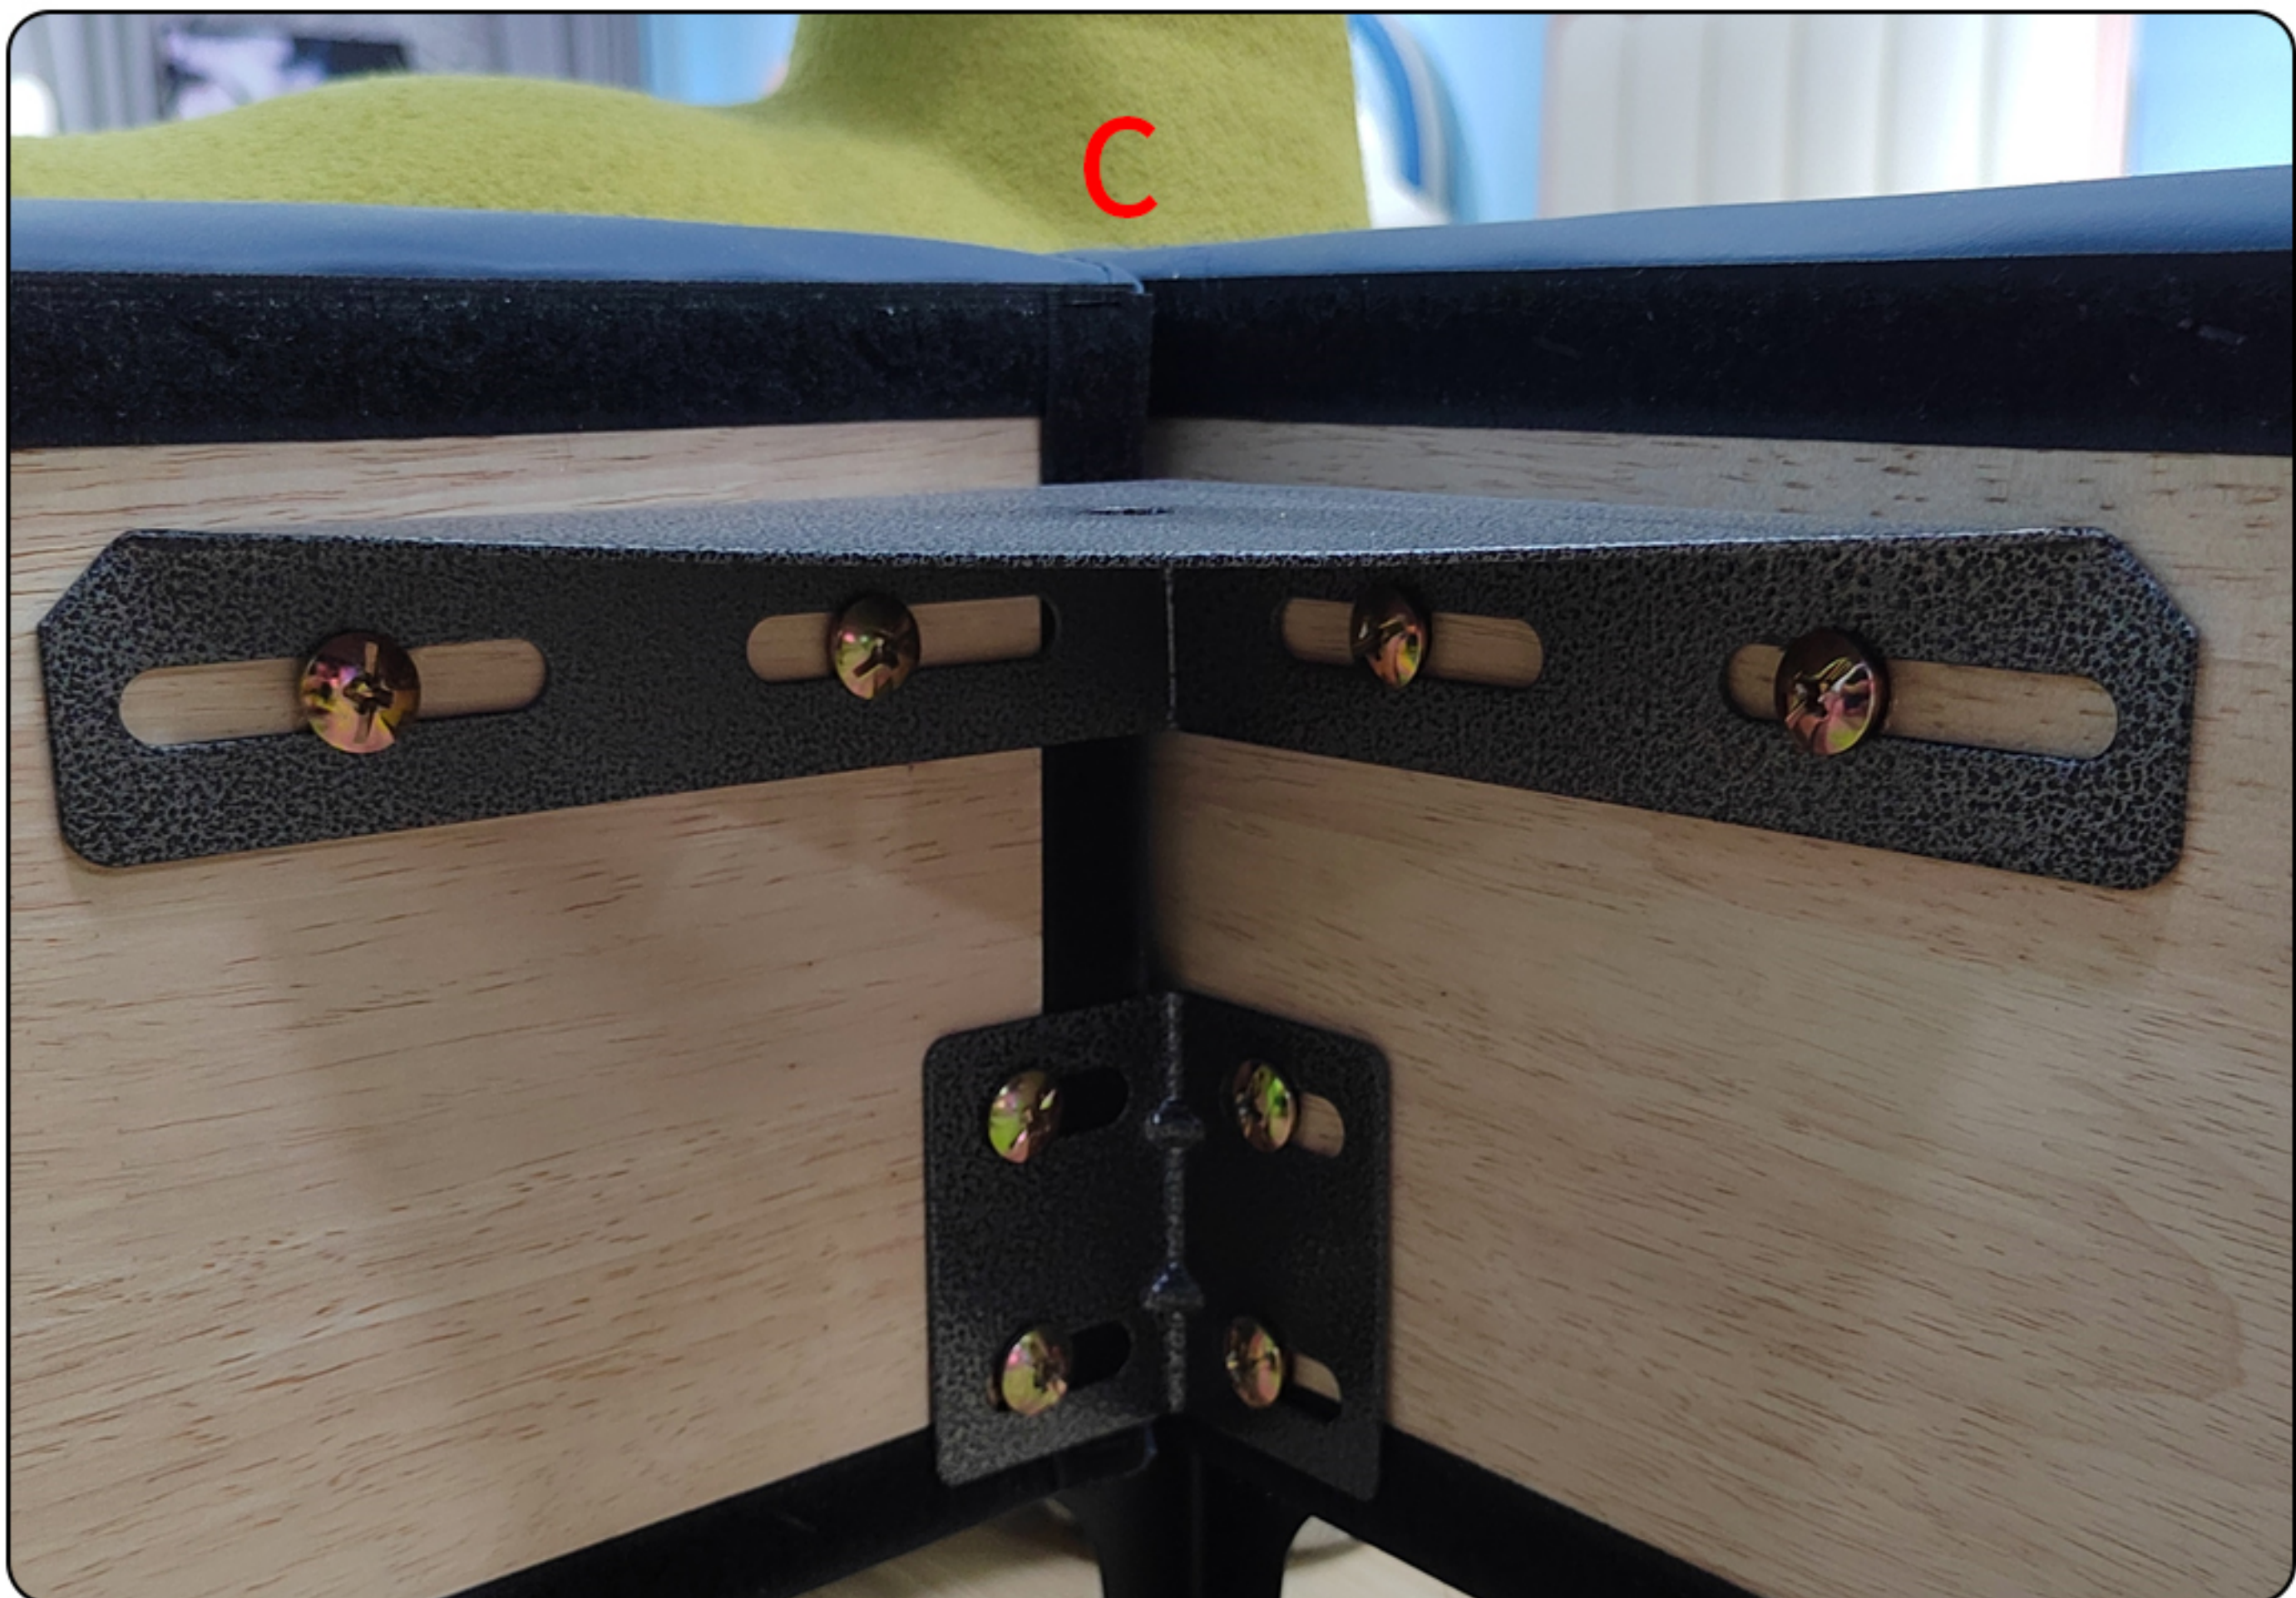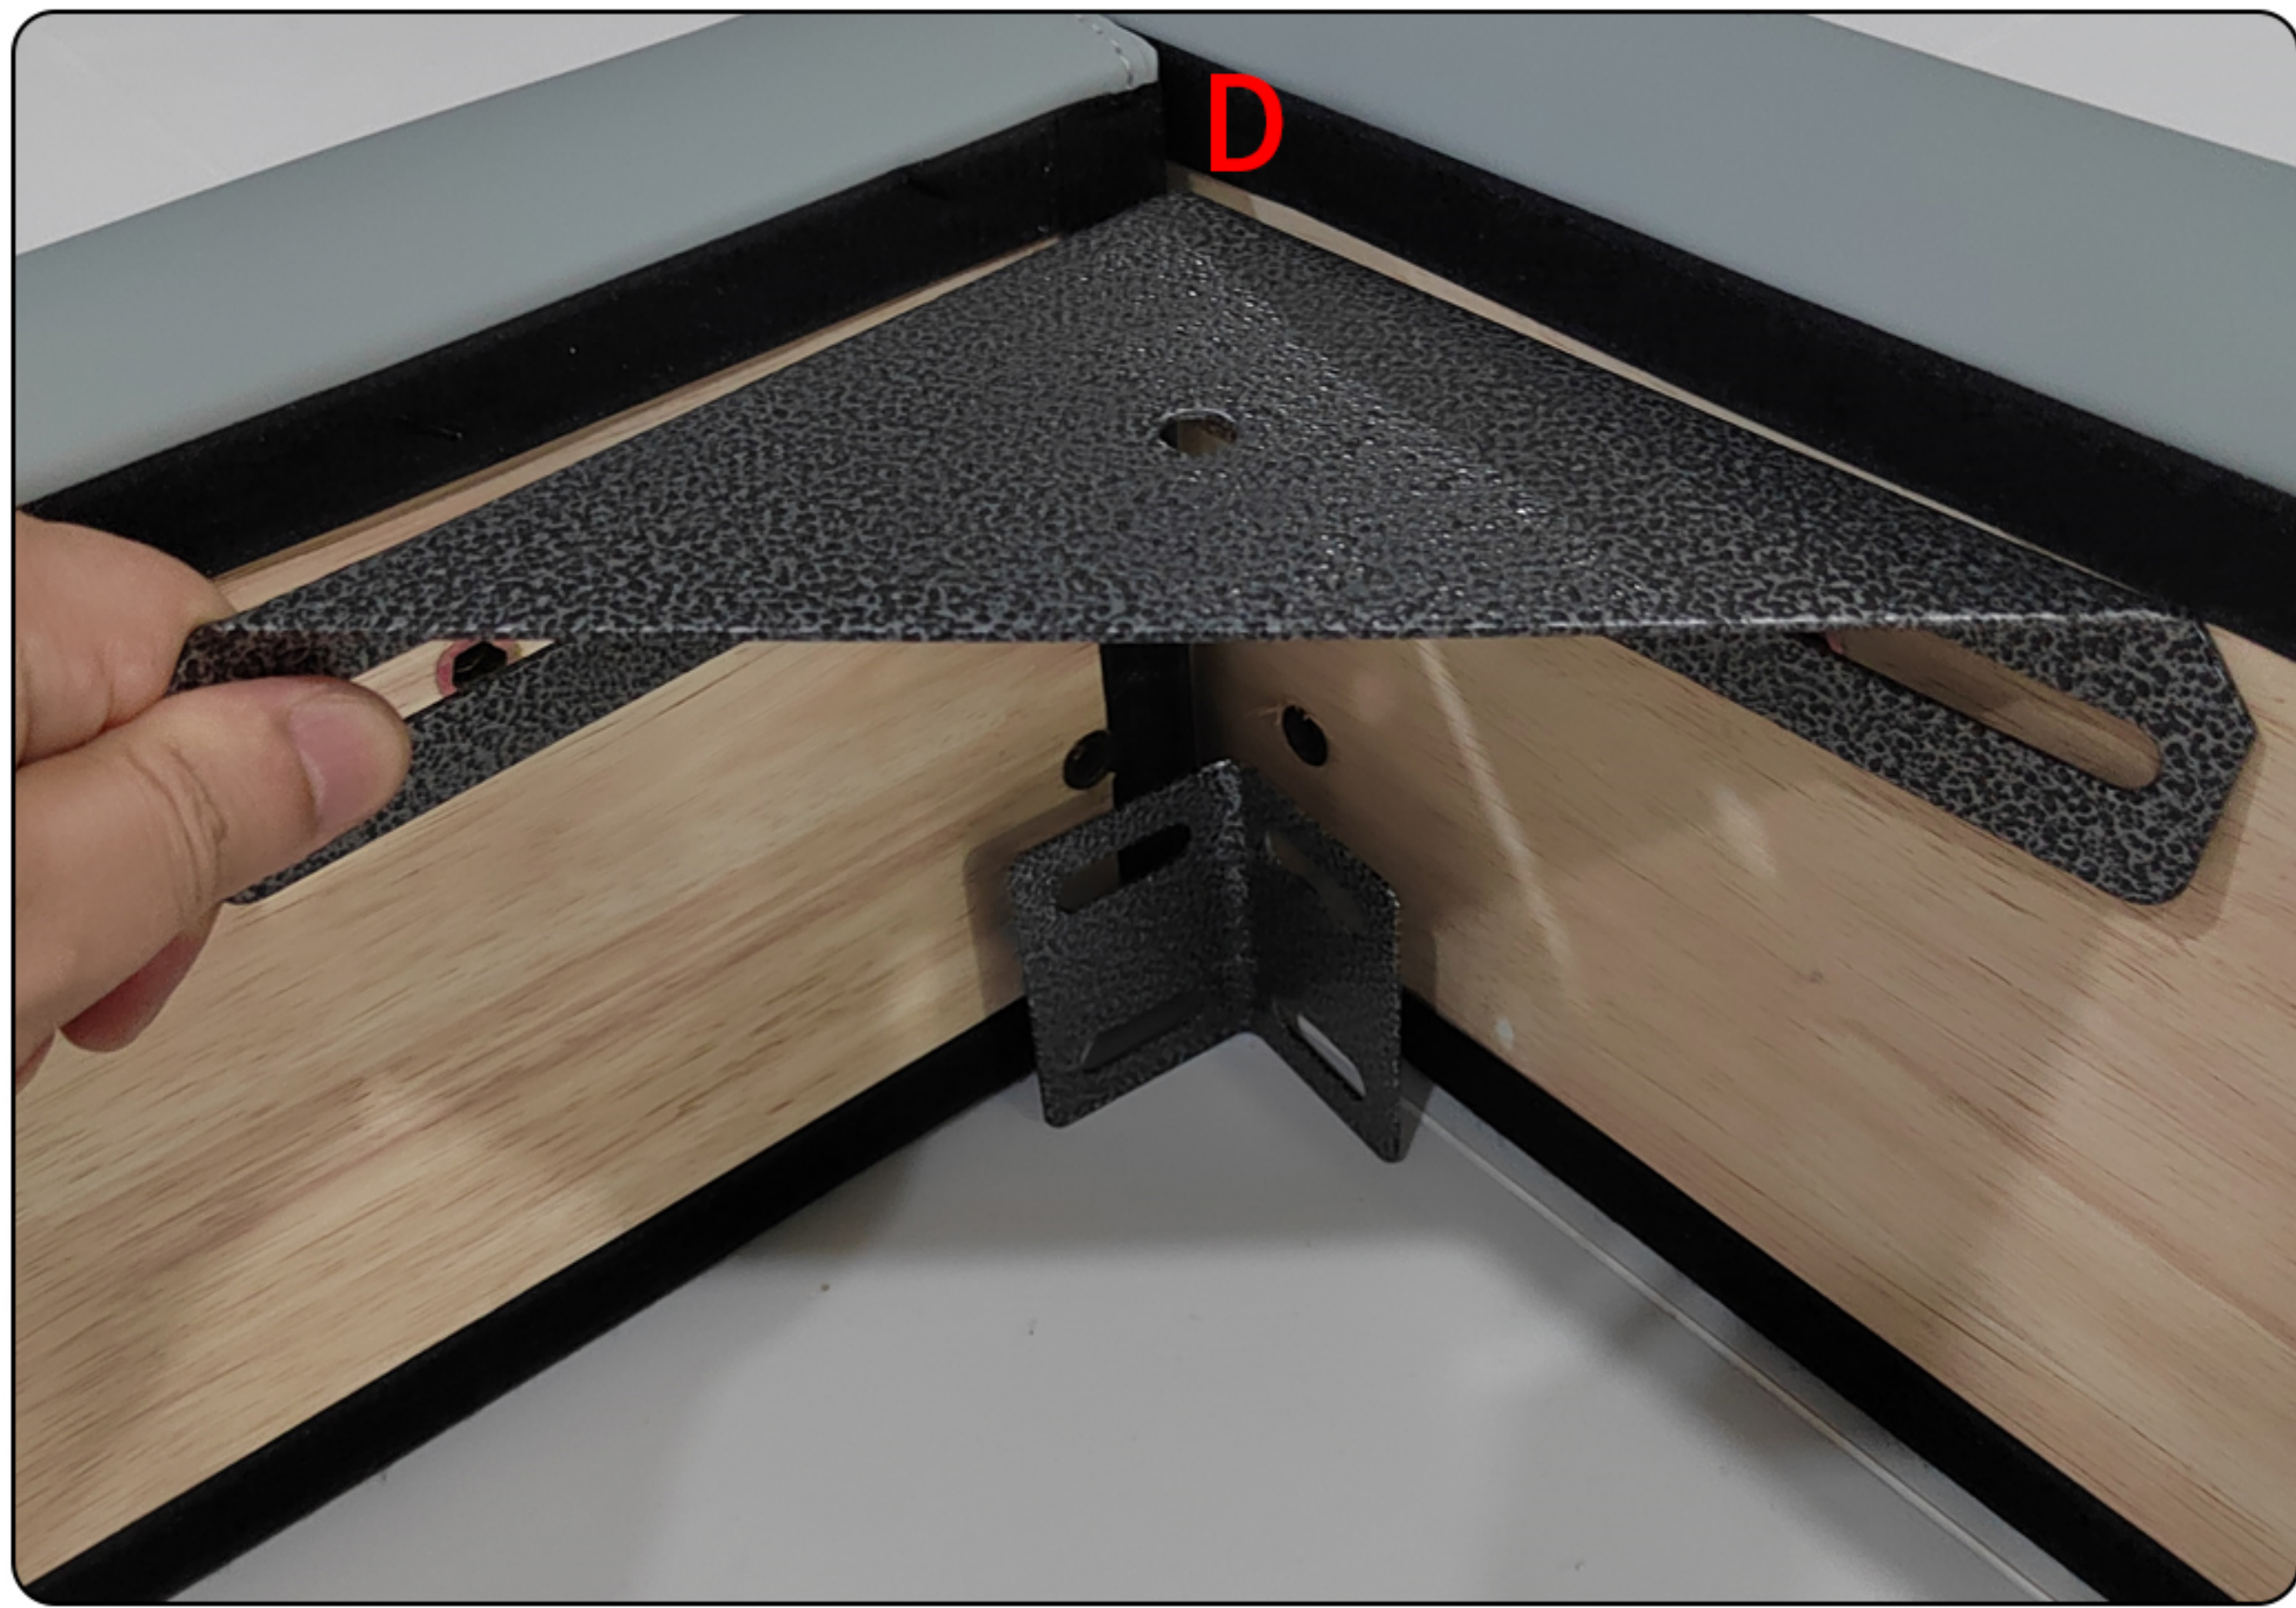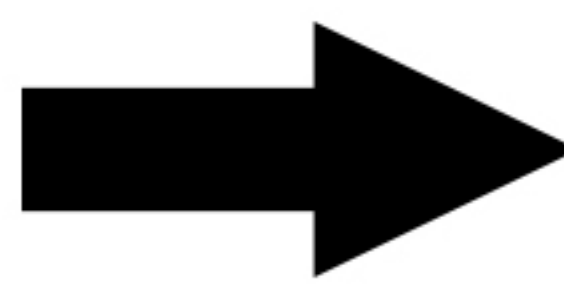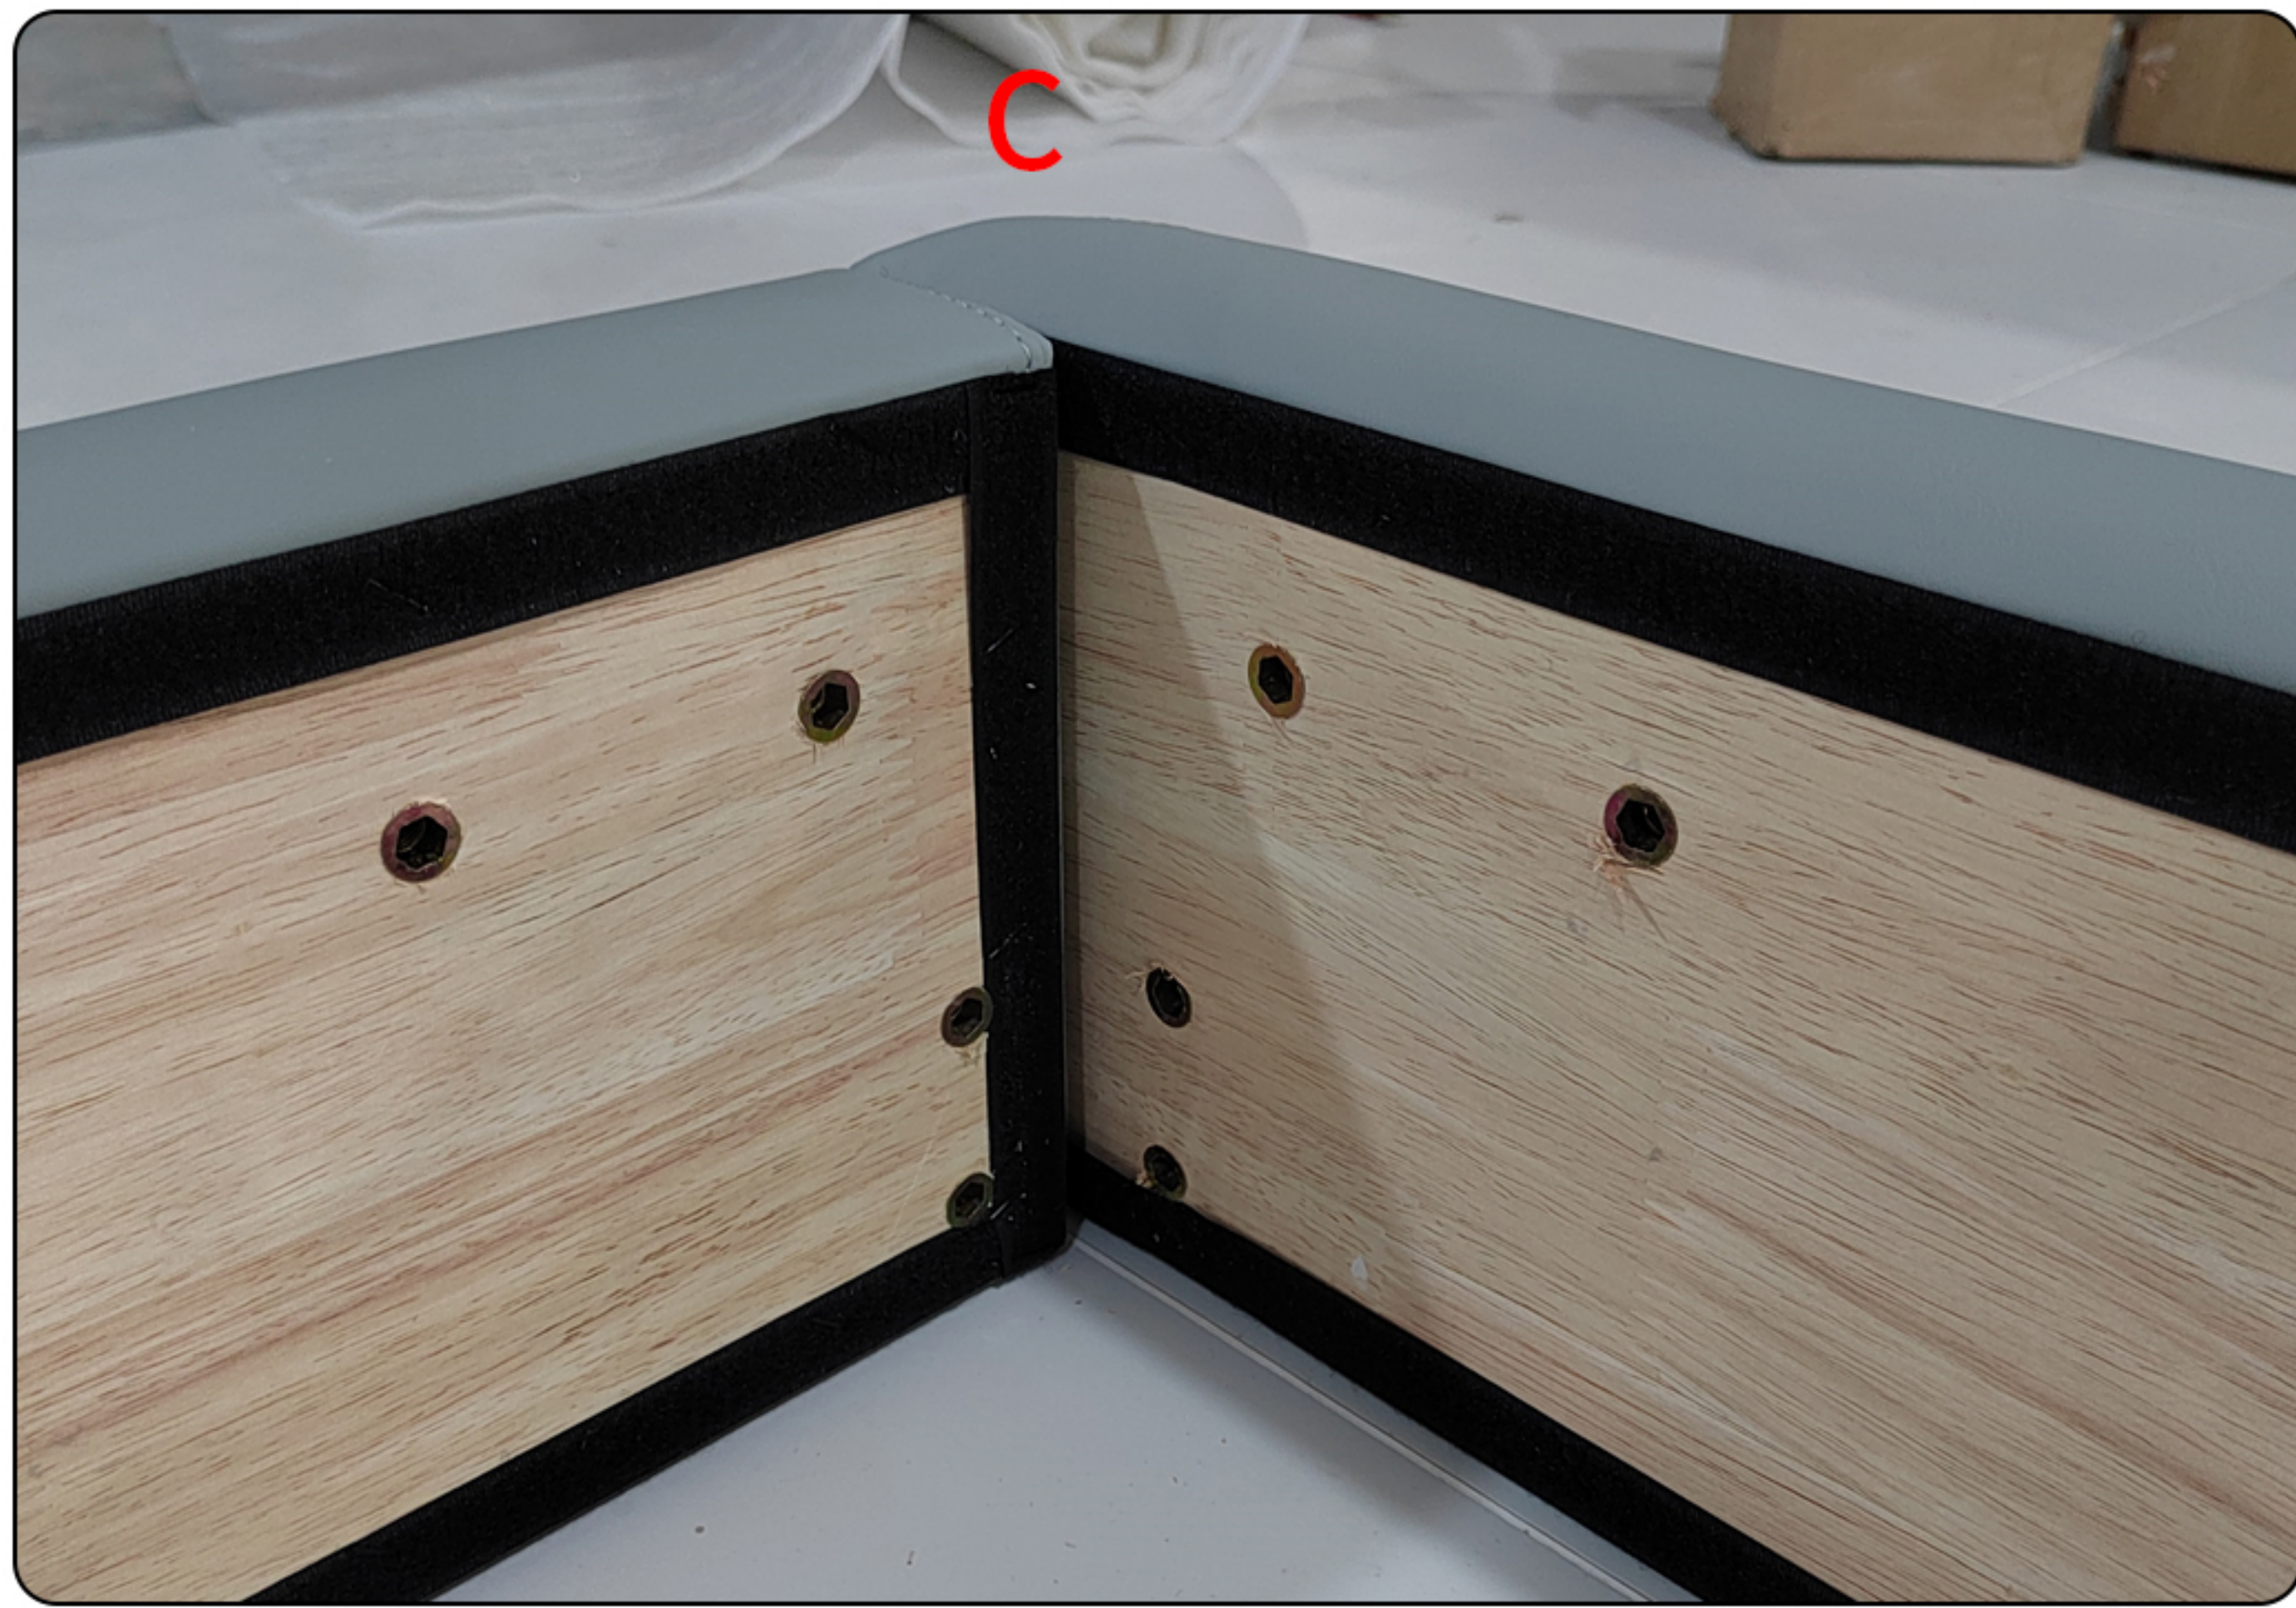




Step 3

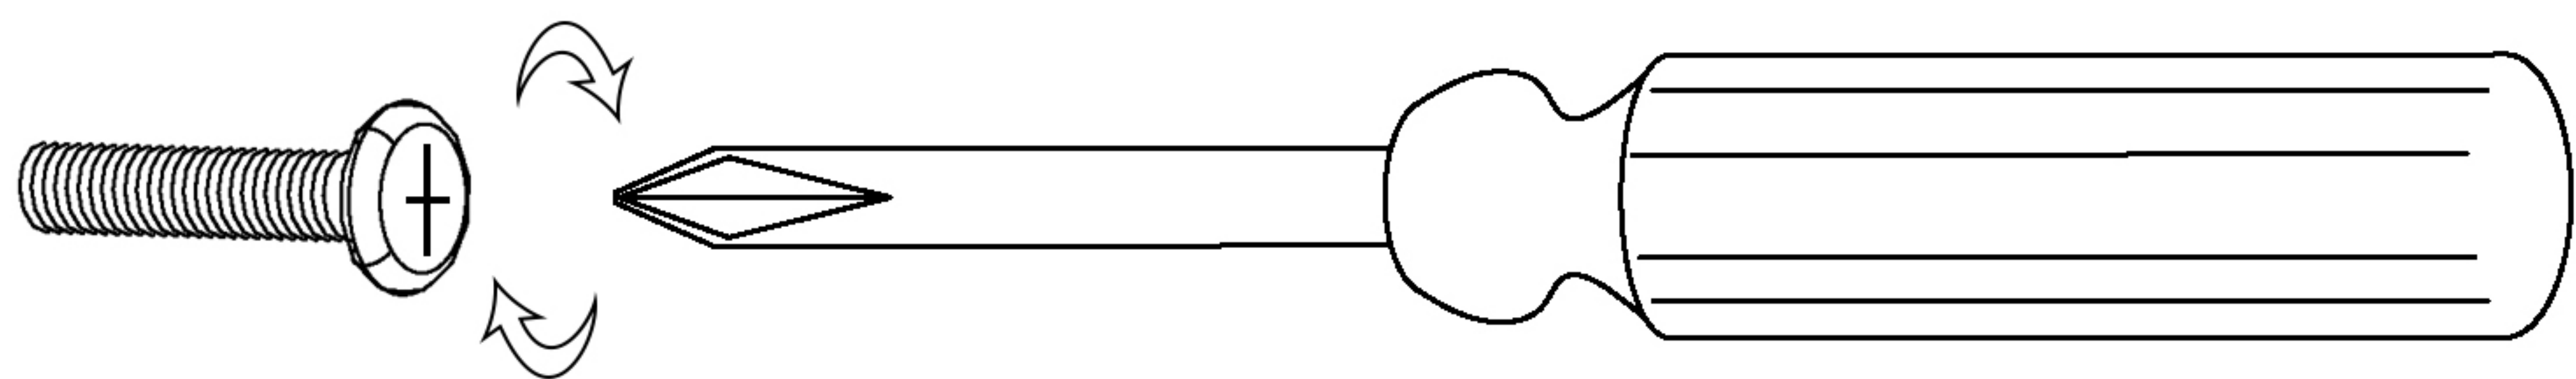

2

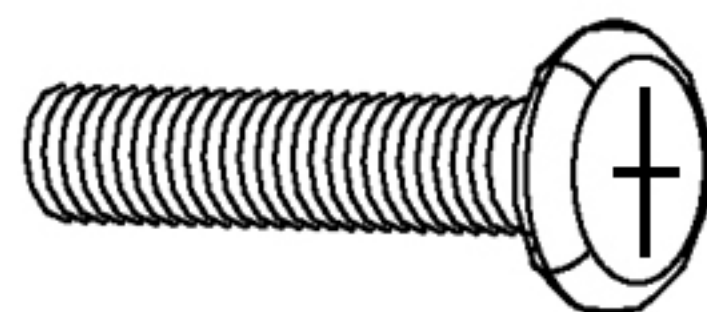

1/4" x 25 mm  
Hex head bolts - 16 pcs

7





52X75mm  
CORNER BRACE-2 pcs

8




40X175mm  
CORNER BRACE-2 pcs

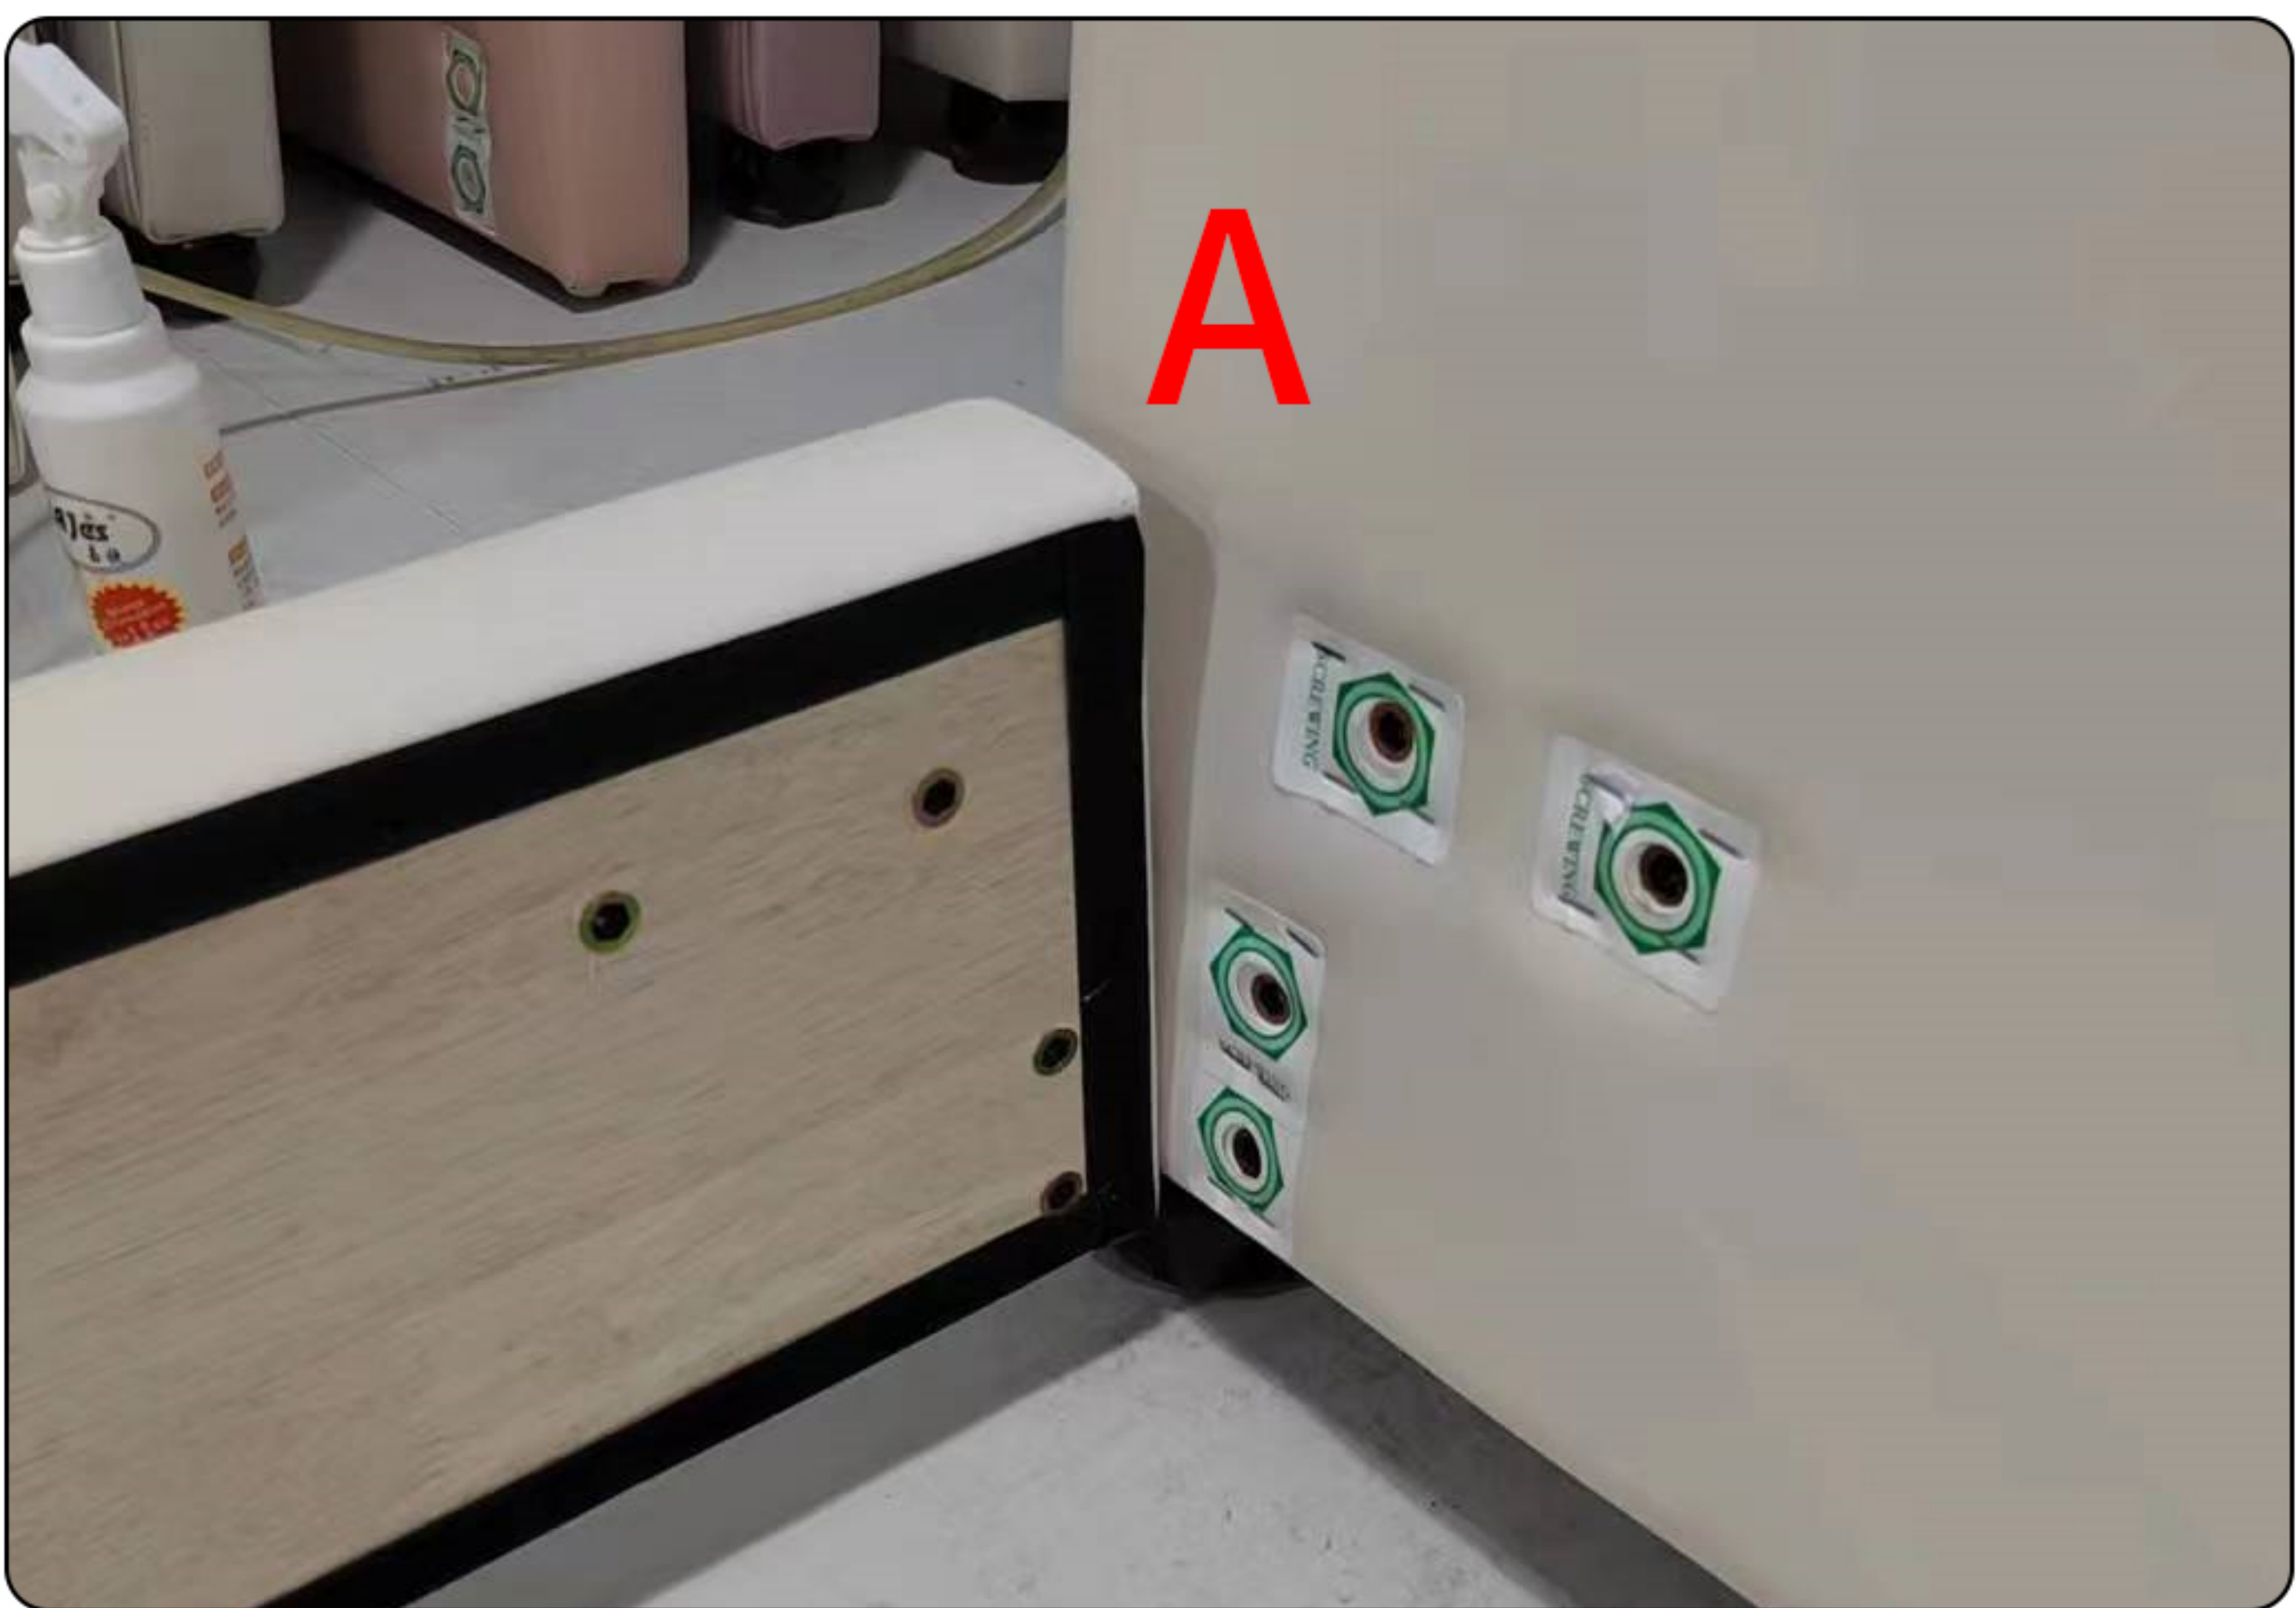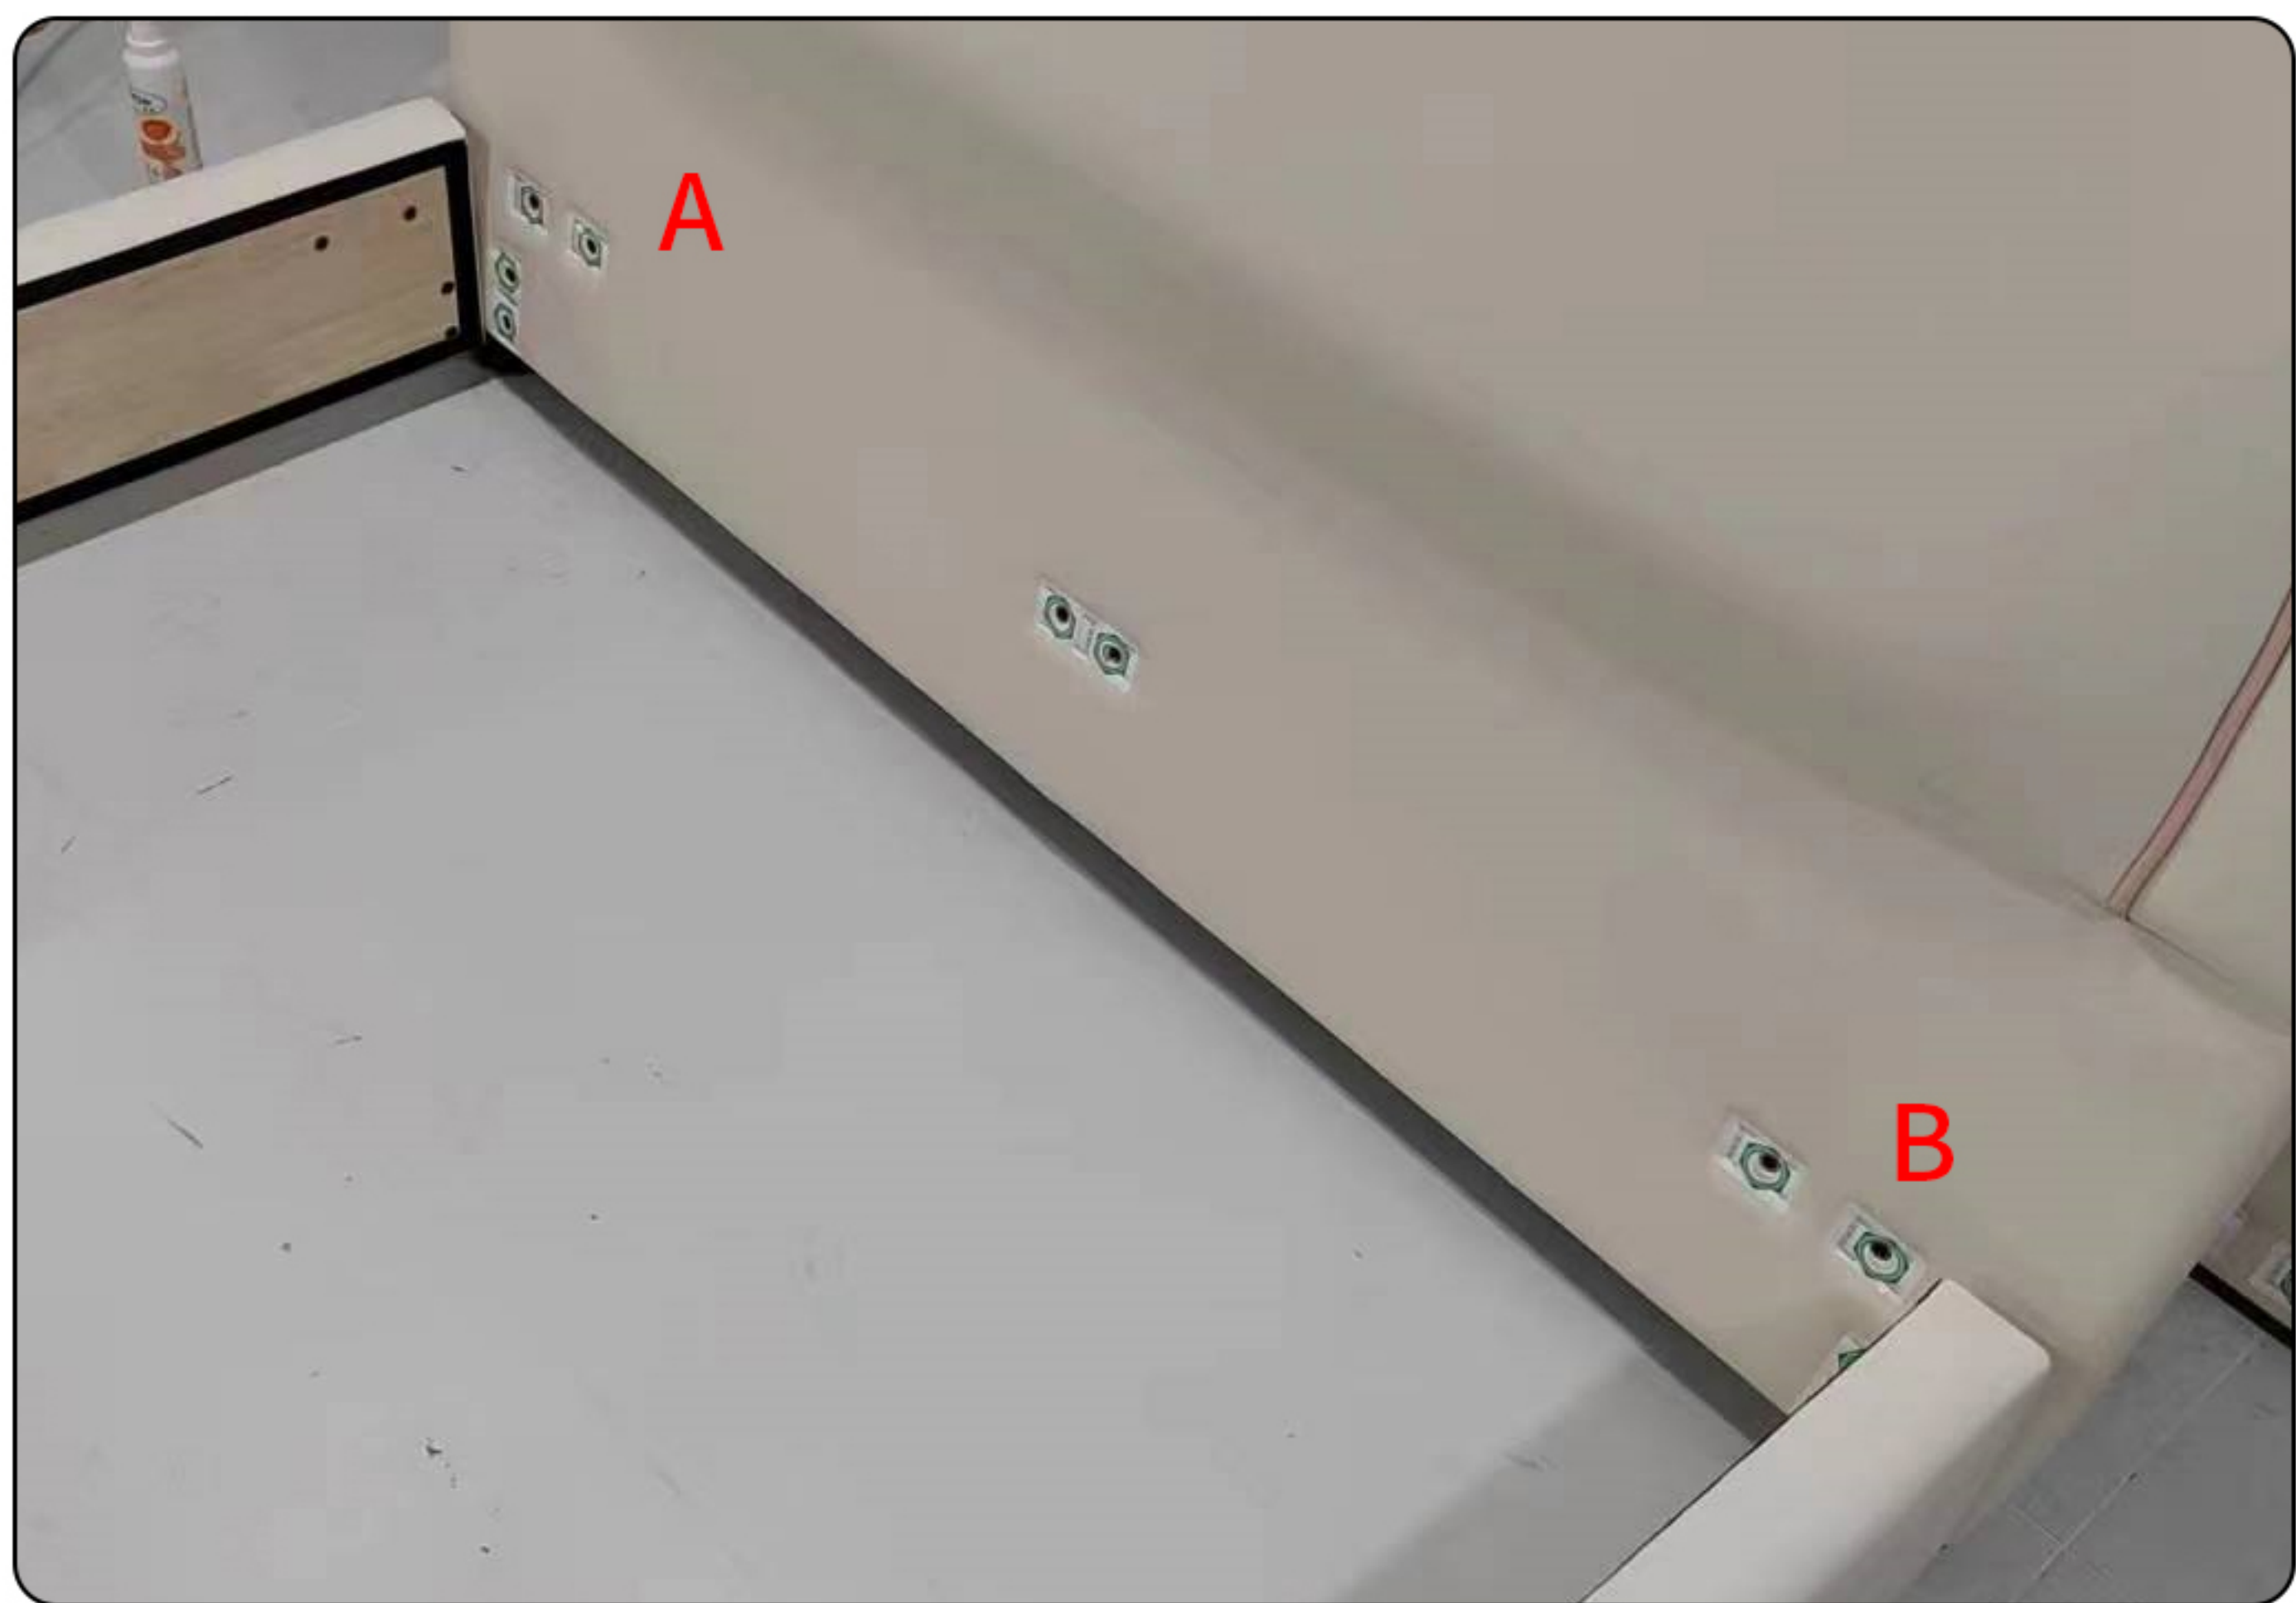

Step 4

2

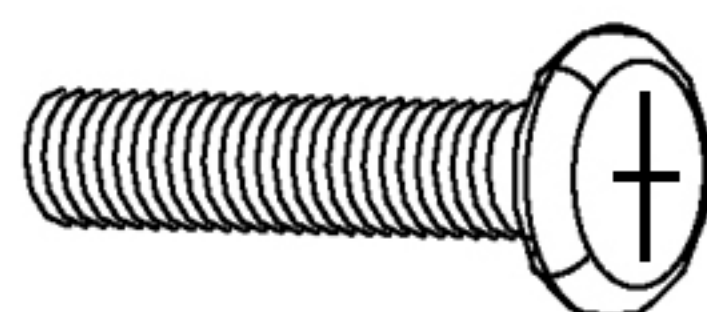


1/4" x 25 mm  
Hex head bolts - 8 pcs

6





41X99MM  
CORNER BRACE-4 pcs

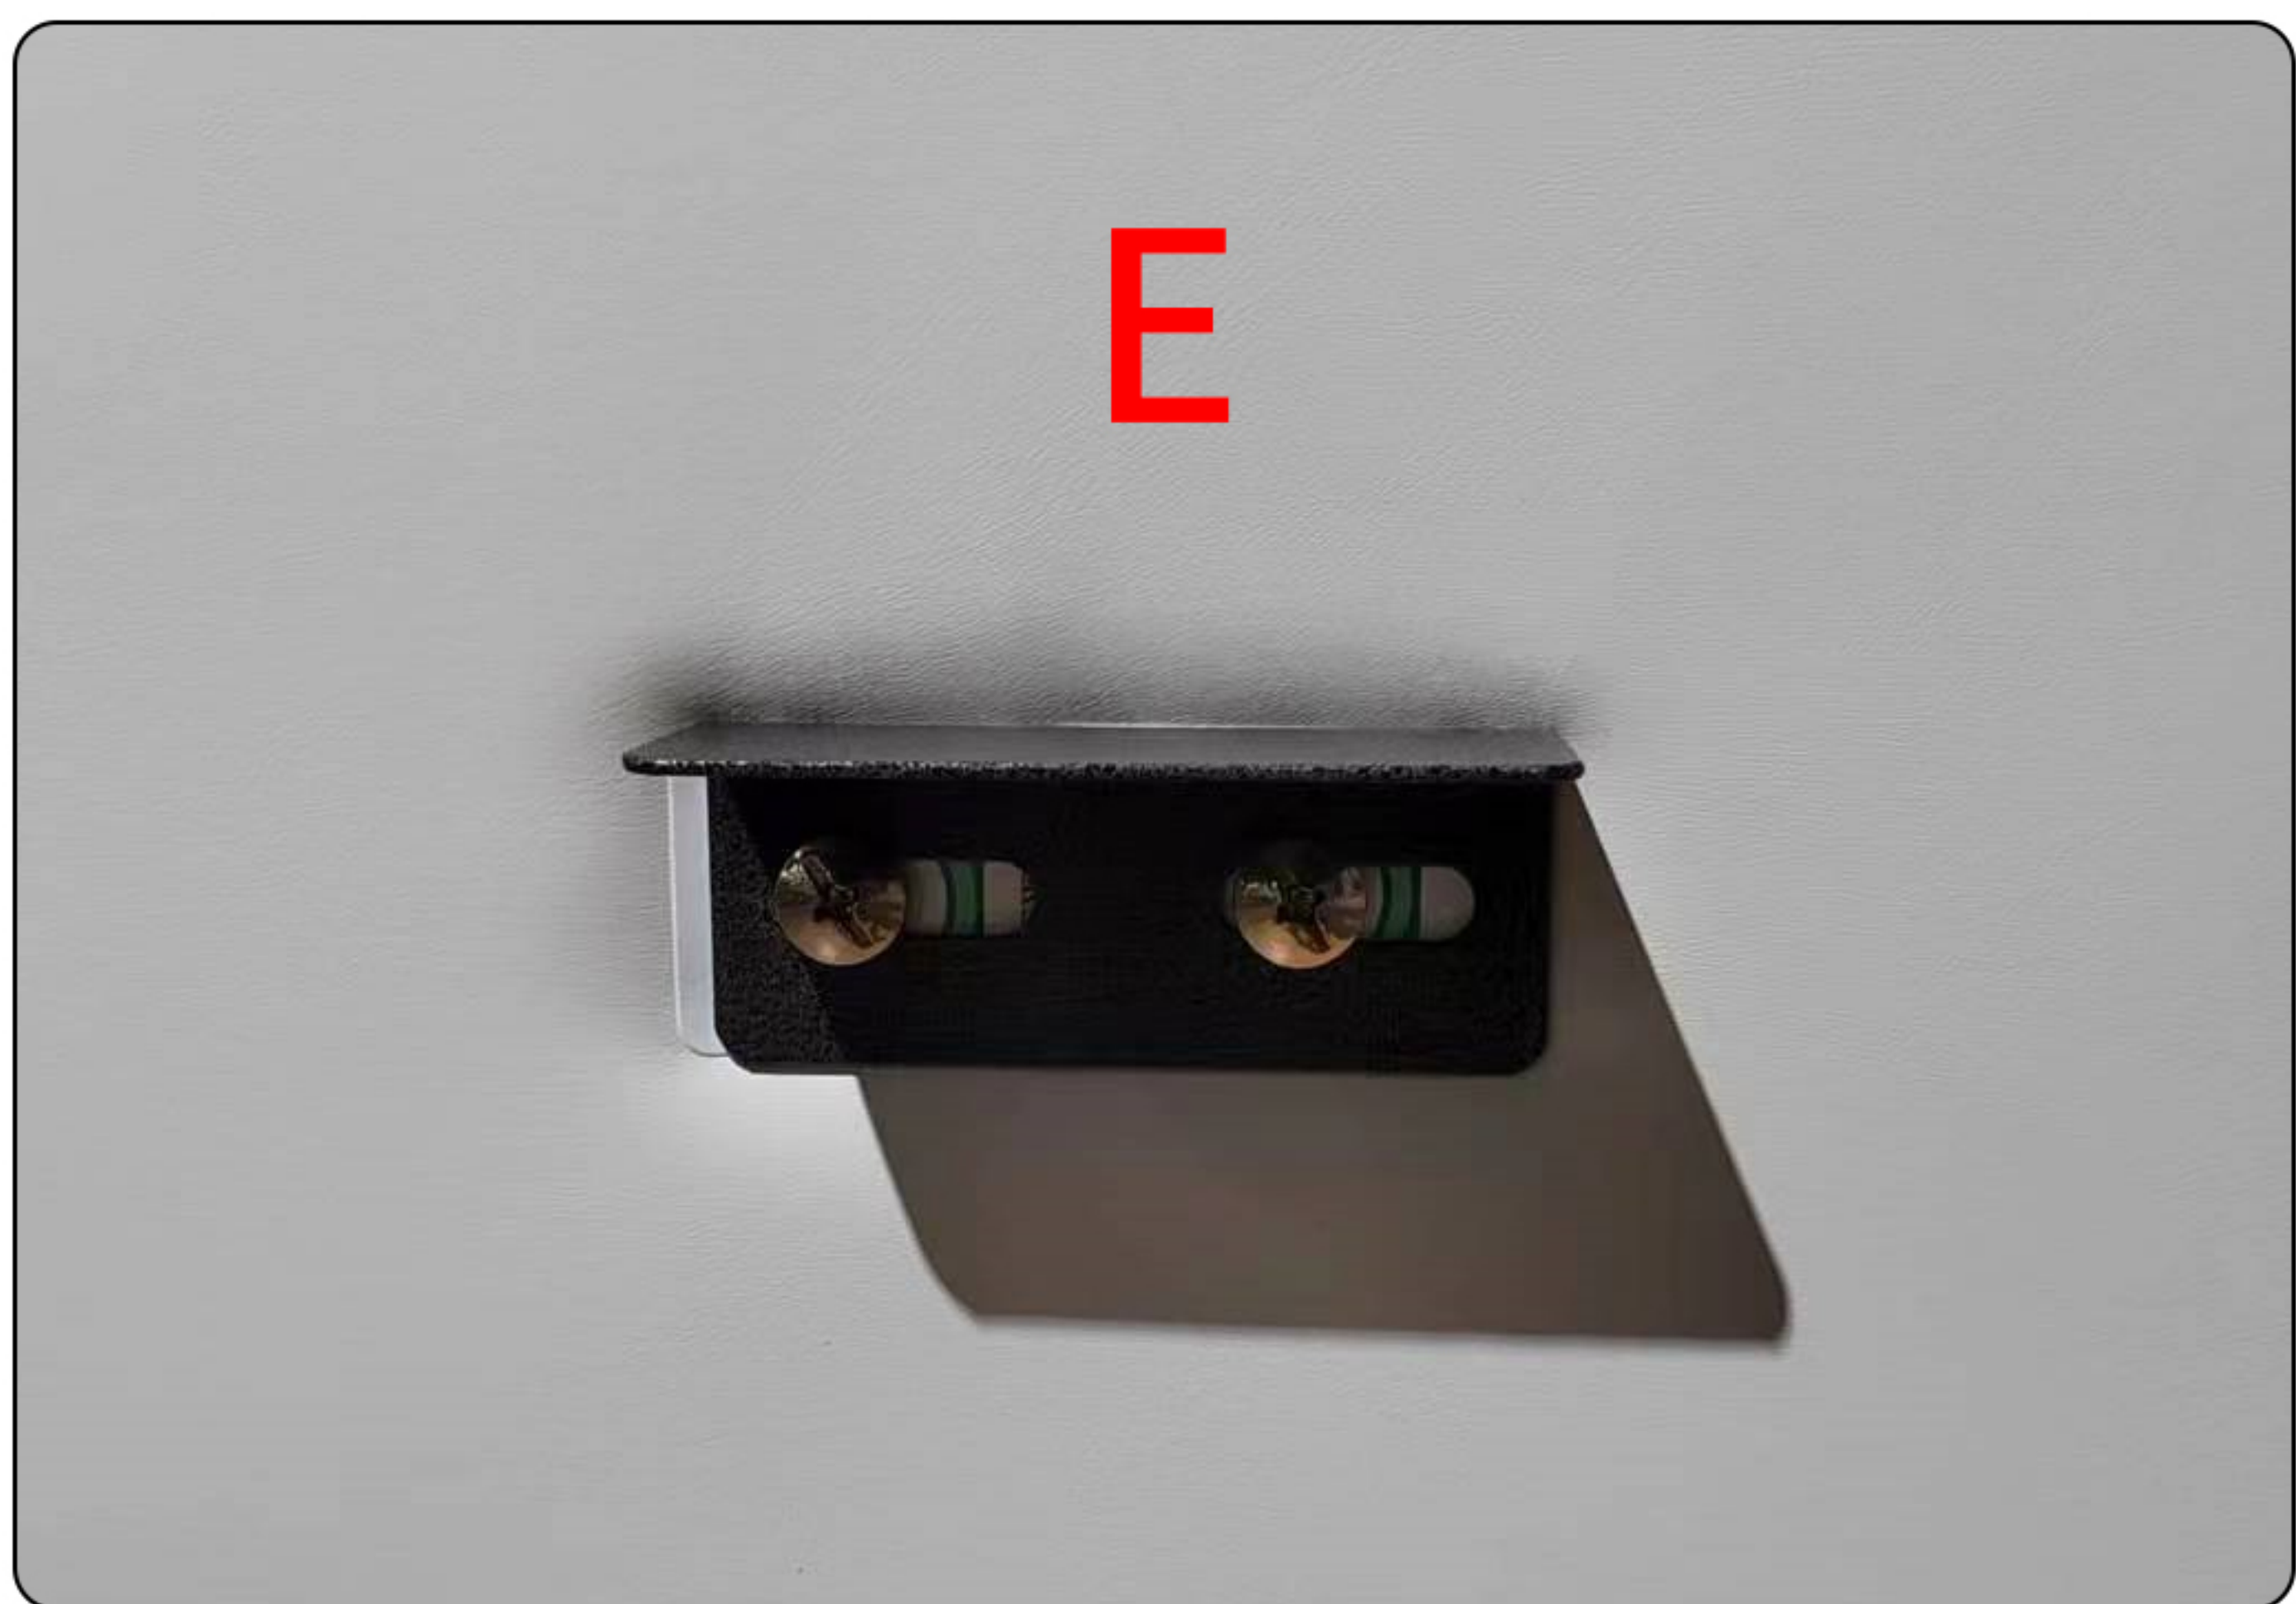





## Step 5

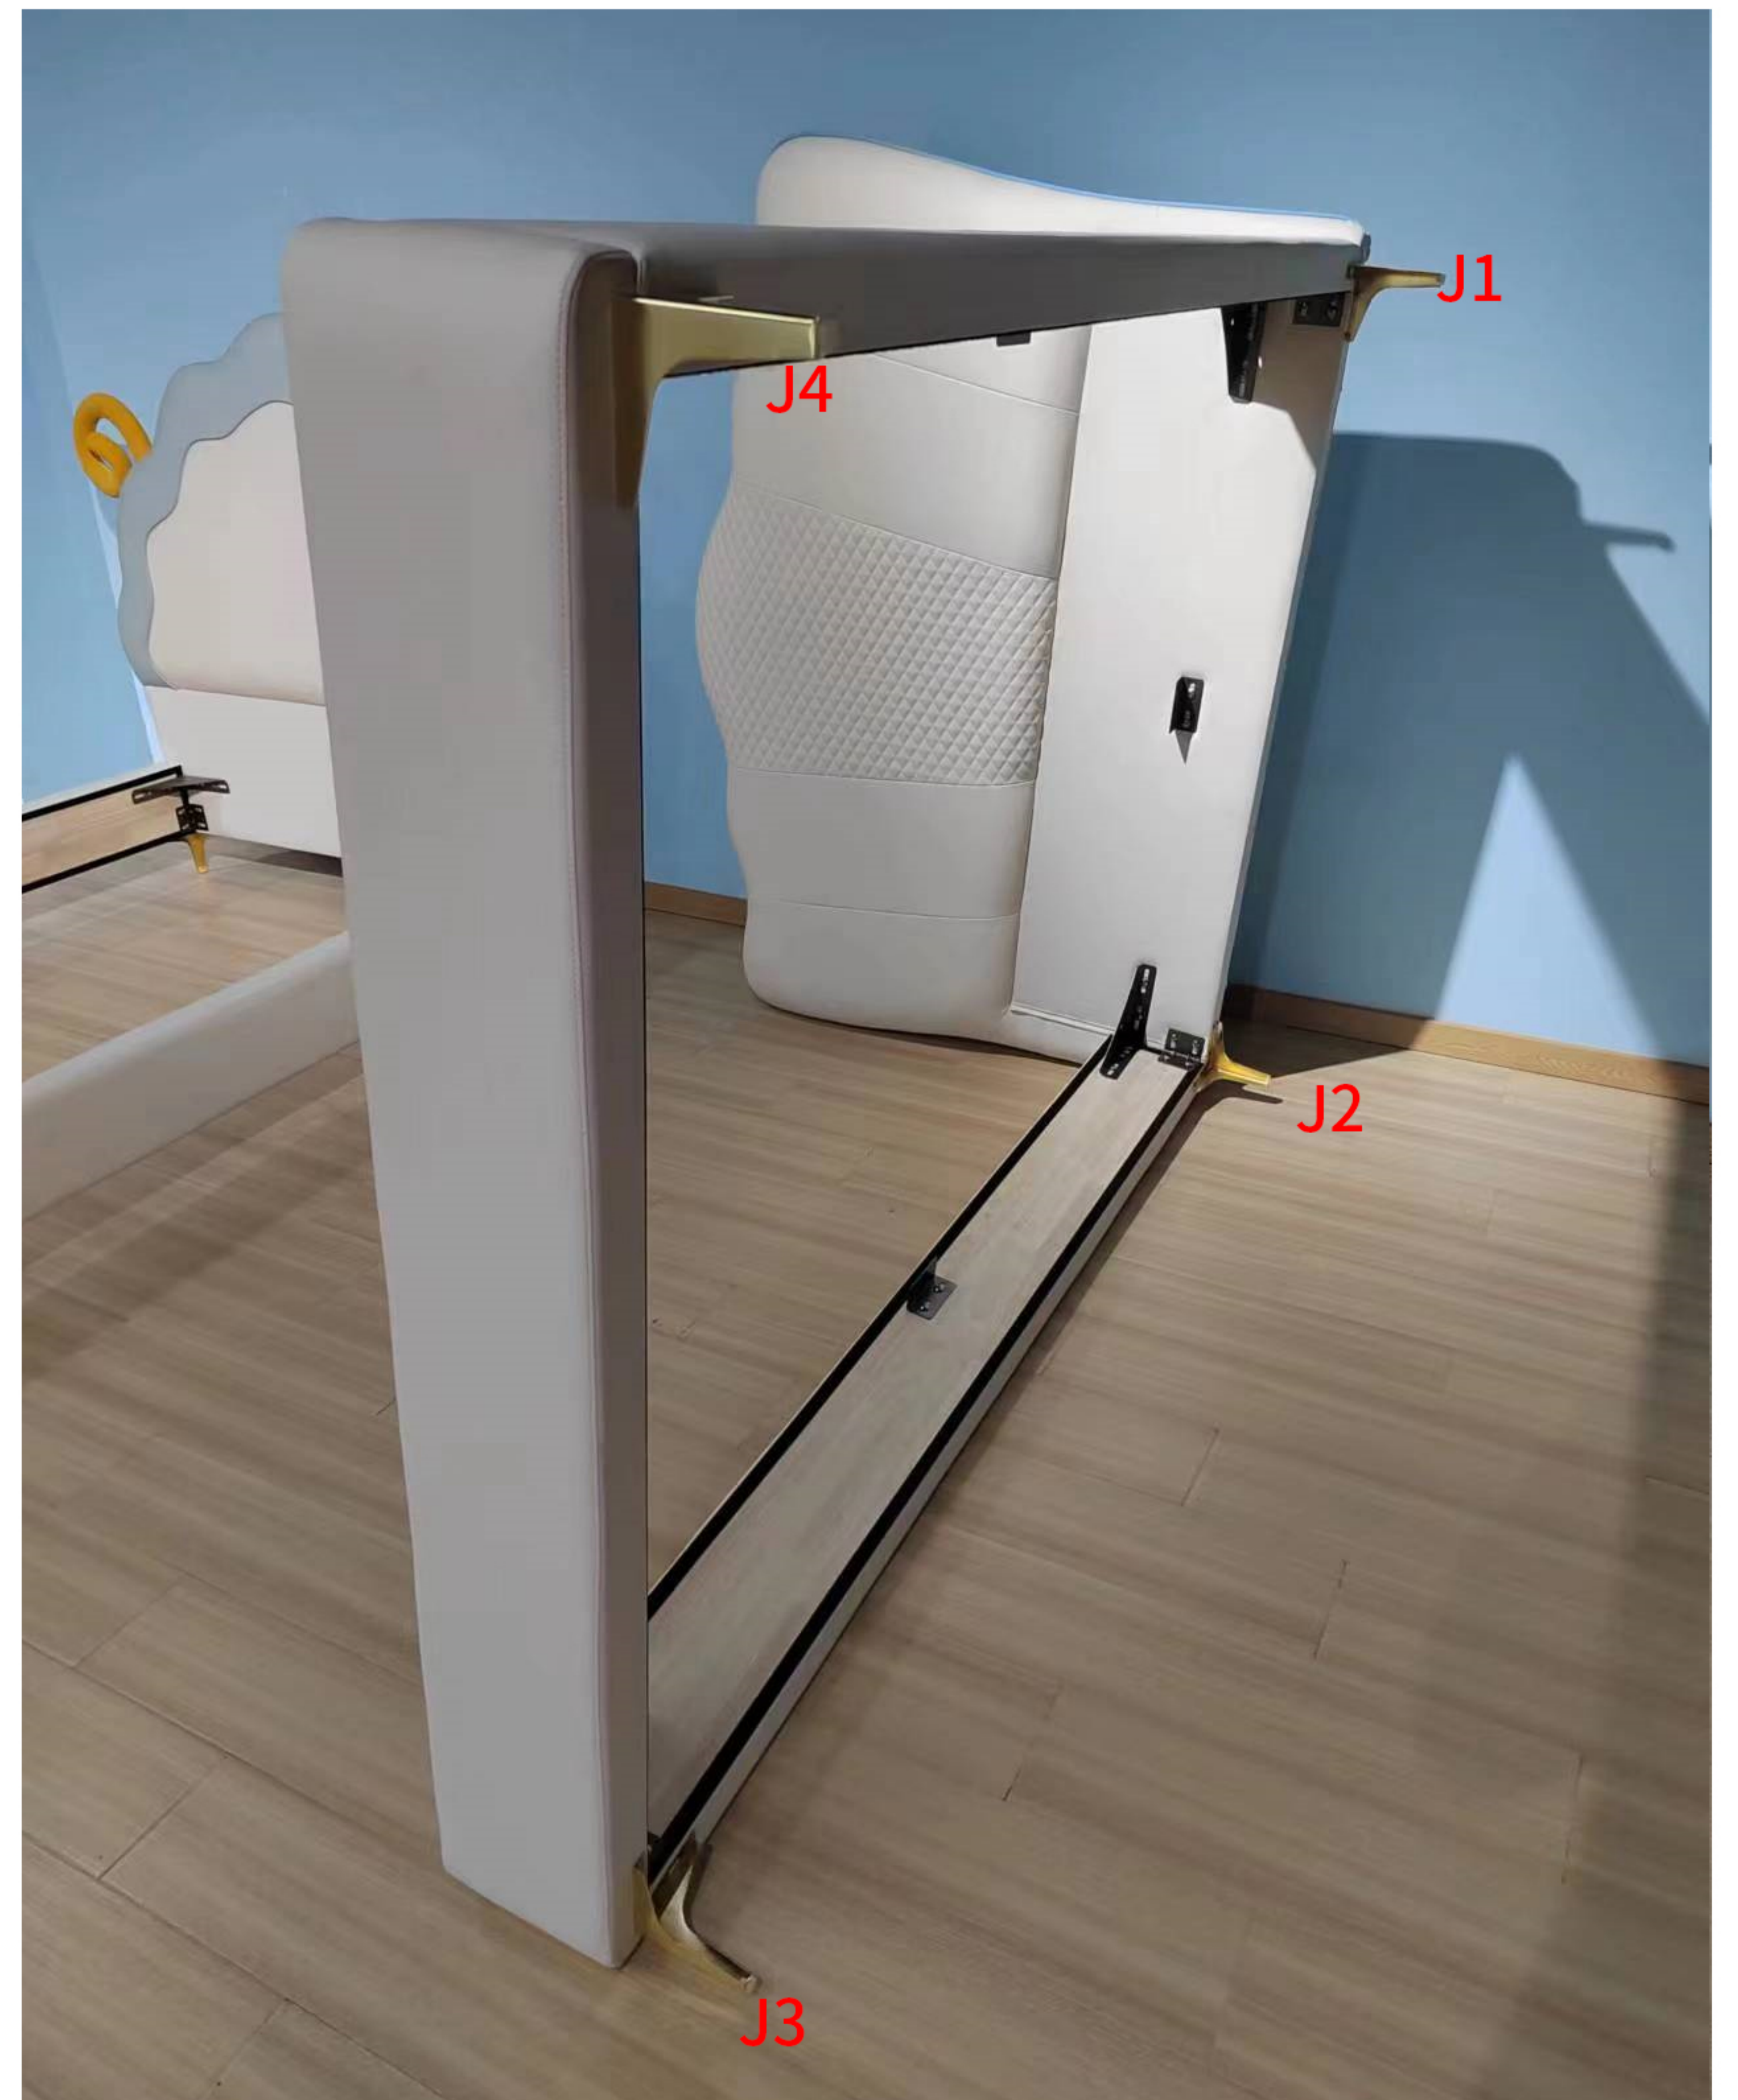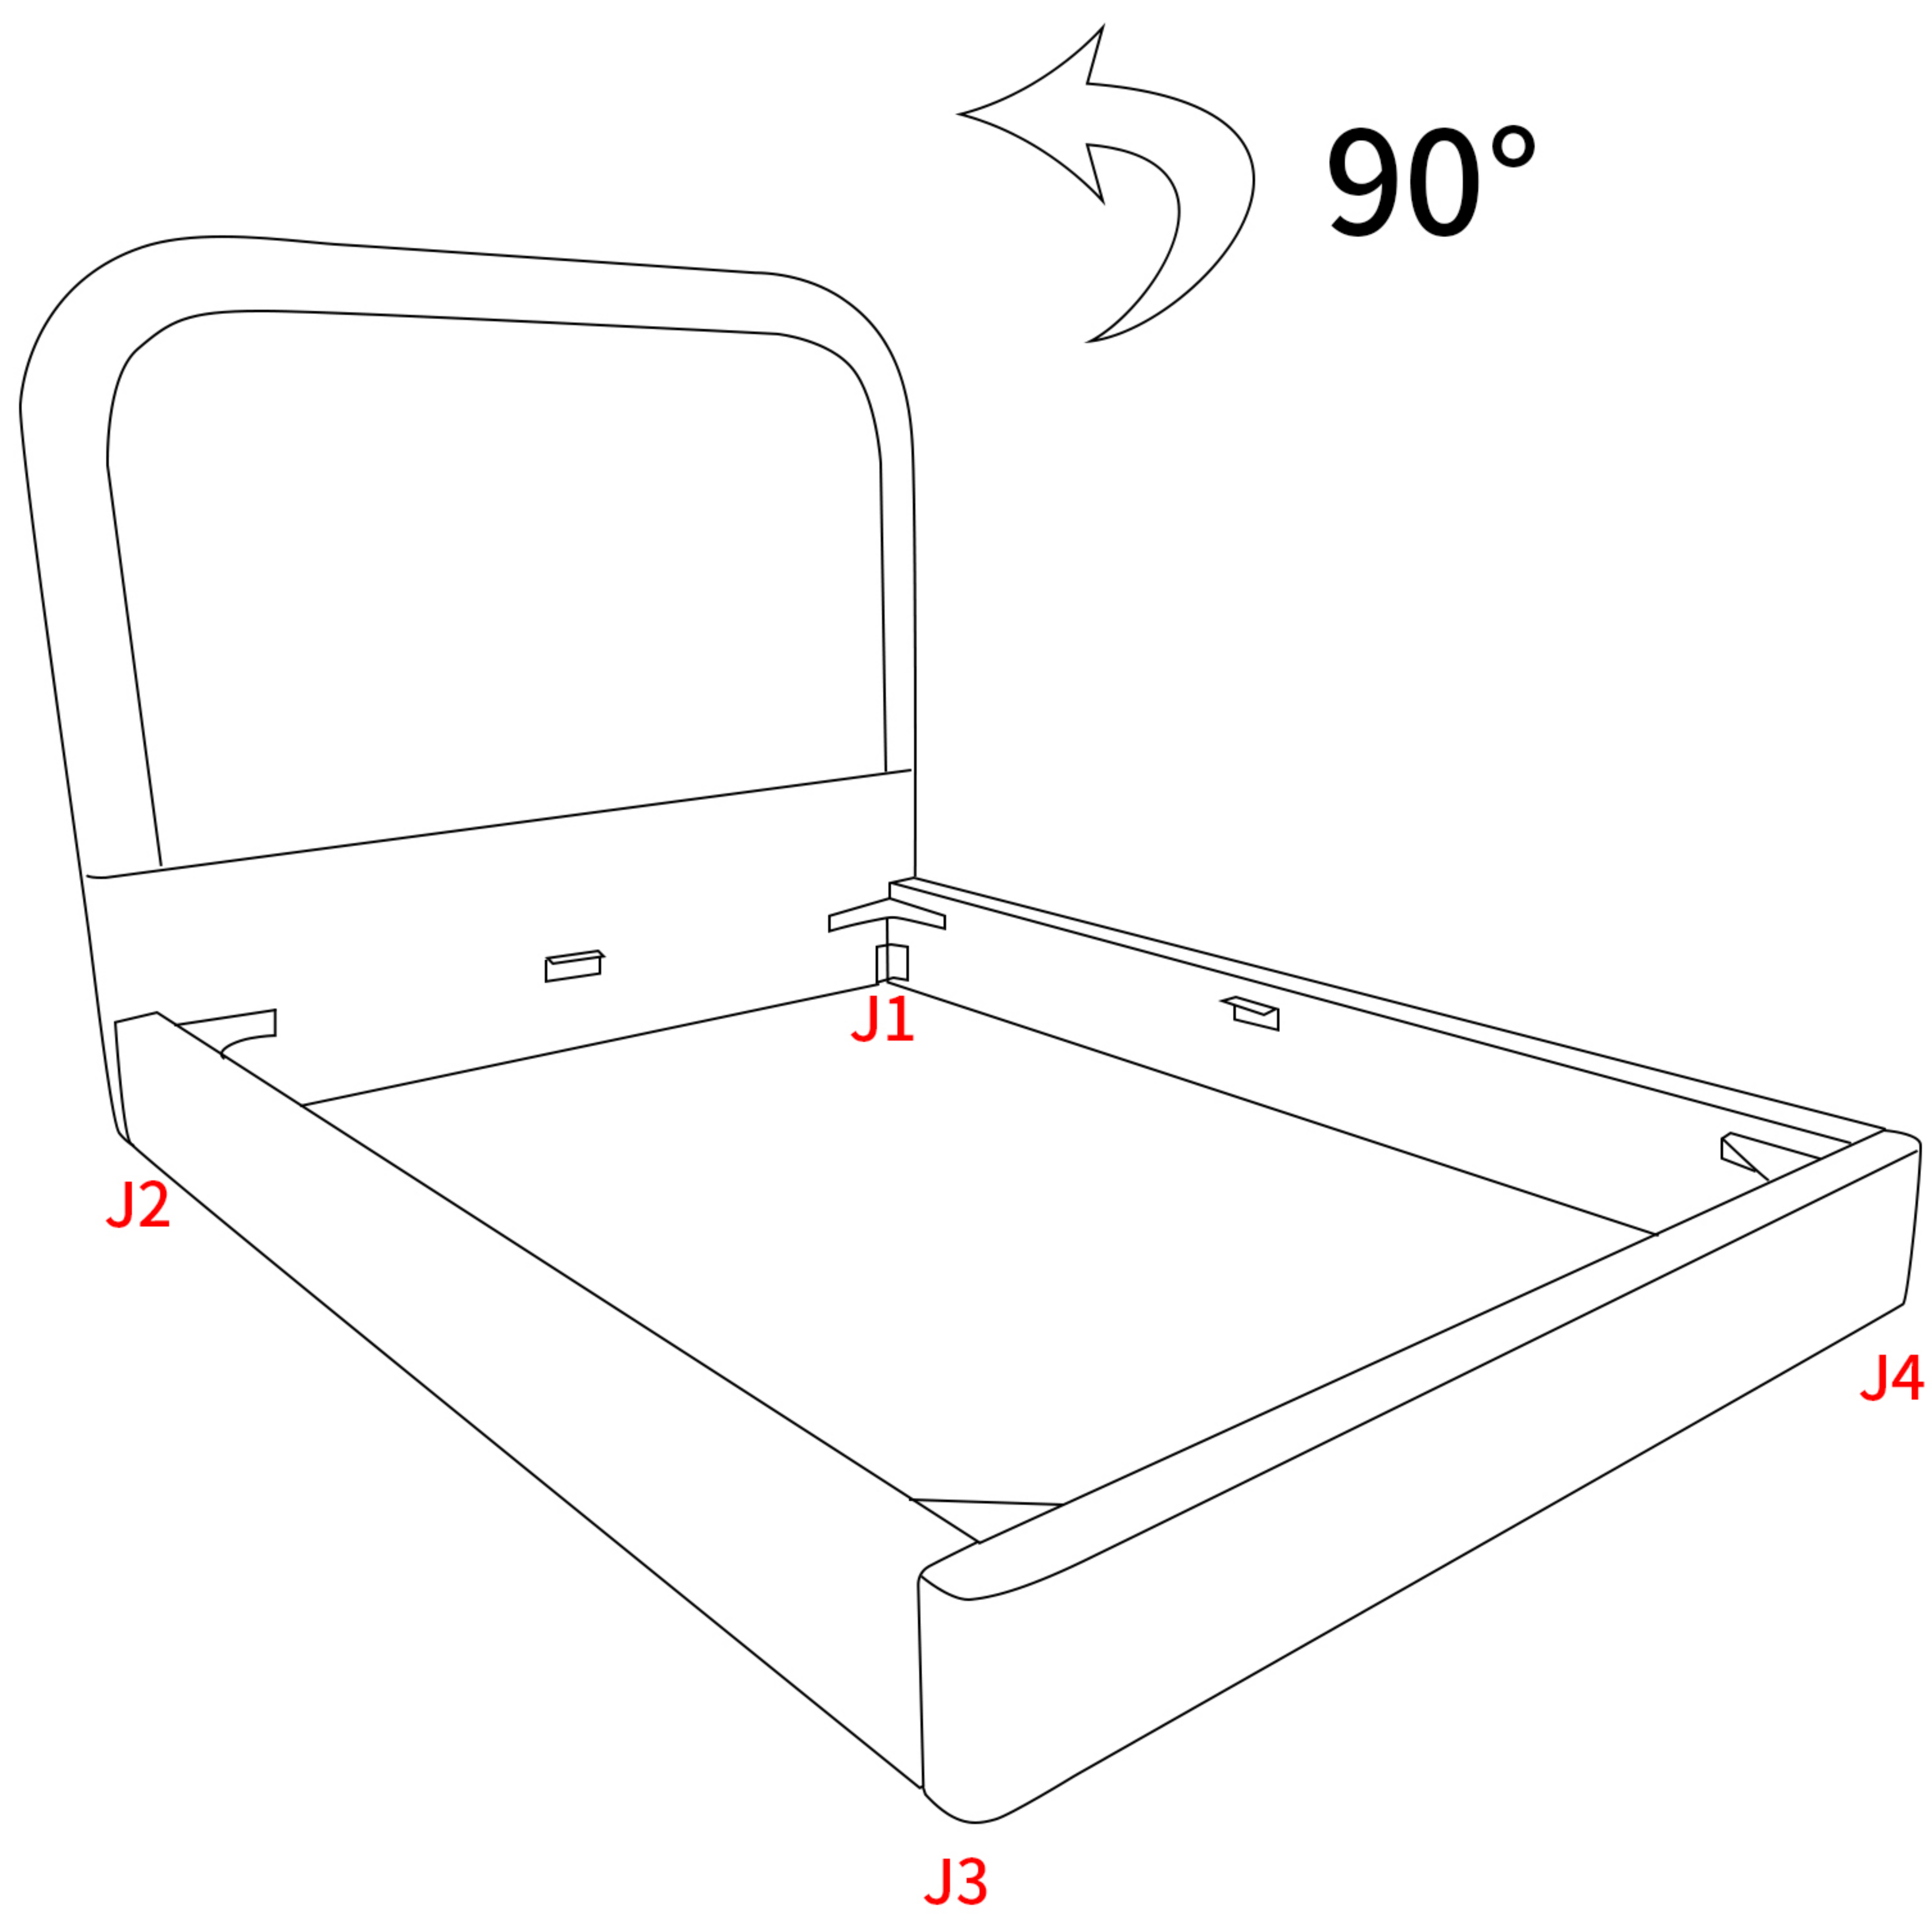

## Step 6

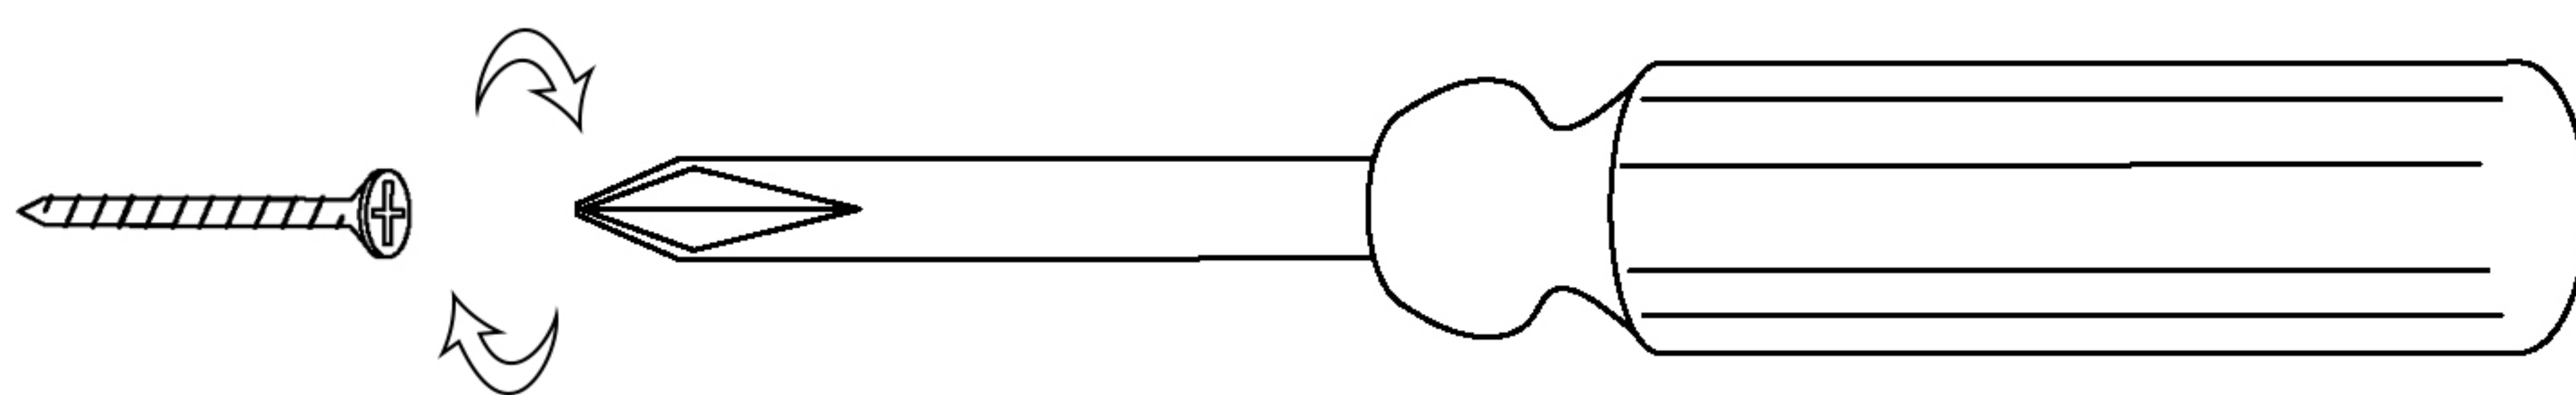

2




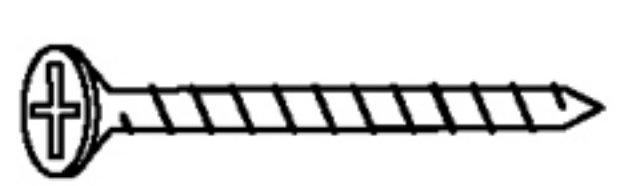


m4 x 25  
Wood screws - 12 pcs

9




131X111mm  
BED FOOT-4 pcs

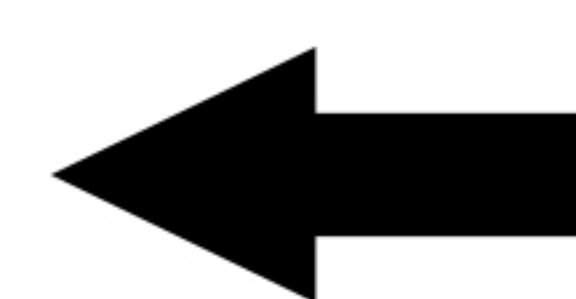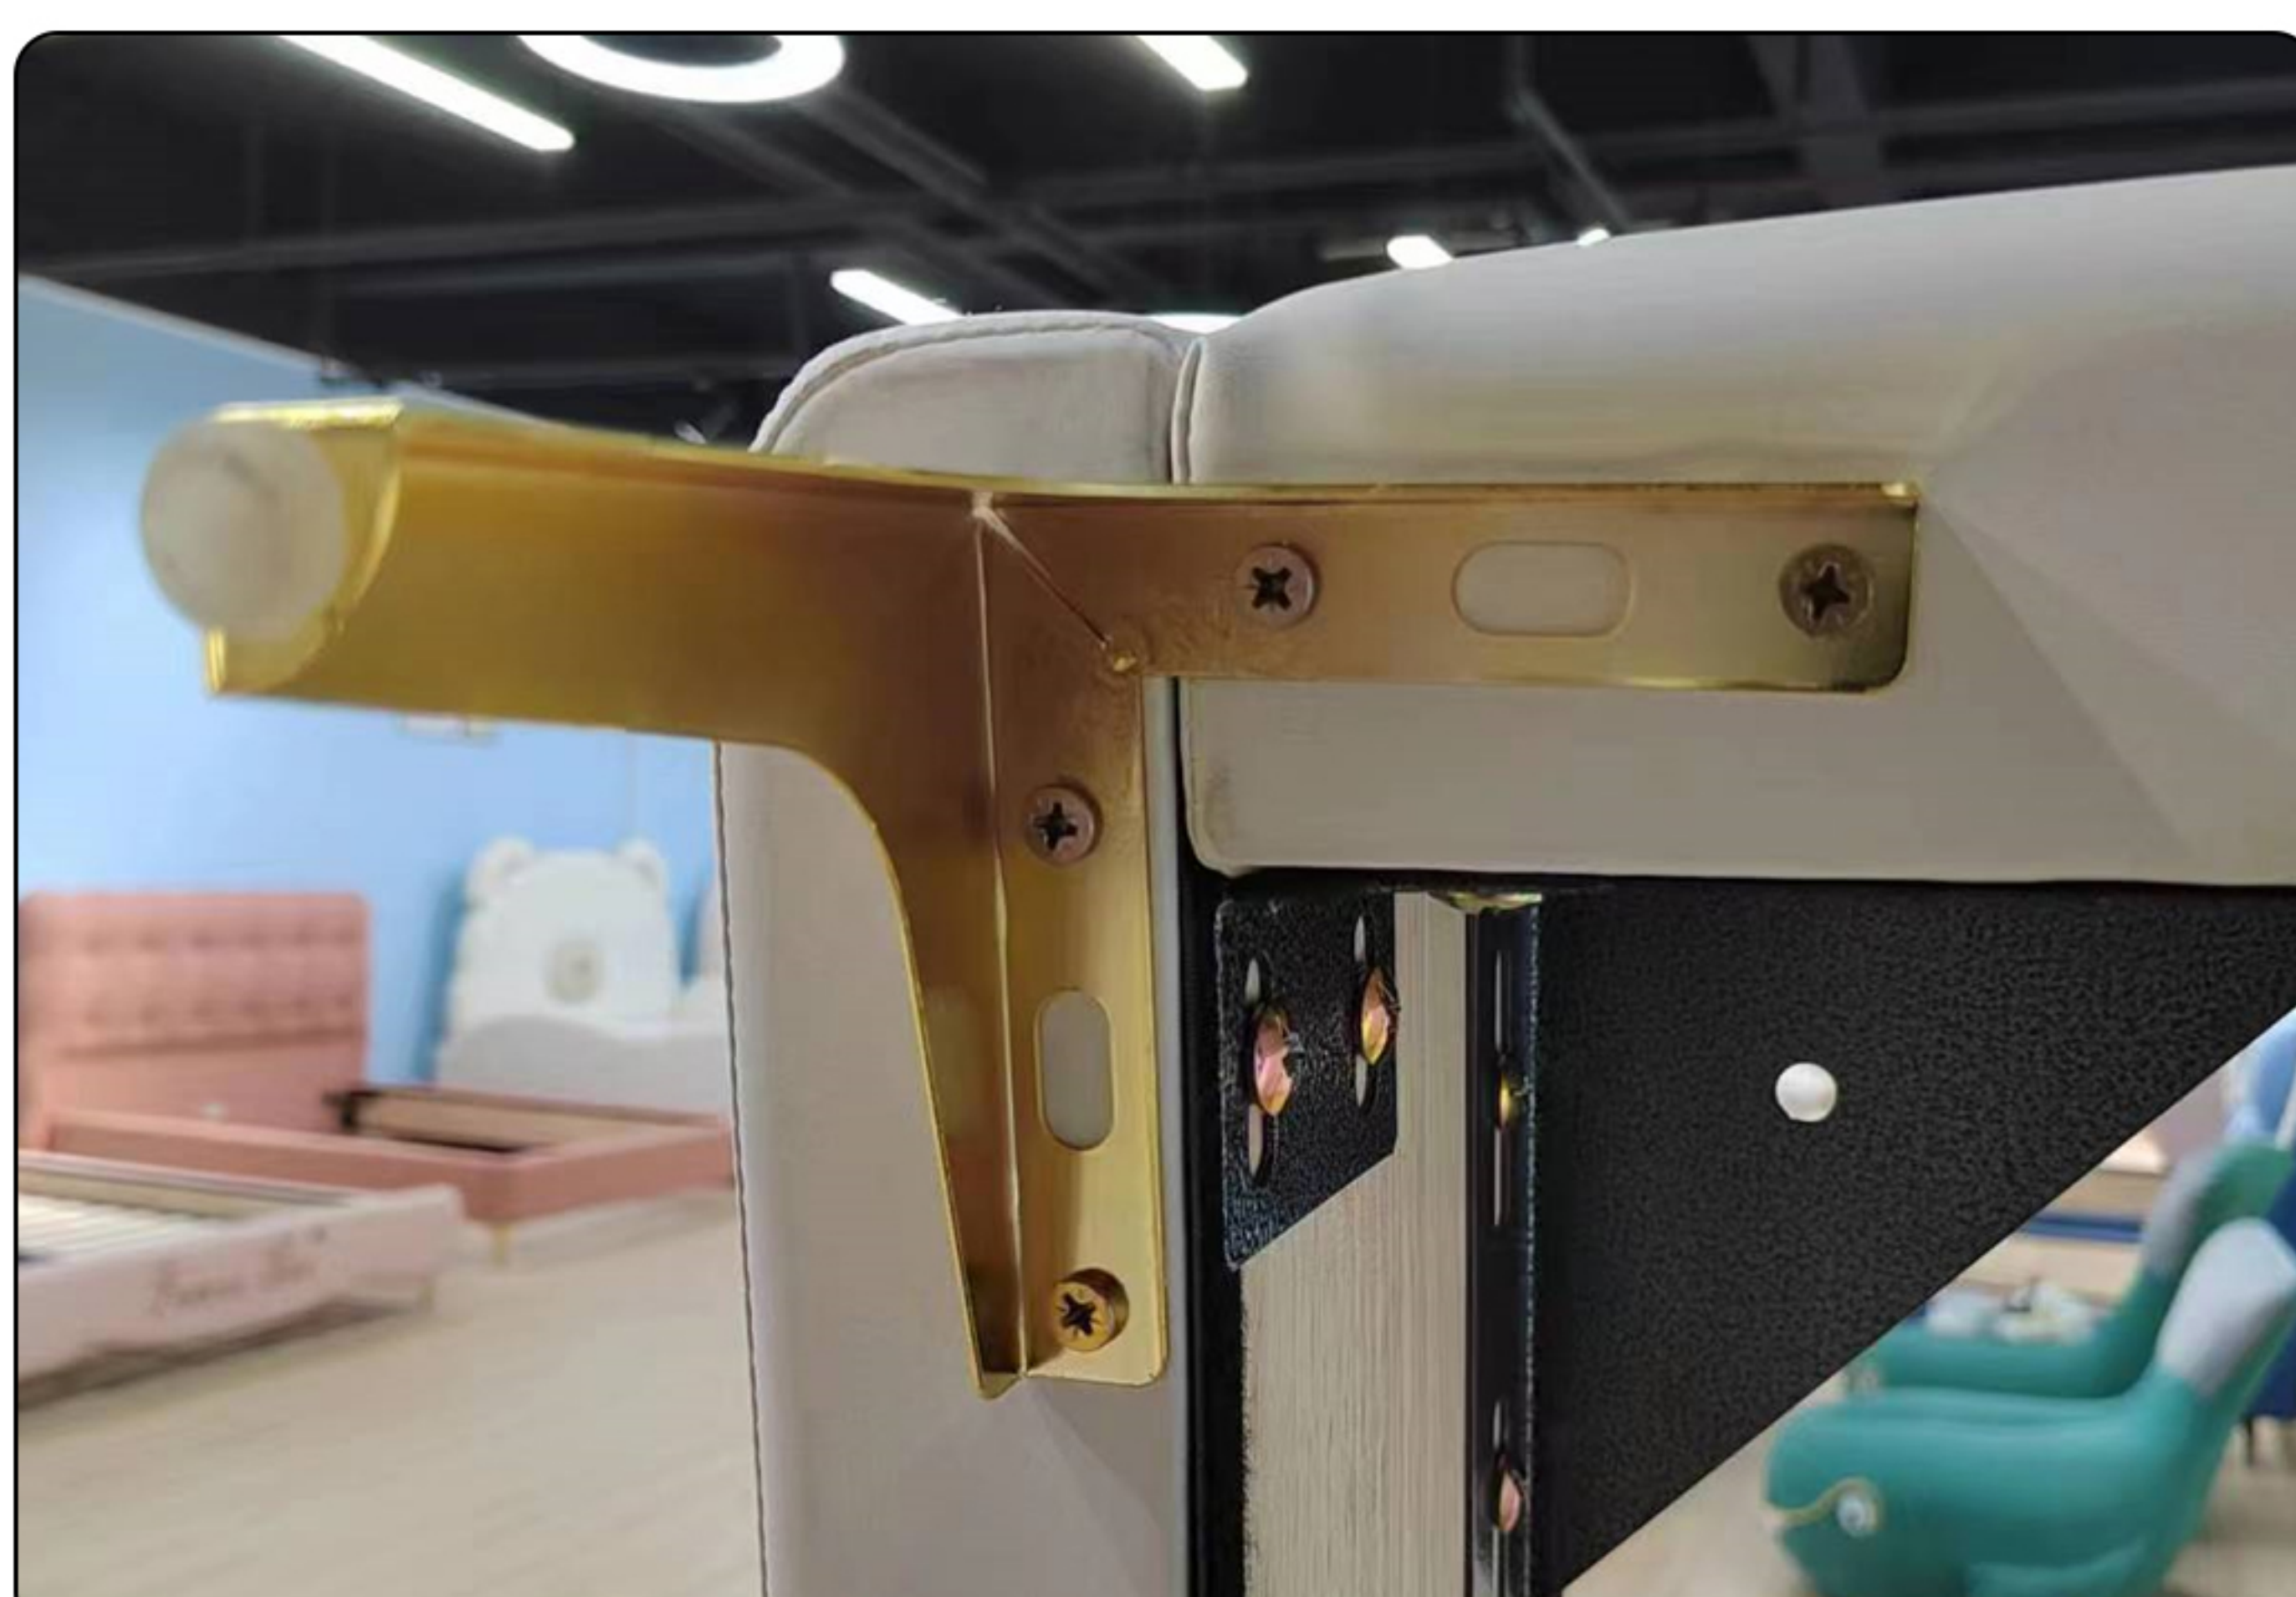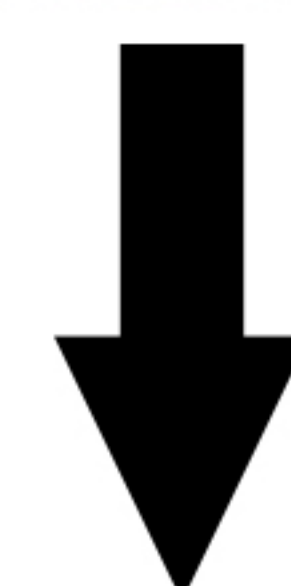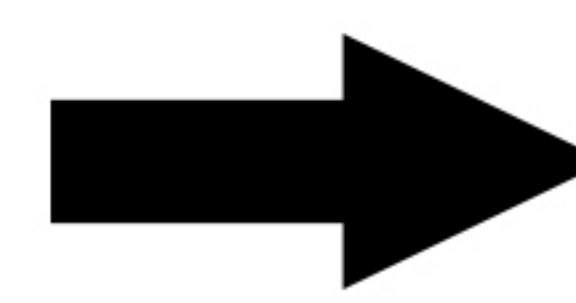



Step 7

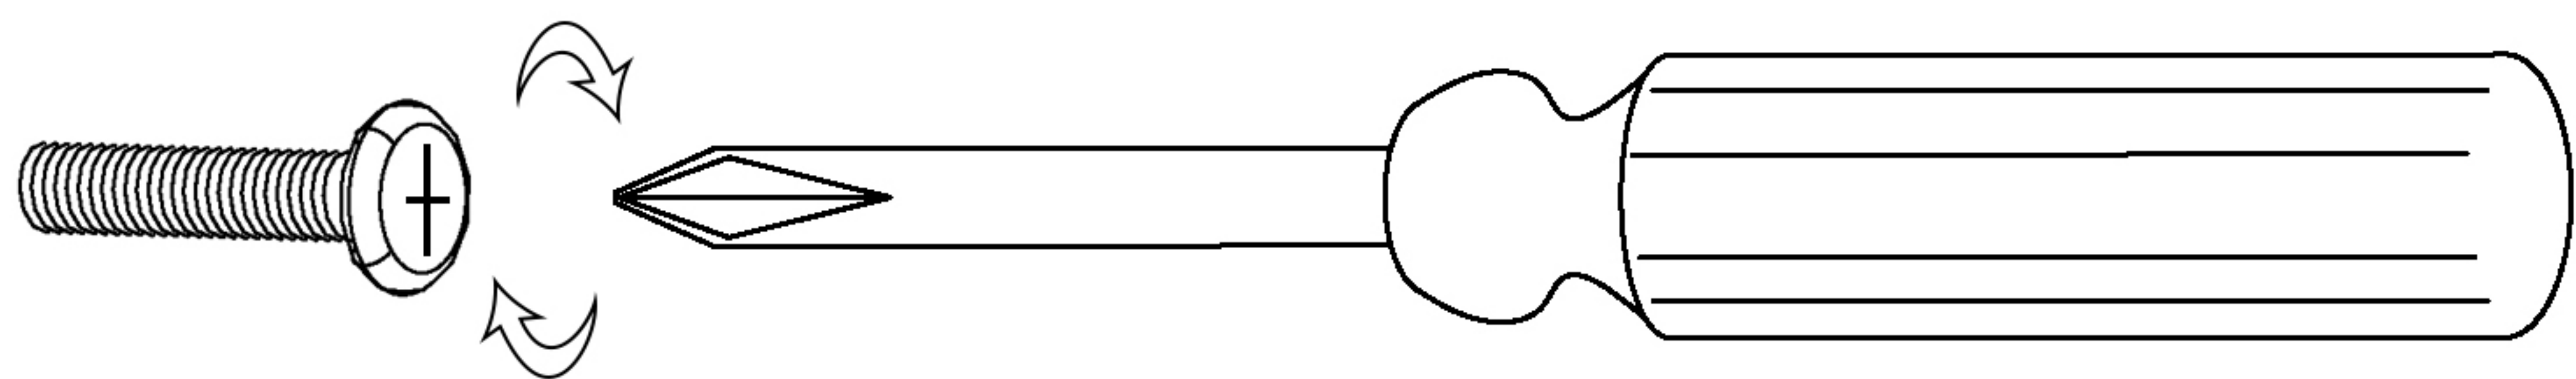


10




111X197-330mm  
ADJUSTER FOOT-2 pcs

1


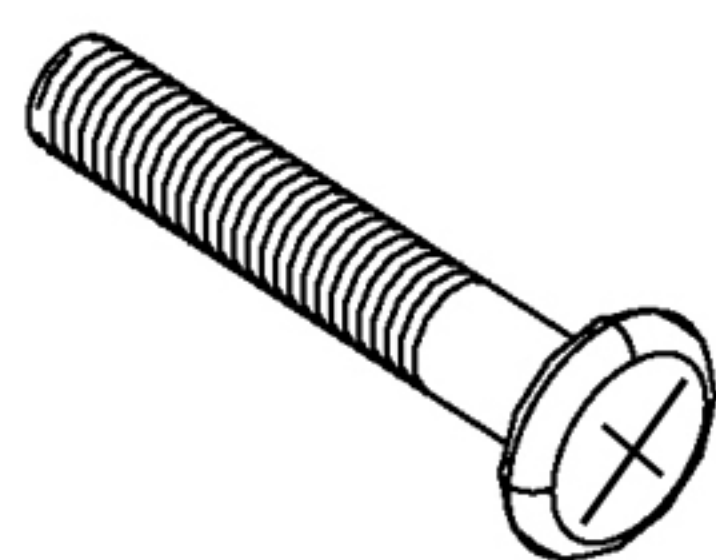


1/4" x 55 mm  
Hex head bolts - 4 pcs

4

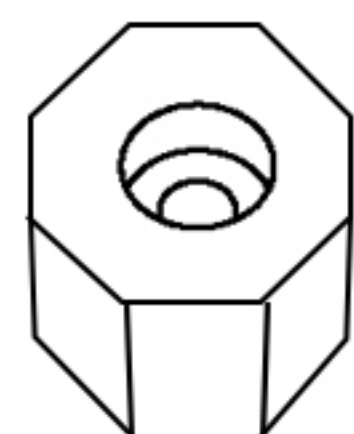

connecting bar - 4 pcs

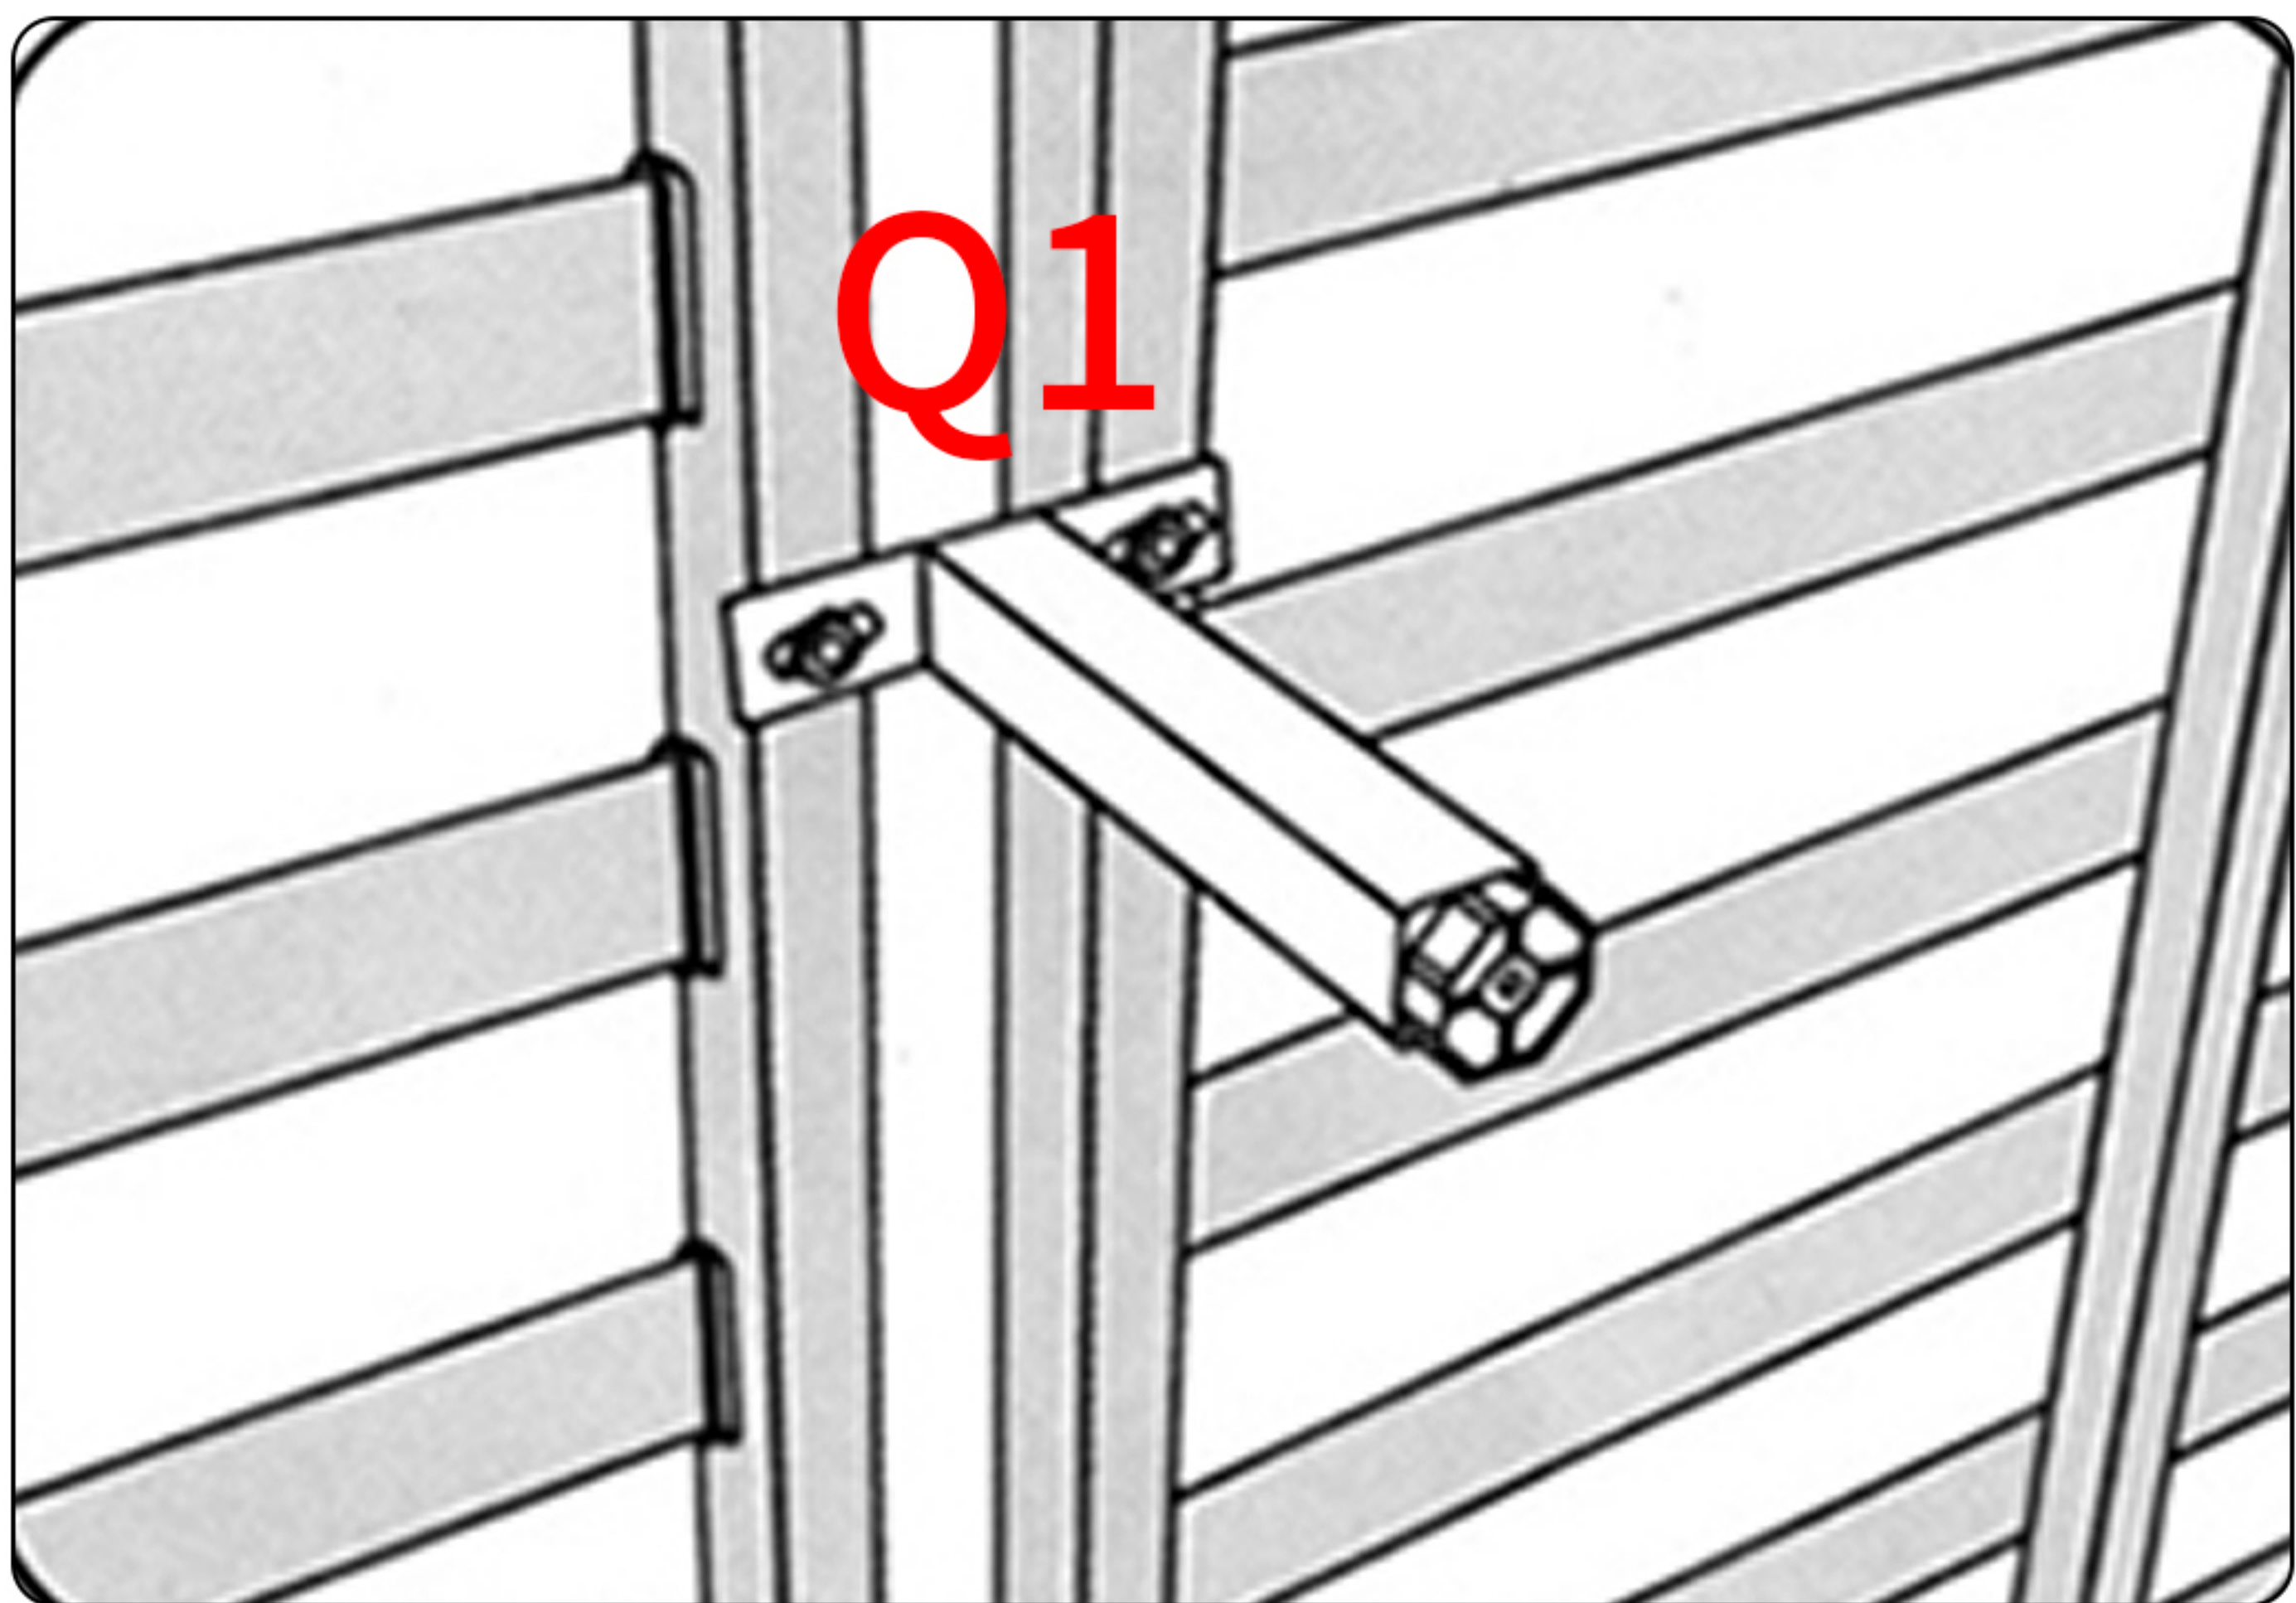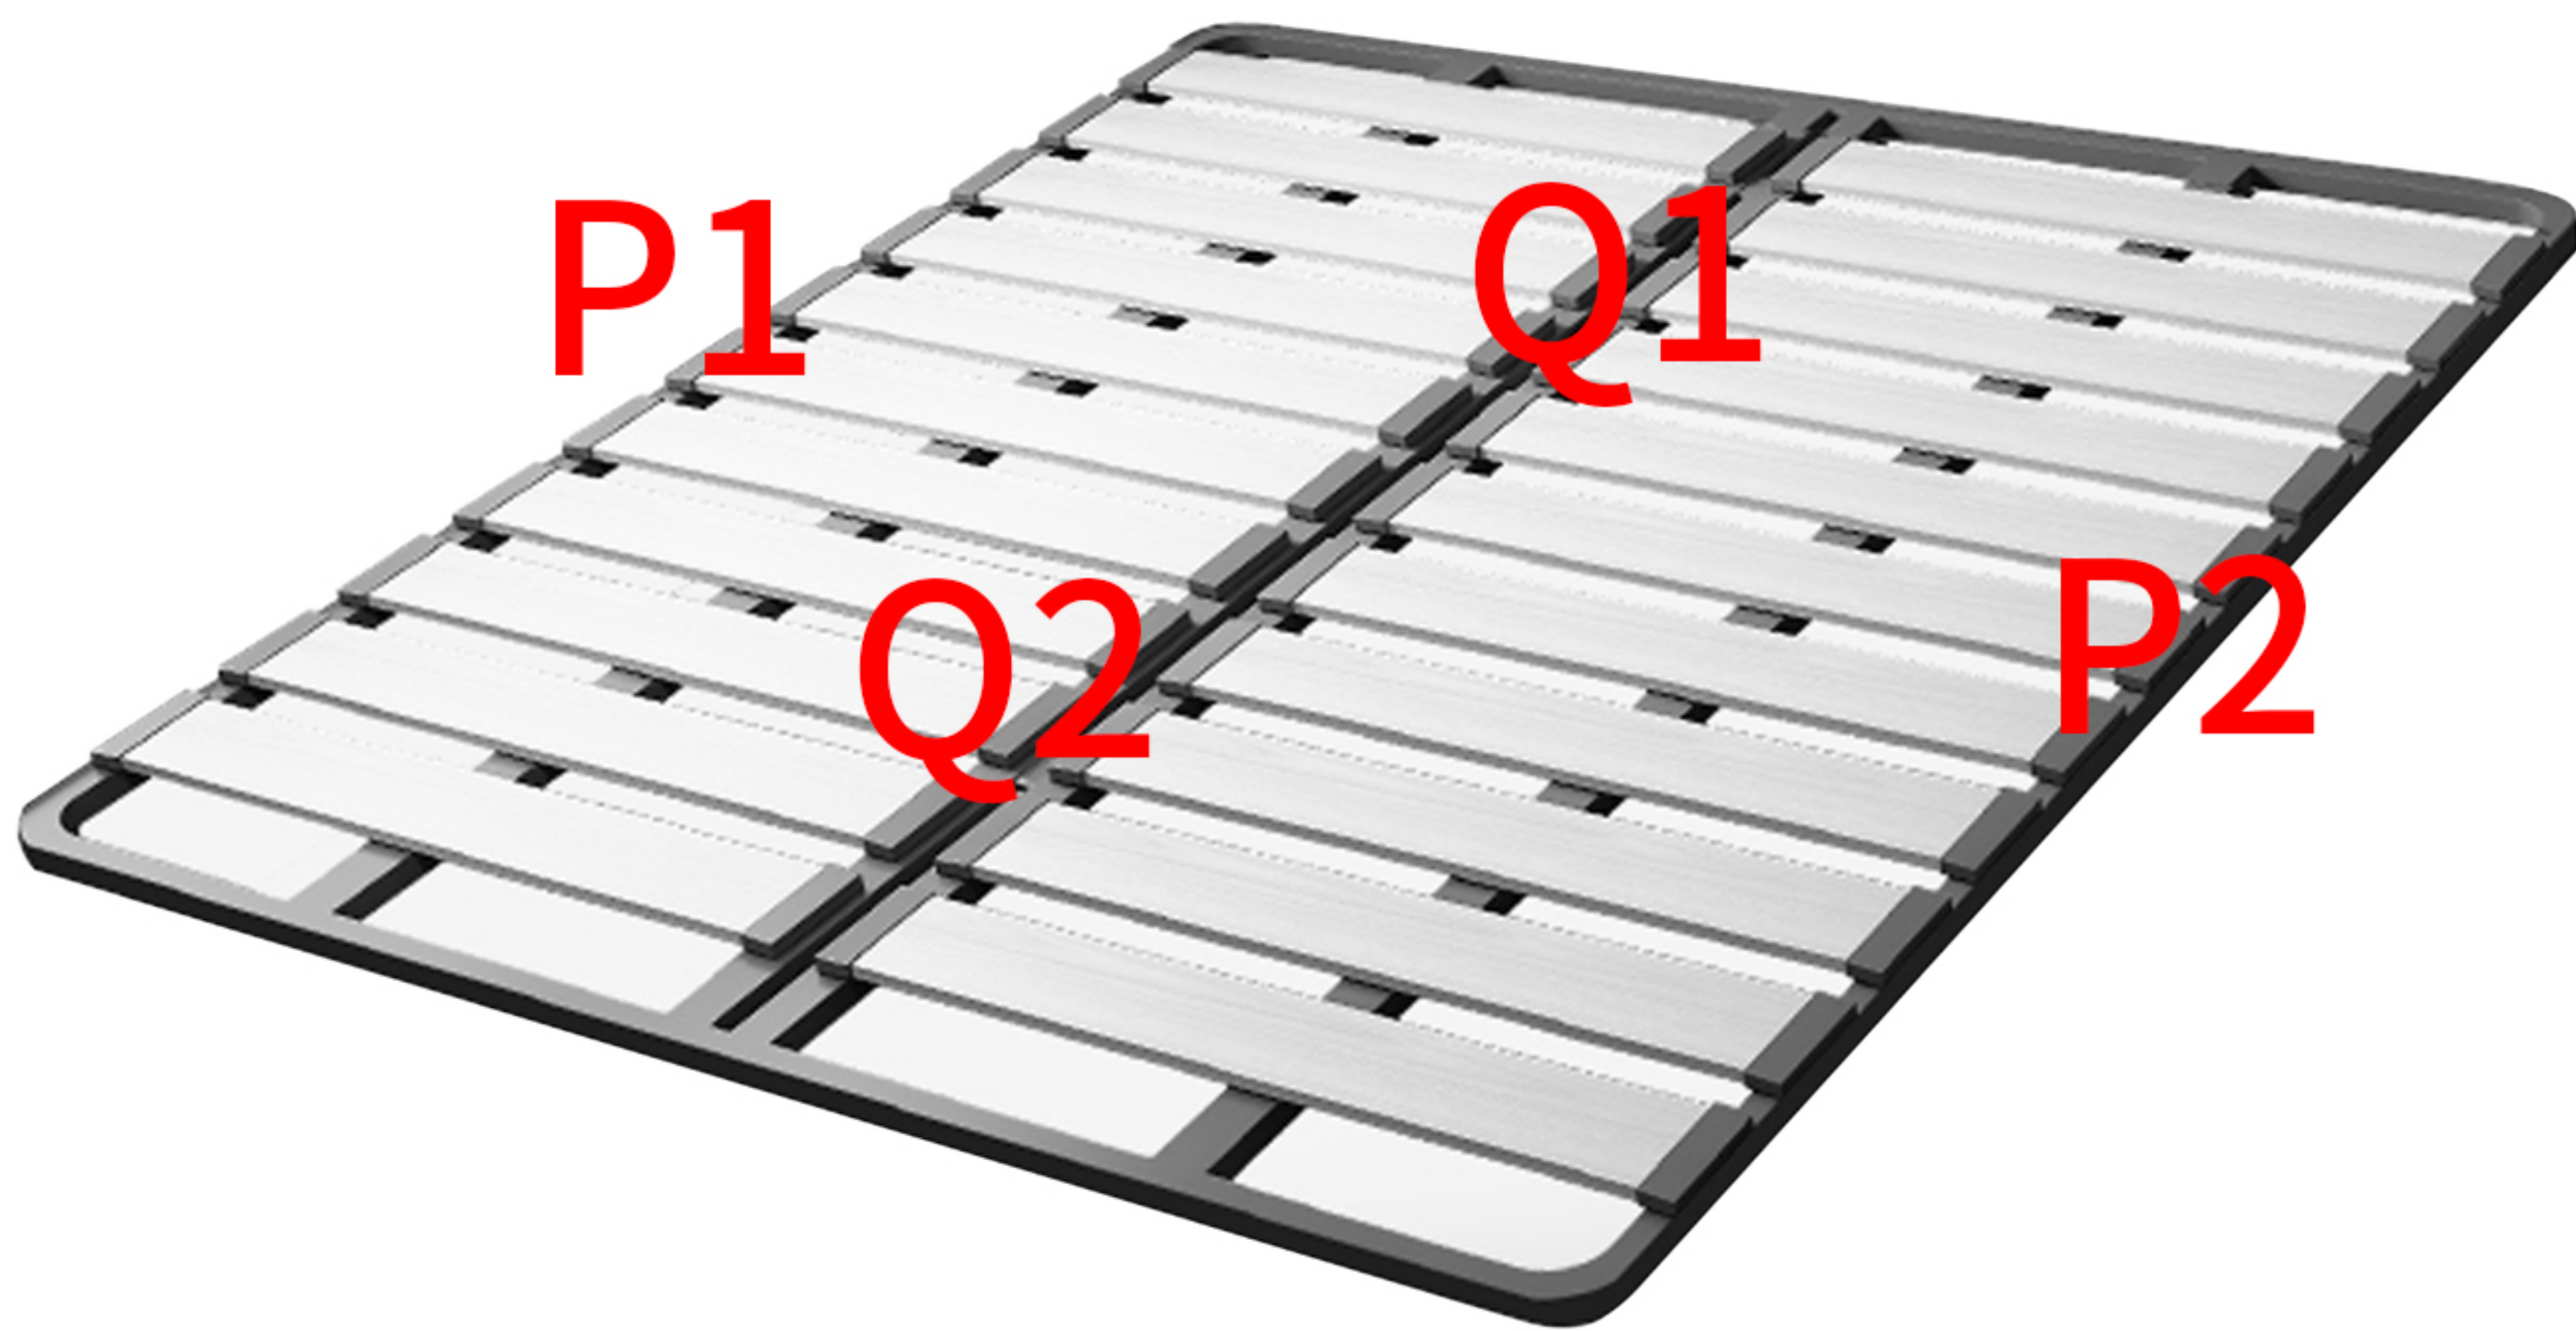


Rotate to adjust height:197-330mm



Step 8

Rotate to adjust height:197-330mm

1


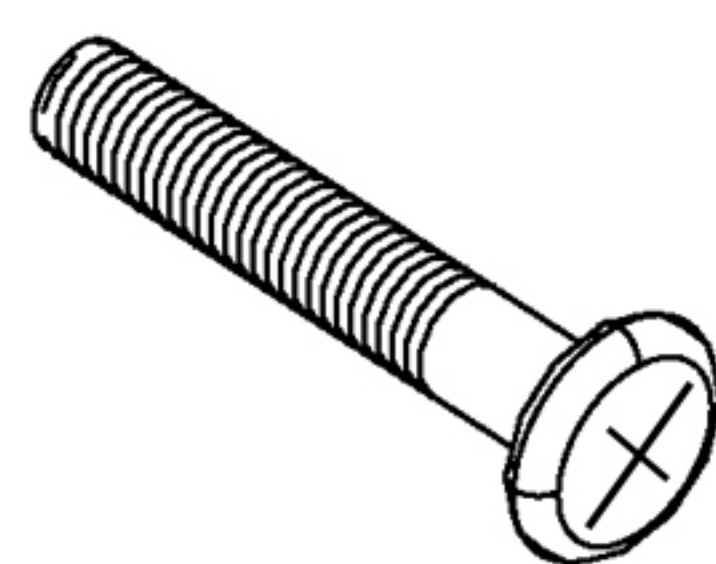


1/4" x 55 mm  
Hex head bolts - 2 pcs

11



45X197-330mm  
ADJUSTER FOOT-2 pcs

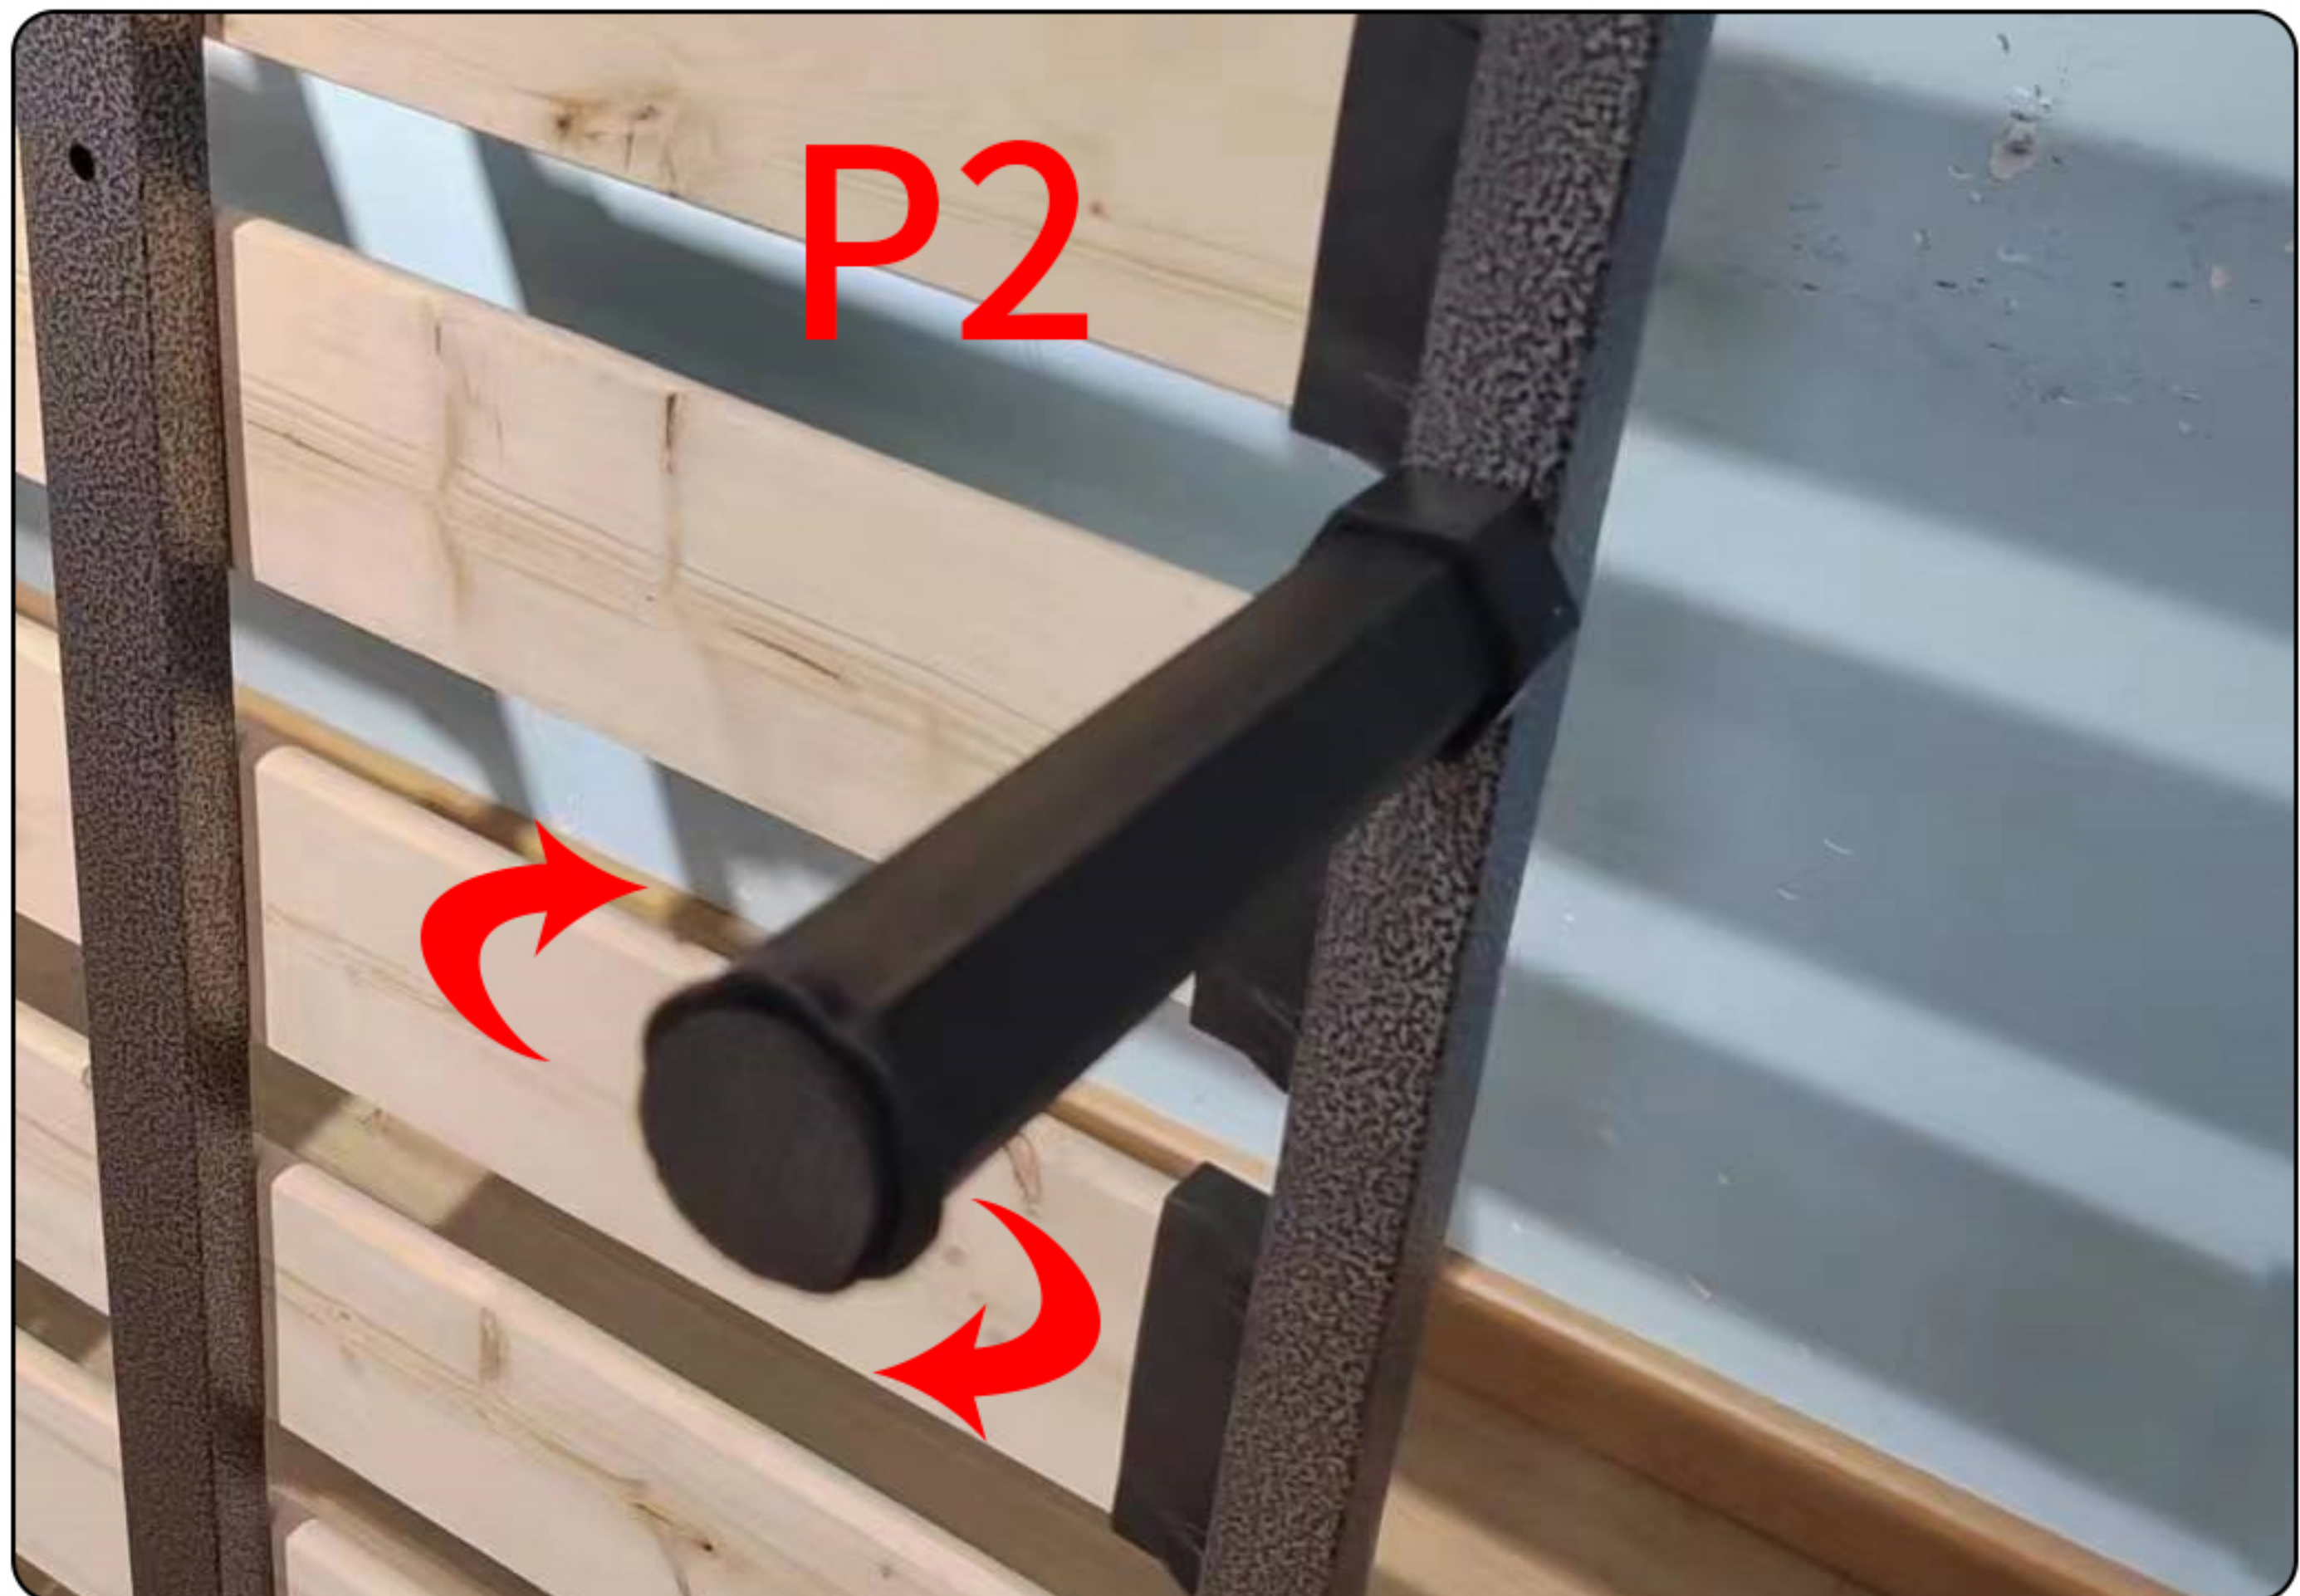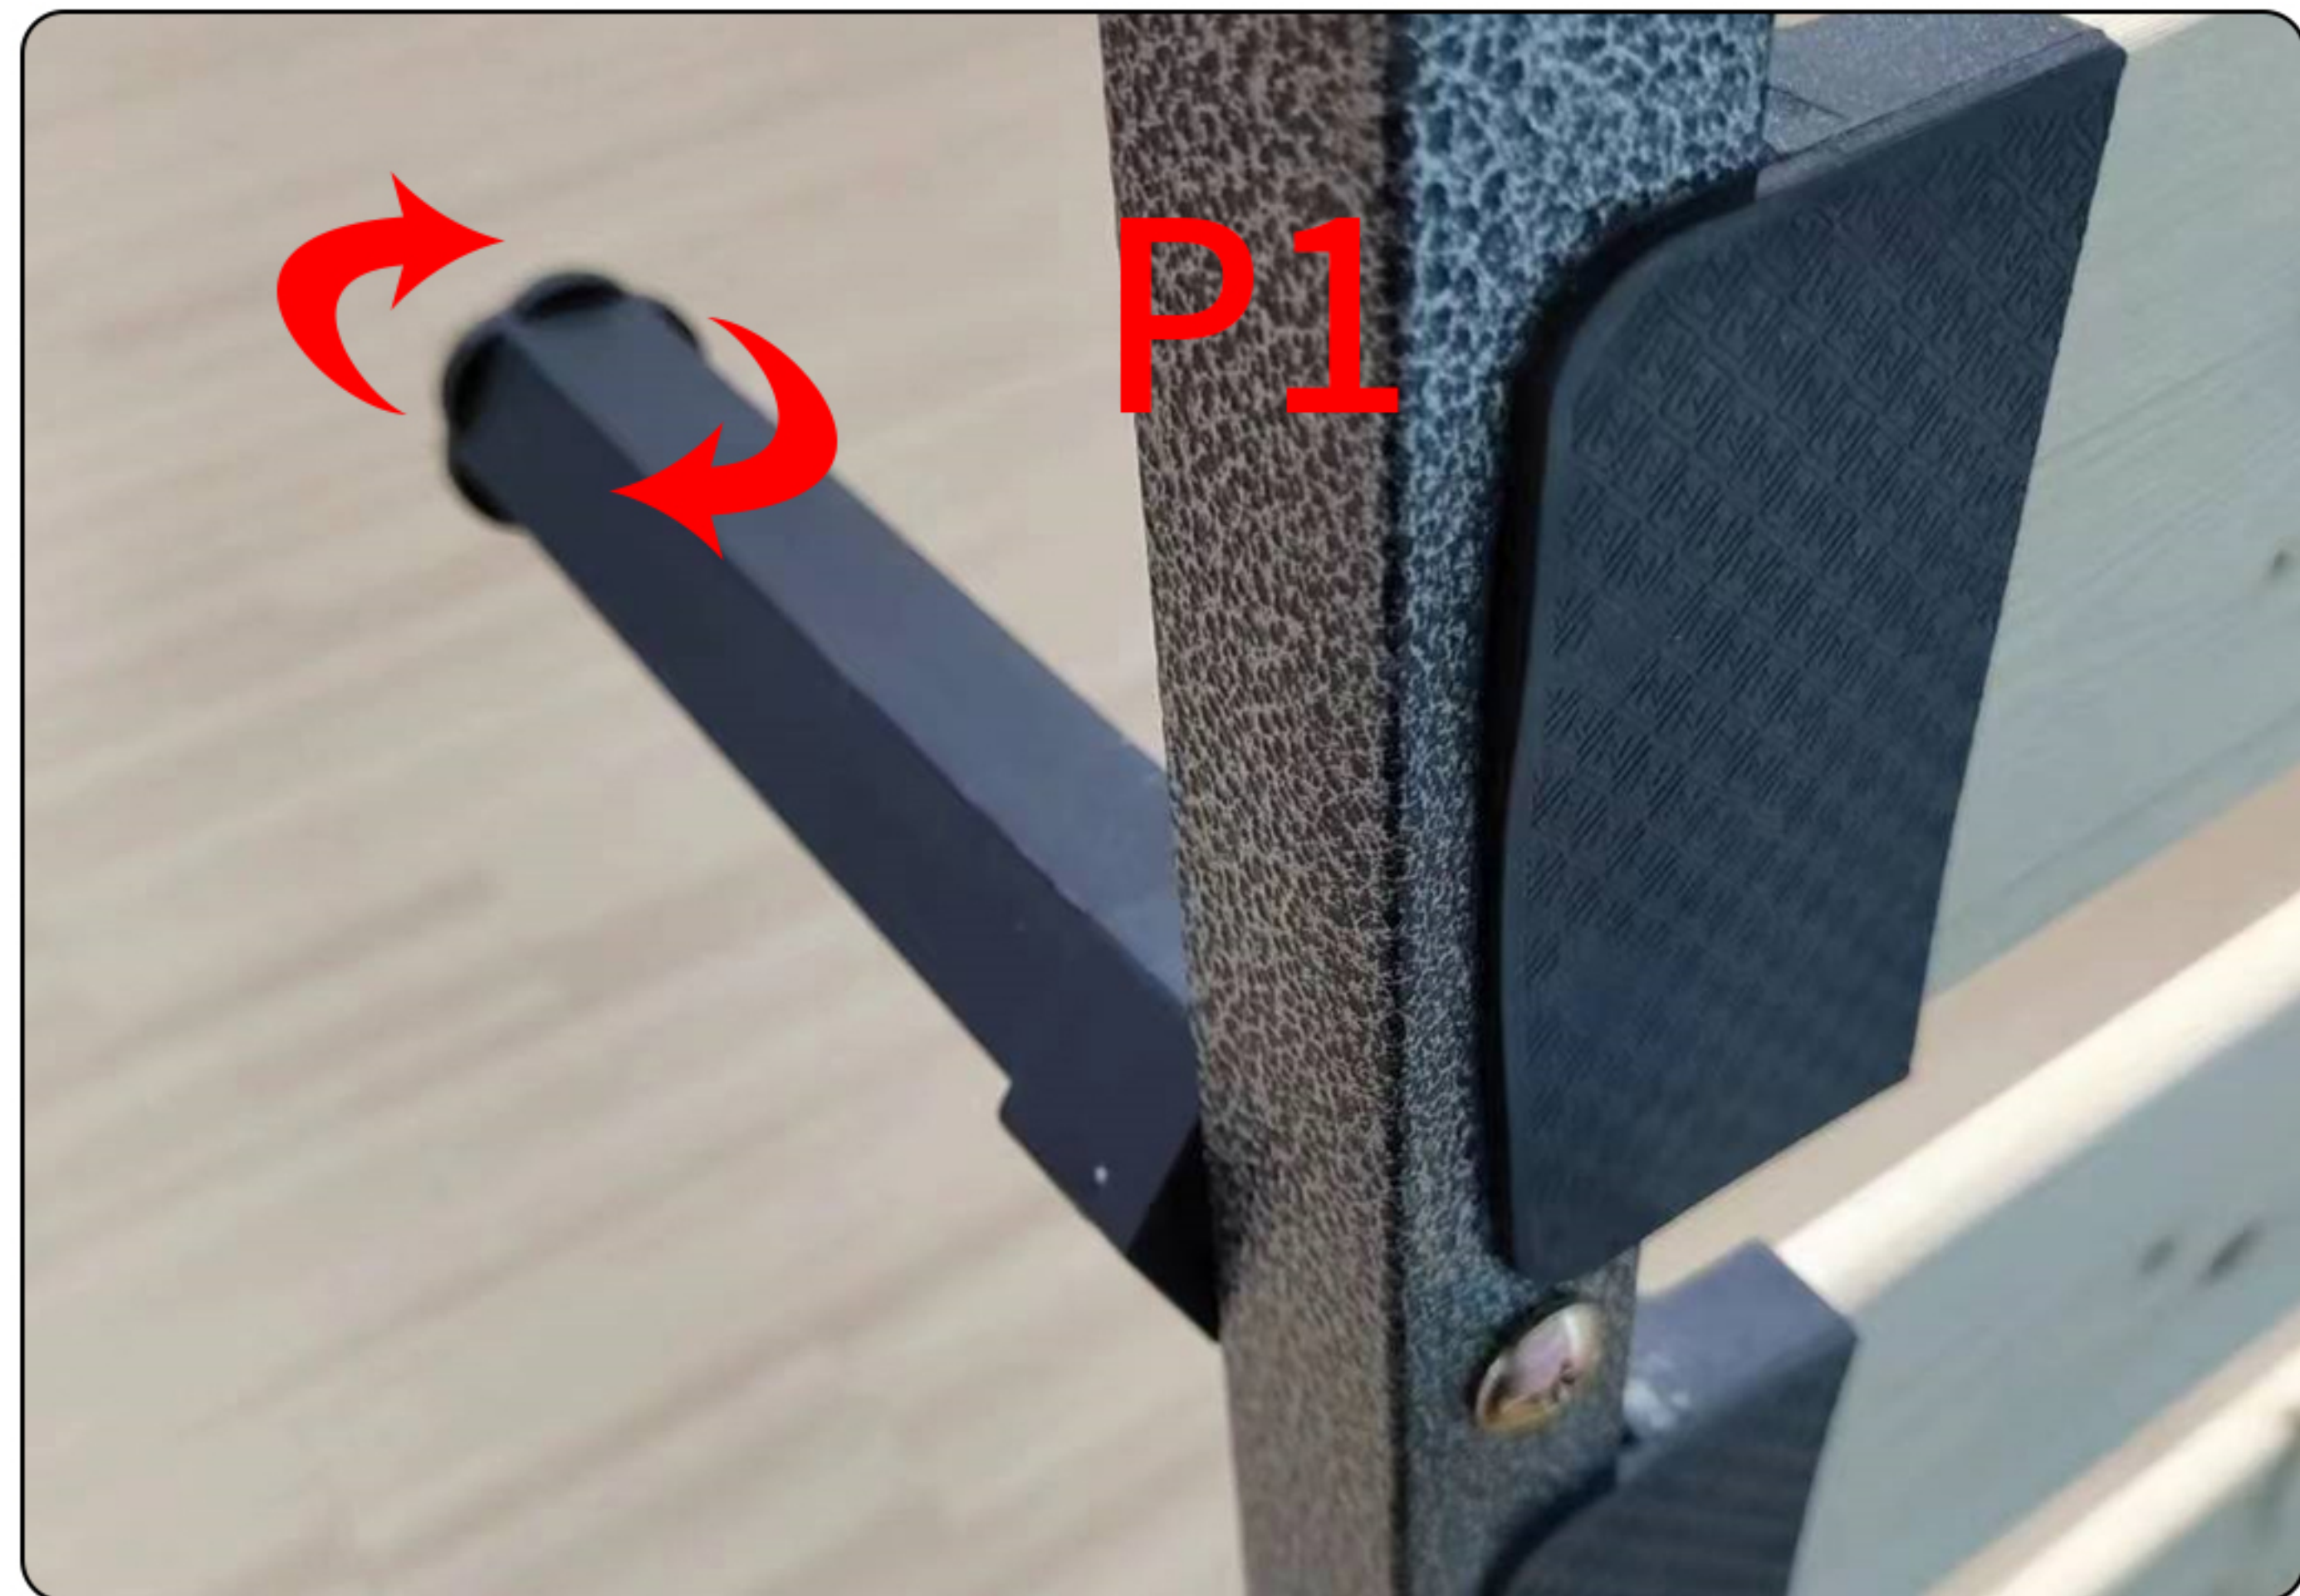



## Step 9

STICK SILENT COTTON PADS ON ALL FOUR CORNERS

5



Ø 25X3mm  
Mute pad-10 pcs



## Step 10

JUST PUT THE INSTALLED ROW FRAMEWORK ON TOP AND IT'S DONE

