WARNING!!


Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip_restraint_help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over 1. NEVER put a TV or other heavy objects on top of this product.

2. Do not stand on the product




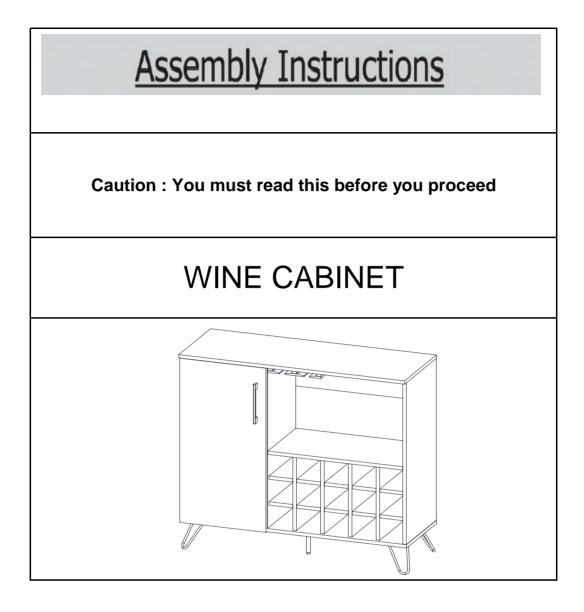



Parts List				
Label	Picture	Description	QTY	
A		Top Panel	1	
В	\$¶° · · · · · · · · · · · · · · · · · · ·	Left Side Panel	1	
С	No.	Right Side Panel	1	
D		Center Panel	1	
E		Middle Panel	1	
F		Shelf Panel	1	
G		Door Panel	1	
н		Lower Spacer	4	

I		Lower Middle Panel	10
J		Upper Back Panel	1
к		Lower Back Panel	1
L		Side Back Panel	1
М		Bottom Panel	1
N		Side Glass Holder	2
ο		Middle Glass Holder	1
Р		Handle	1
Q		Leg	4
R	Ĩ	Center Leg	1

Hardware					
Label	Picture	Description	QTY		
1	HR I	Cam Lock	11		
2		Cam Bolt	11		
3		Cam Cap	11		
(4)		Positioning Dowel (8*30mm)	33		
5	() mmmmo>	Screw (3.5*16mm)	29		
6		Screw (4*25mm)	3		
0		Screw (4*38mm)	7		
8		Cap Wood Screw (M6*50mm)	7		
9		Metal Shelf Support	5		
(1)		Spring Door Support	41		
(11)		Connector	2		
(12)		Allen Key	1		
13		Screwdriver (not provided)	1		
(14)		Hammer (not provided)	1		
(15)		Power Drill (not provided)	1		

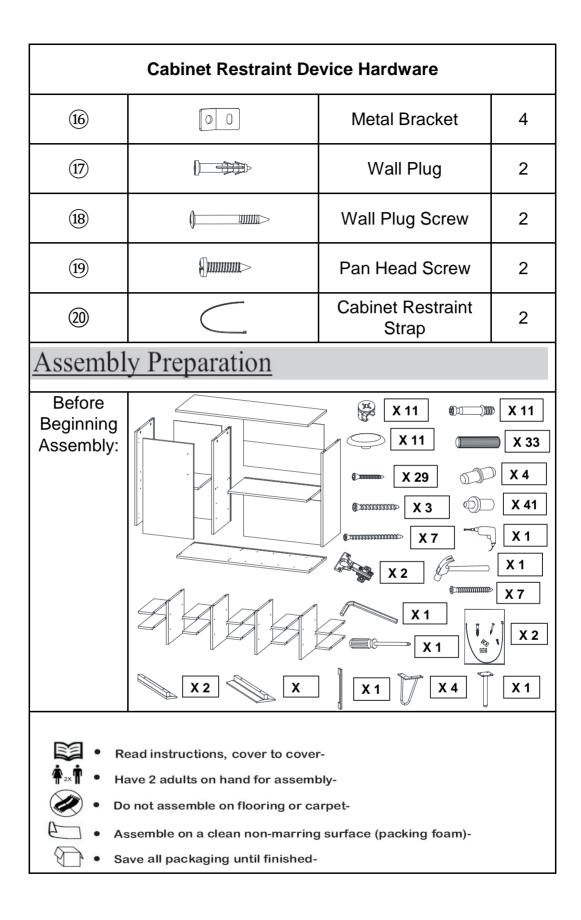

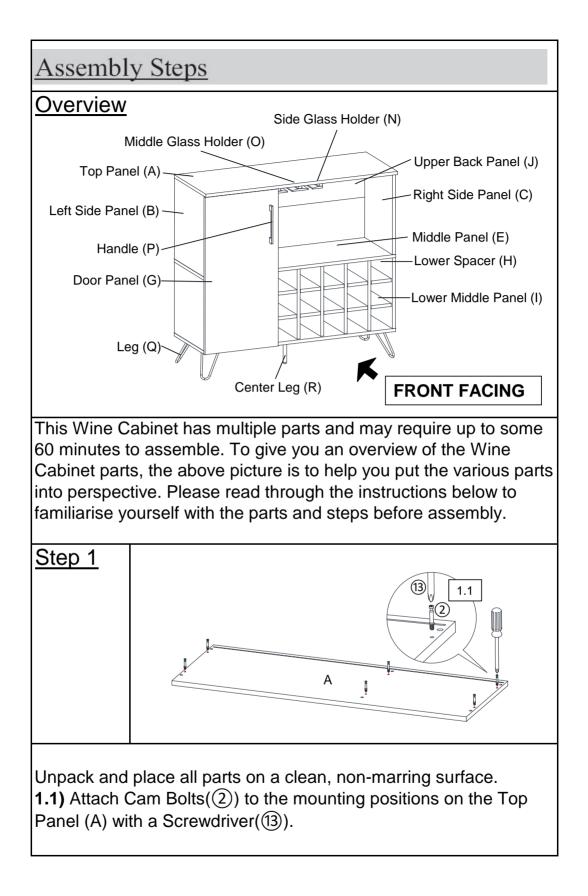


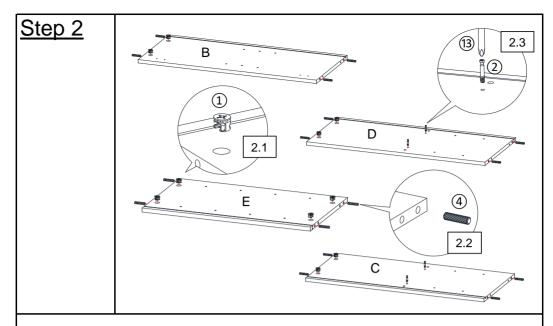


2.1) Insert Cam Locks(①) into the mounting positions on the Left Side Panel (B), the Right Side Panel (C), the Center Panel (D) and the Middle Panel (E) by hand.

2.2) Insert Positioning Dowels(④) into the mounting positions on the Left Side Panel (B), the Right Side Panel (C), the Center Panel (D) and the Middle Panel (E) by hand.

2.3) Attach Cam Bolts(②) to the mounting positions on the Right Side Panel (C) and the Center Panel (D) with a Screwdriver(③).

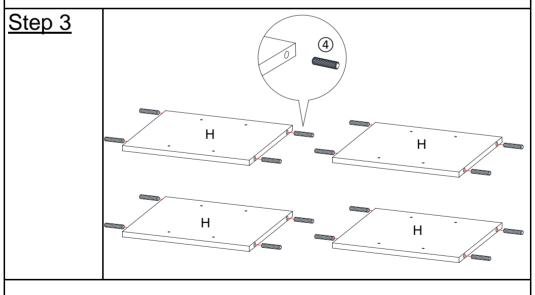

Insert Positioning Dowels(④) into the mounting positions on the Lower Spacer (H) by hand.

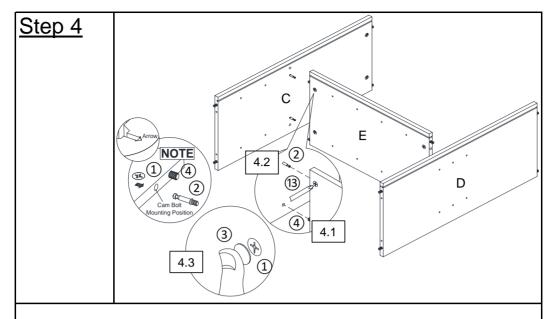



4.1) Insert the Positioning Dowels(④) of the Middle Panel (E) into the mounting positions on the Right Side Panel (C) and the Center Panel (D). Note: Ensure the arrows on the Cam Lock head points towards the Cam Bolt mounting position.


Insert Cam Bolts(②) on the Right Side Panel (C) and the Center Panel (D) into the mounting positions on the Middle Panel (E).

4.2) Turn the Cam Locks(①) clockwise with the Screwdriver(③) until they all lock into place.

4.3) Cover Cam Locks(①) with the Cam Caps(③) by hand.

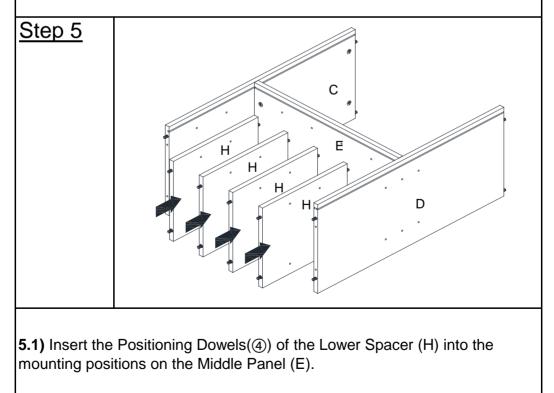

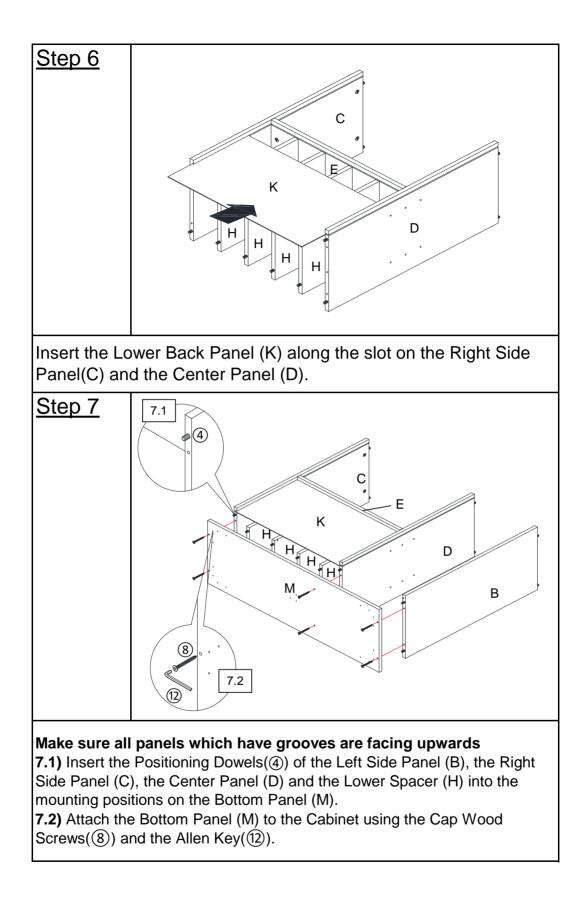


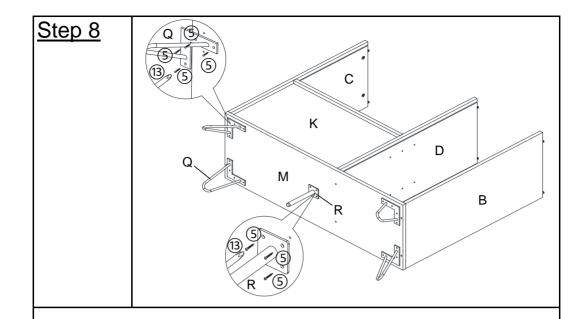


Attach the Legs (Q) and the Center Leg (R) to the Bottom Panel (M) using Screws(⑤) and a Screwdriver(①).

Tighten the Screws fully in a sequential manner.

Note: Legs (Q) should be facing outwards. Misassembly and reassembly may cause damage and instability to the product. There are pre-existing mounting positions on the Bottom Panel to attach the Legs.

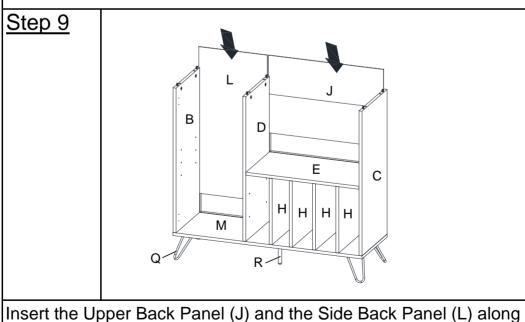

Insert the Upper Back Panel (J) and the Side Back Panel (L) along the slot on the Left Side Panel (B), the Right Side Panel (C) and the Center Panel (D).

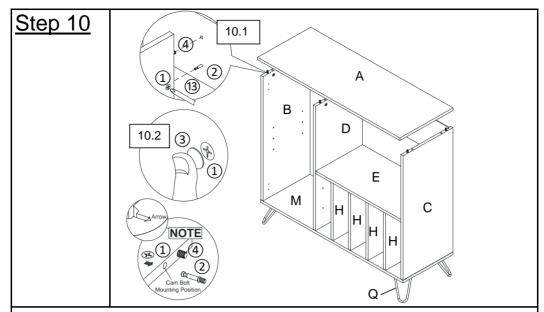


10.1) Insert the Positioning Dowels(④) of the Left Side Panel (B), the Right Side Panel (C) and the Center Panel (D) into the mounting positions in the Top Panel (A).

Note: Ensure the arrows on the Cam Lock heads point towards the Cam Bolt mounting positions.

Insert Cam Bolts(2) on the Top Panel (A) into the mounting positions on the Left Side Panel (B), the Right Side Panel (C) and the Center Panel (D). Turn the Cam Locks(1) clockwise with the Screwdriver(13) until they all lock into place.


10.2) Cover the Cam Locks(①) with Cam Caps(③).

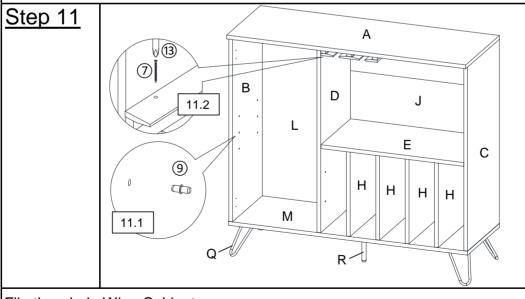


Flip the whole Wine Cabinet over.

11.1) Insert the Metal Shelf Support((9)) into the mounting positions on the Left Side Panel (B) and the Center Panel (D) by hand.


11.2) Attach the Side Glass Holder (N) and the Middle Glass Holder (O) to the Top Panel (A) using Screws() and a Screwdriver().

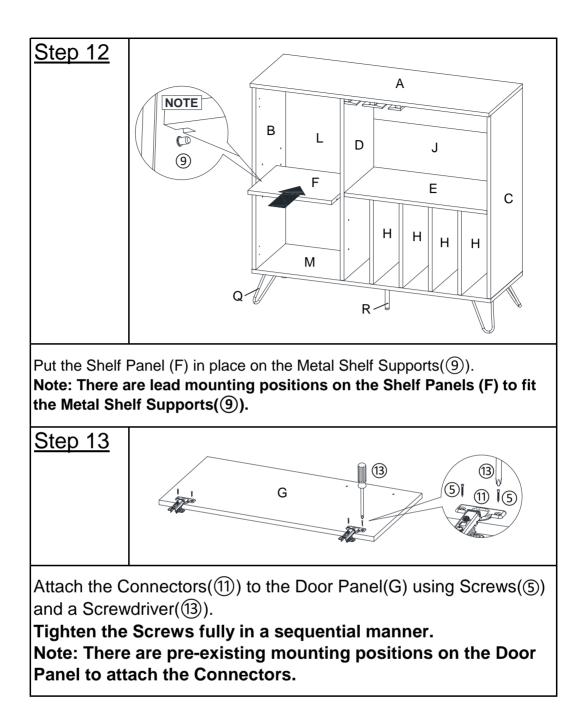

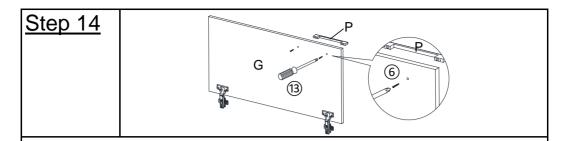

Attach the Handle (P) to the Door Panel (G) using Screws(6) and a Screwdriver(13).

Tighten the Screws fully in a sequential manner. Note: There are pre-existing mounting positions on the Door Panel to attach the Handle.

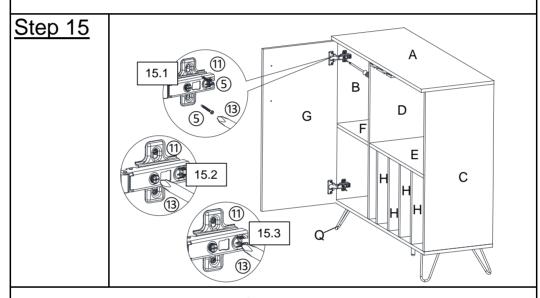


15.1) Attach the Connectors((11)) to the Left Side Panel (B) using Screws((5)) and a Screwdriver((13)).


Tighten the Screws fully in a sequential manner.


15.2) Rotate the first screw on the Connectors((1)) to adjust the left-right position of the Door Panel (G) when necessary.

15.3) Rotate the second screw on the Connectors((1)) to adjust the in-out position of the Door Panel (G) when necessary.

Note: There are pre-existing mounting positions on the Left Side Panel to attach the Connectors.

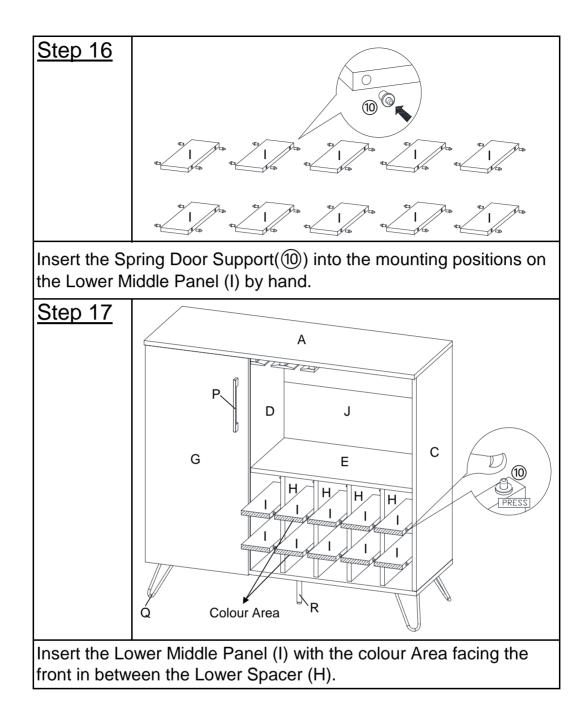

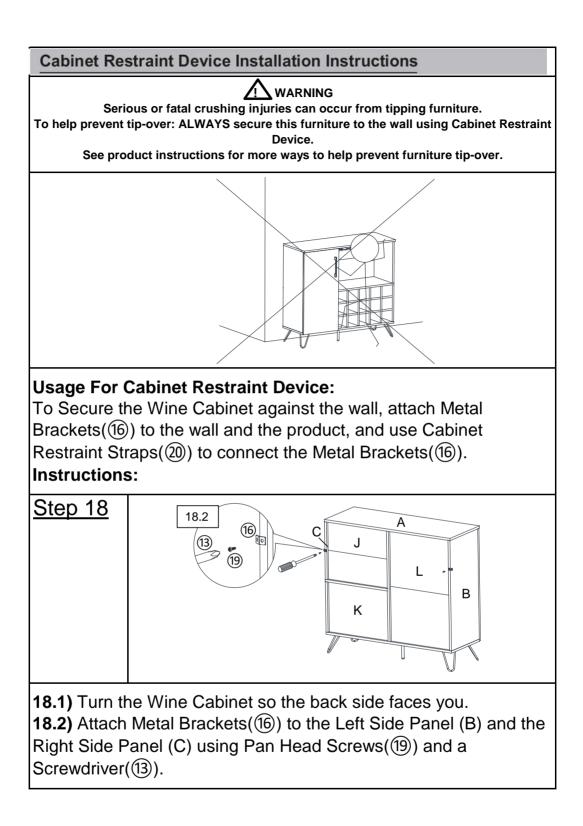

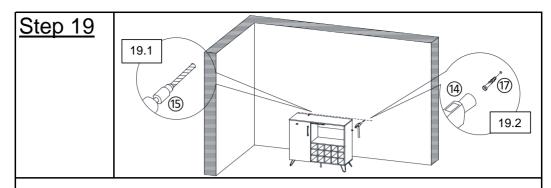

19.1) Using a Power Drill((15)),Drill two holes into the wall at the same height as Metal Brackets((16)) that you have placed on the Wine Cabinet.

You can mark these points in the following ways:

1) Move the Wine Cabinet back to the wall. Mark two points on the wall, the same height as the Wine Cabinet.

Note: The Metal Brackets need to be secured to a solid, load bearing surface. Please use a Stud Finder (not supplied) if needed to locate the Wall Frame.

2) Measure the height of the Metal Brackets(^(fb)) with a ruler/measuring tape and mark on wall to keep them accurate and at the same height.

19.2) Insert the Wall Plugs(17) into the holes in the wall, using a Hammer(14).

