## WALL HANGING BEVELLED MIRROR

## **INSTALLATION SEQUENCE**



Note: Ensure that the fixing location is able to take the weight of the complete fitting.

## Packing list Mirror x 1 Bracket x2 Screws x(4+2) Wall anchors-A Wall anchors-A Corresponding to be for Brocket West you fix Where you fix the first bracket Product Size Product Size Product Size Wall anchors-B Vall anchors-B Vall anchors-B Vall anchors-B Edvir (62MM) Positioning Ruler 24\* (231 fmm) 11\*6\* (293 fmm) 14\* (355 fmm) For hanging the mirror. 20\* 22\*/24\*




1


If you have any problem, please feel free to contact us on aftersale

Decide the installation method as per your reference. Confirm the locations for drilling holes with the positioning ruler, and use a marker to mark the spots 023 on the wall.

 Vertical Installation

Horizontal Installation

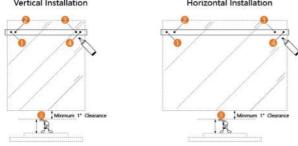

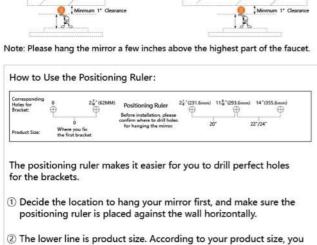


2. Use an electric drill to punch holes at the marked spots, and then apply wall anchors with hammer.



3. Screw the two brackets on wall.

4.Place the mirror against the wall, align the hook with the bracket slot, slowly lower it so that the hook fits into the slot, and gently shake the mirror to ensure that the mirror is securely installed.



Note: Two-person installation.

Completion!

can find the corresponding hole spots for the two brackets, which

are indicated on the upper line.