


ASSEMBLY INSTRUCTIONS

36INCH BATH VANITY (COMBO)


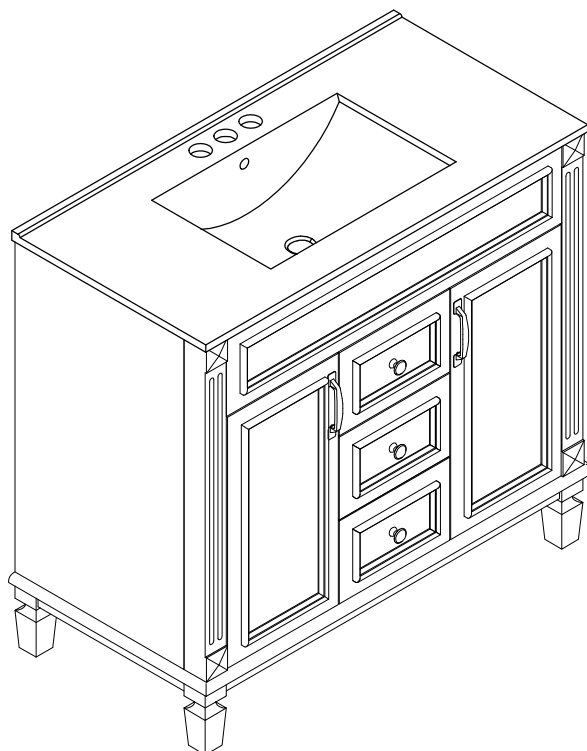


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

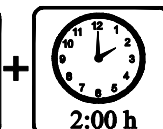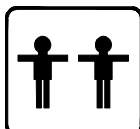

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY







Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions






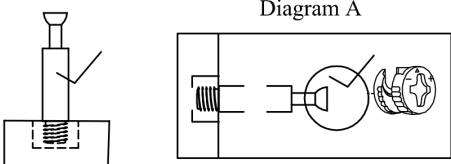
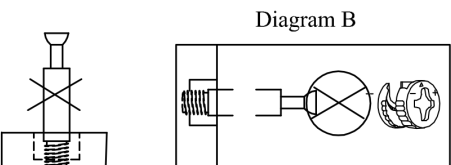
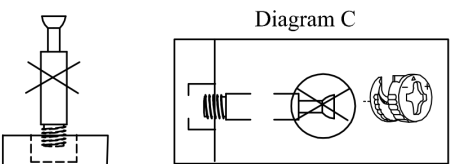

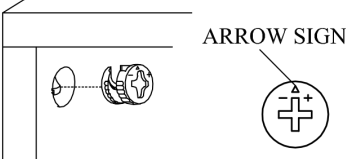
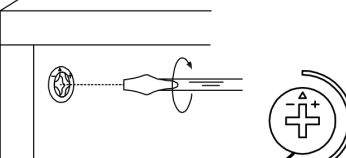
	Insert Cam Bolt into hole as shown in diagram A.
	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View







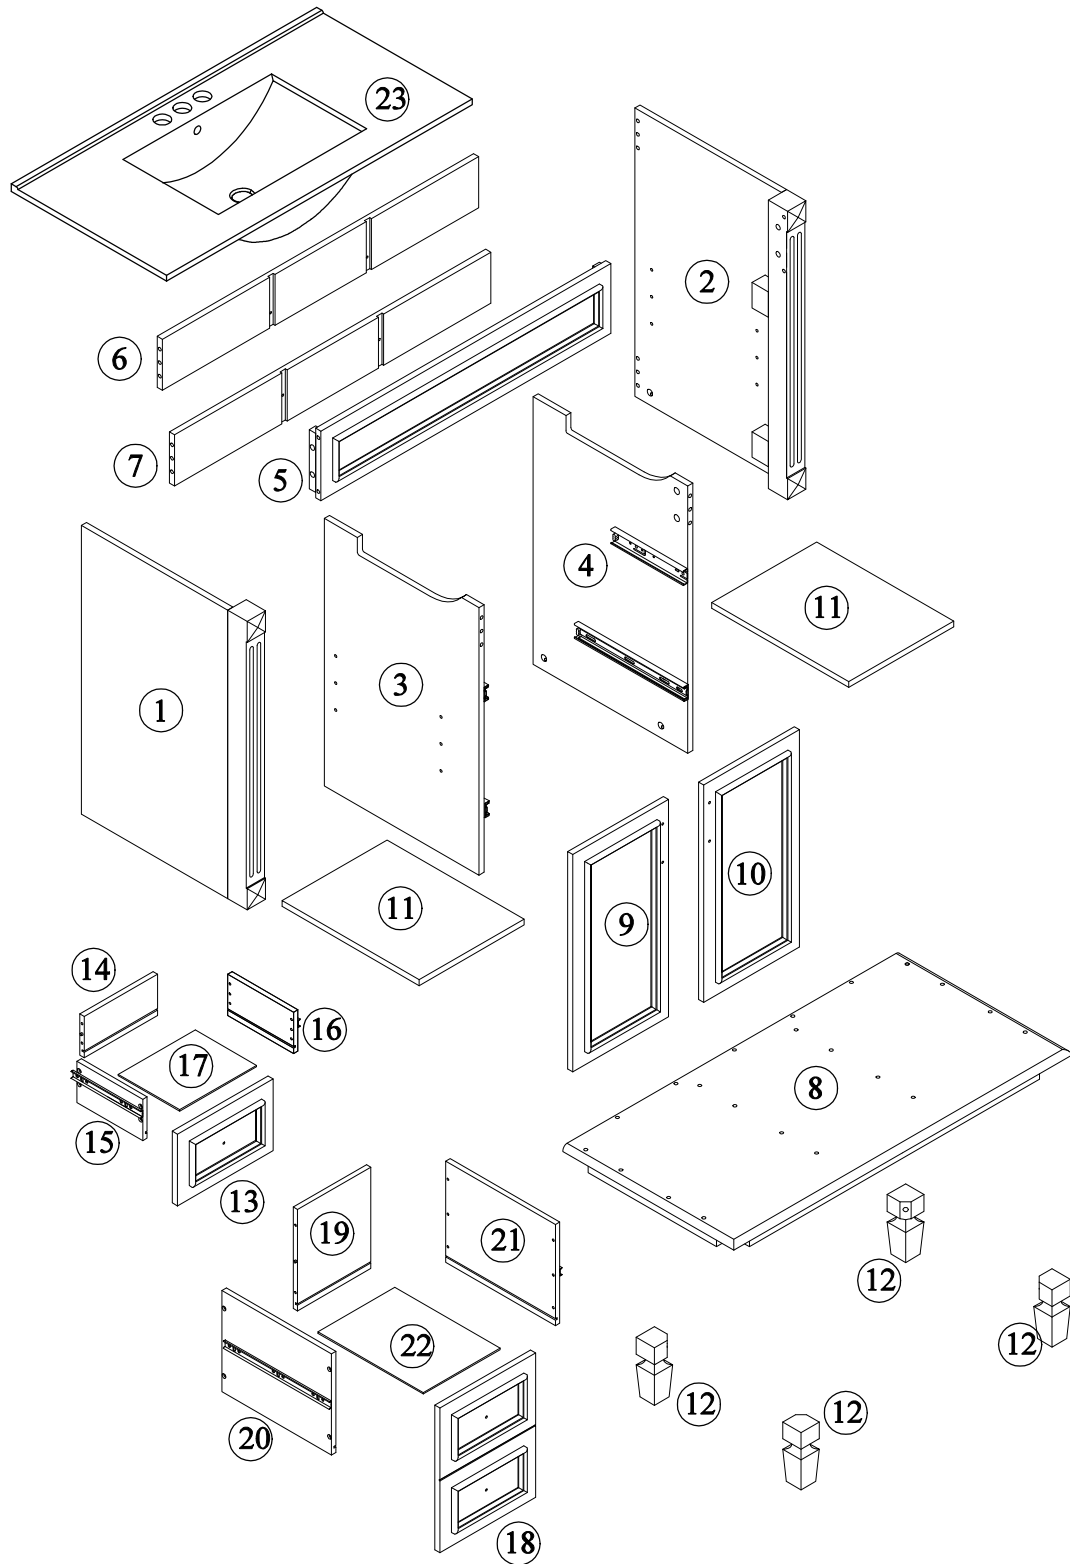


Identifying the Hardware-Identify the hardware using the illustrations below.






Part List

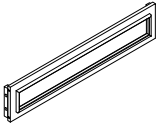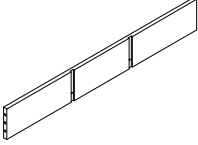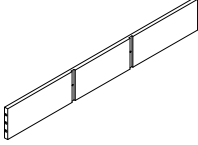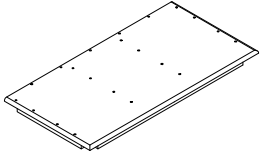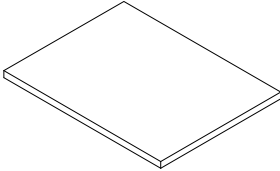1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel (L) - 1pc		Mid Panel (R) - 1pc
5		6	
	Front Panel - 1pc		Rear Panel Top - 1pc
7		8	
	Rear Panel Bottom - 1pc		Frame Bottom - 1pc
9		10	
	Left Door - 1pc		Right Door - 1pc
11		12	
	Adjustable Shelf - 2pcs		Foot - 4pcs
13		14	
	Drawer Front Top - 1pc		Drawer Rear Top - 1pc

Part List

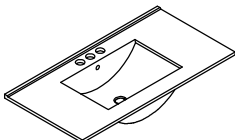
15		16	
Drawer Side Top (L) - 1pc		Drawer Side Top (R) - 1pc	
17		18	
Drawer Bottom (T) - 1pc		Drawer Front Bottom - 1pc	
19		20	
Drawer Rear Bottom - 1pc		Drawer Side Bottom (L) - 1pc	
21		22	
Drawer Side Bottom (R) - 1pc		Drawer Bottom (B) - 1pc	
23			
Sink - 1pc			

Hardware List

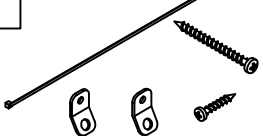
A  $\varnothing 13 \times 1/4" \times 28 \text{mm}$ Hex-Head bolts(4pcs)	B  $\varnothing 13 \times 1/4" \times 40 \text{mm}$ Hex-Head bolts(4pcs)	C  $\varnothing 1/4" \times 16 \times 1 \text{mm}$ Washer(8pcs)
D  $\varnothing 6 \times 35 \text{mm}$ Three in one bolts(23pcs)	E  $\varnothing 14.5 \times 12 \text{mm}$ Three in one lock(23pcs)	F  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw(4pcs)
G  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$ Round head screw(16pcs)	H  Handle (3pcs)	I  Handle (2pcs)
J  $\varnothing 5/32" \times 15 \text{mm}$ Handle screw(4pcs)	K  $\varnothing 5/32" \times 32 \text{mm}$ Handle screw(3pcs)	L  Damping hinge (4pcs)
M  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ Flat head screw(24pcs)	N  Laminate pad(8pcs)	O  $\varnothing 8 \times 30 \text{mm}$ Wood dowel(20pcs)
P  4mm Allen key(1pc)	Q  Anti fall hardware(1set)	

STEP: 1


D



12PCS

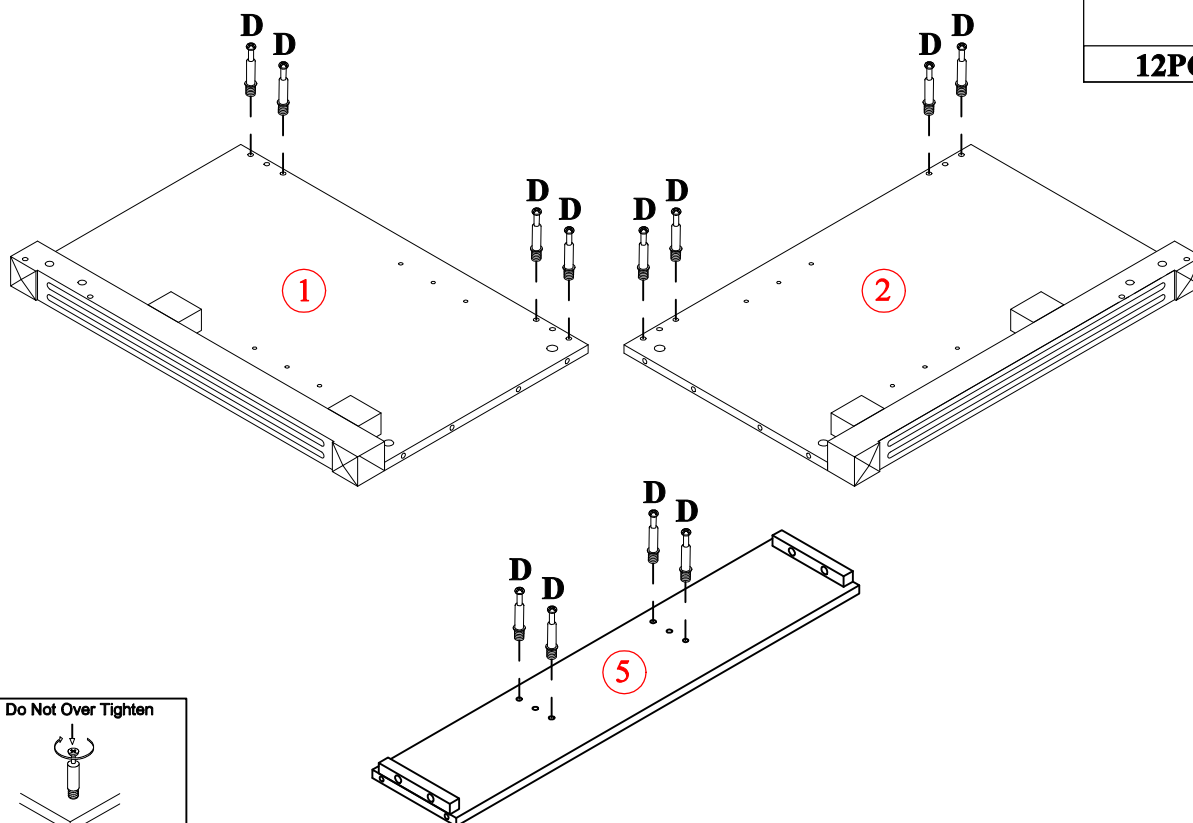

Do Not Over Tighten



STEP: 2

E



4PCS

F




4PCS


O




2PC

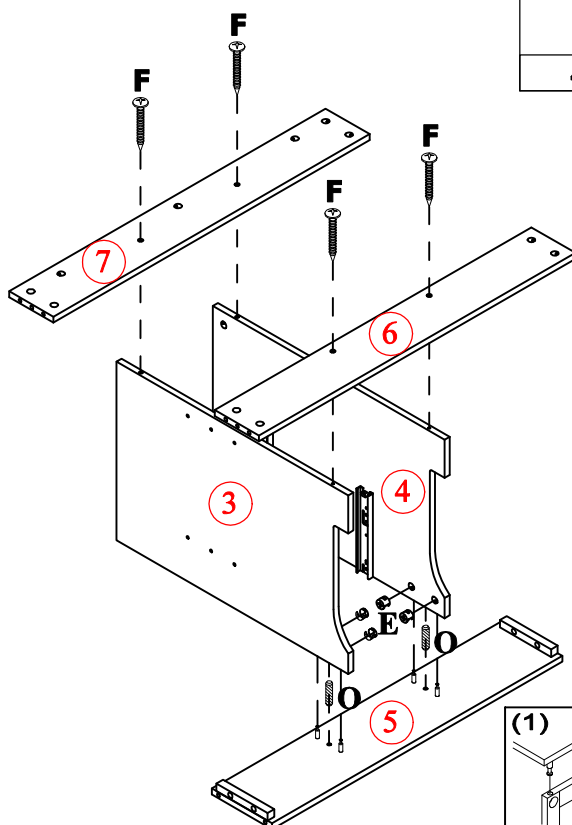


(1)





(2)




(3)





STEP: 3

A	C	E	O
			
4PCS	4PCS	8PCS	8PC

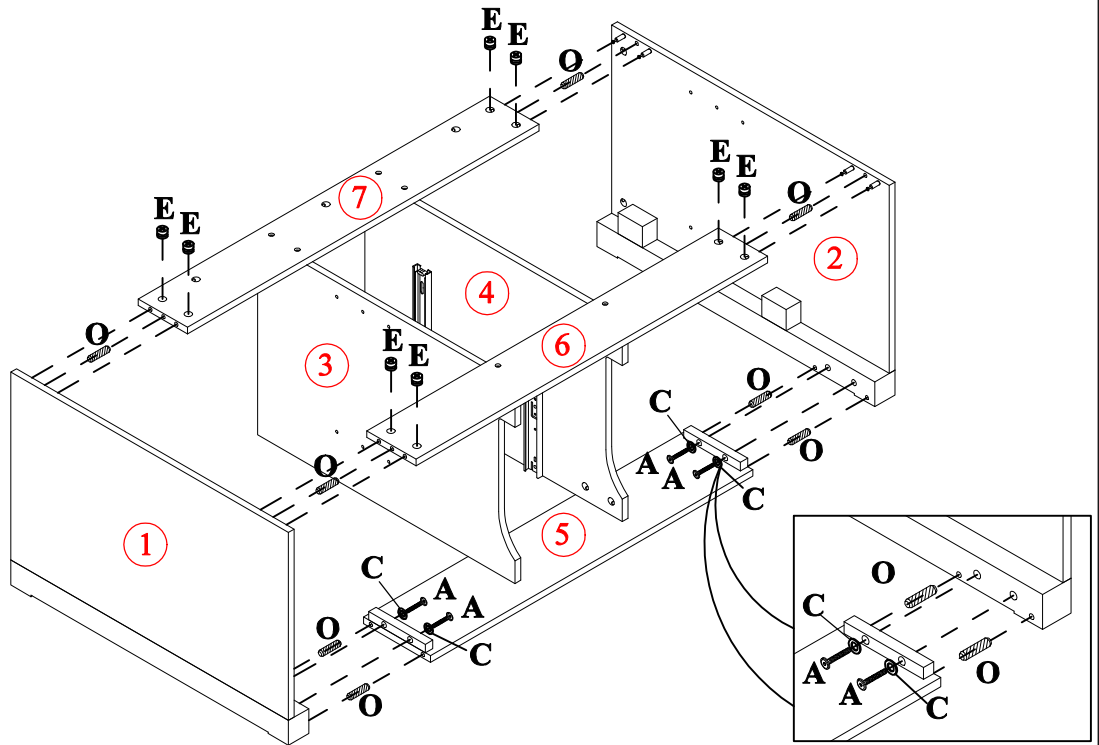

STEP: 4

B	C
	
4PCS	4PCS

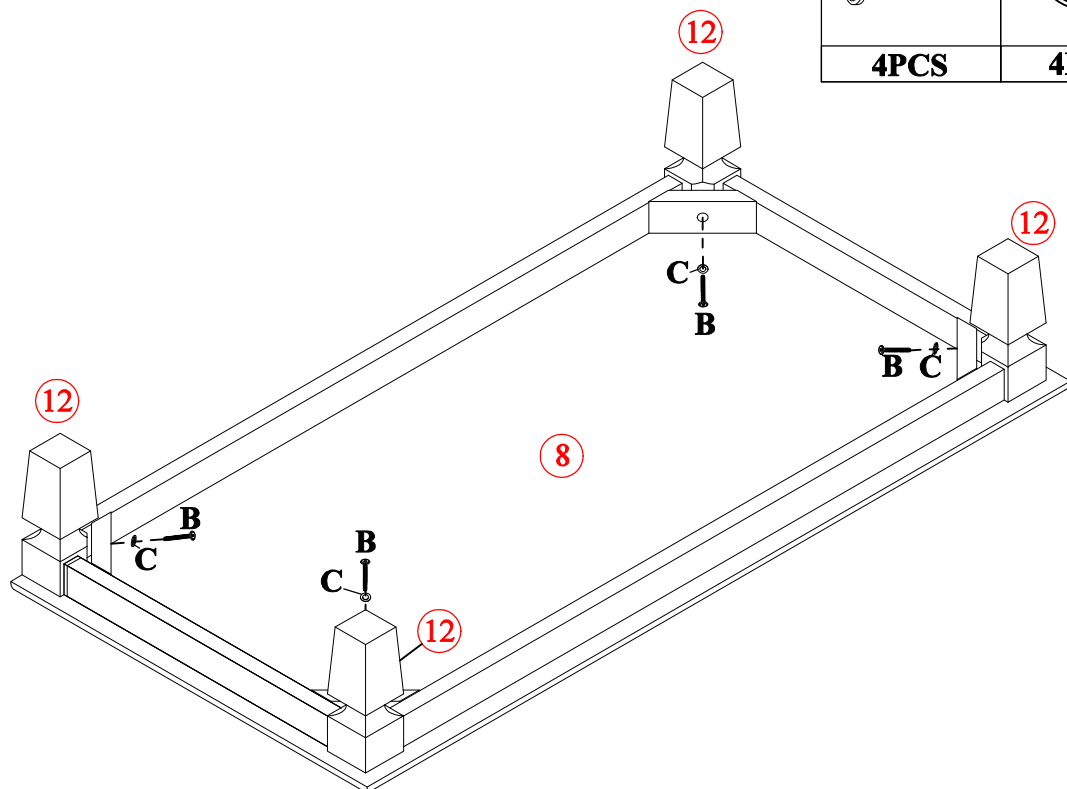


STEP: 5

D



11PCS

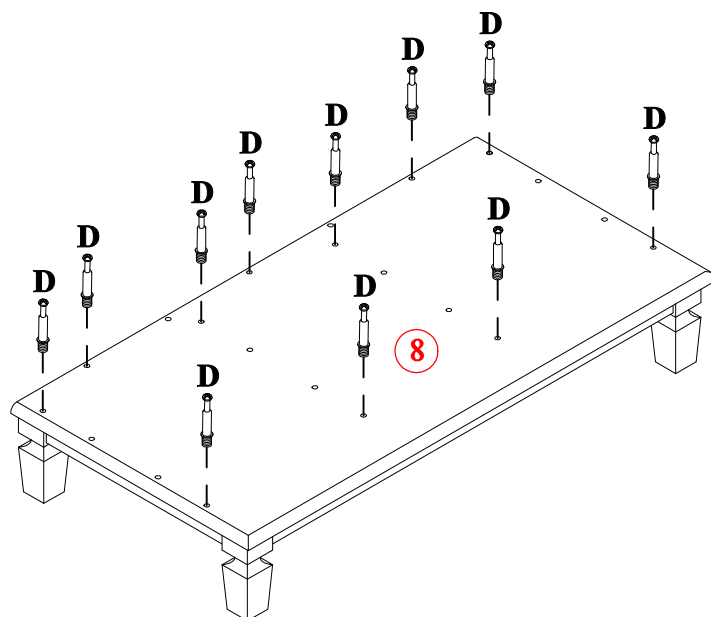

STEP: 6

E




3PCS

O



10PCS

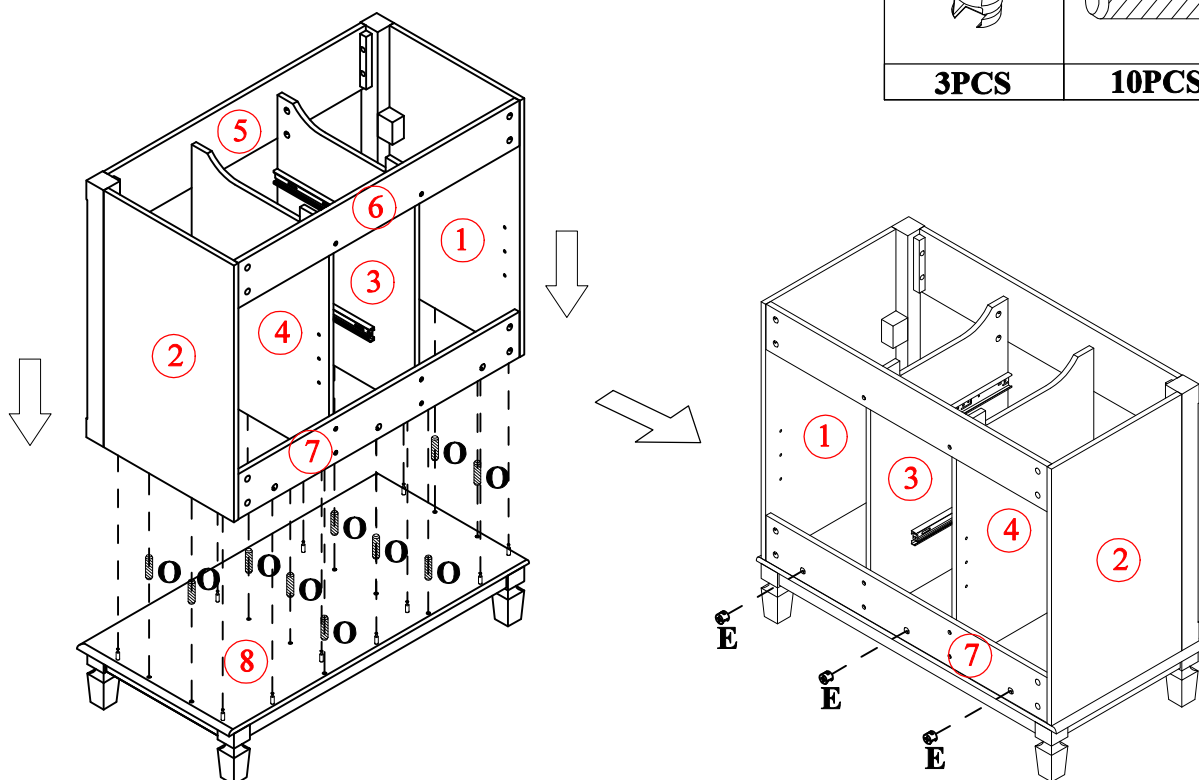


STEP: 7

E



8PCS

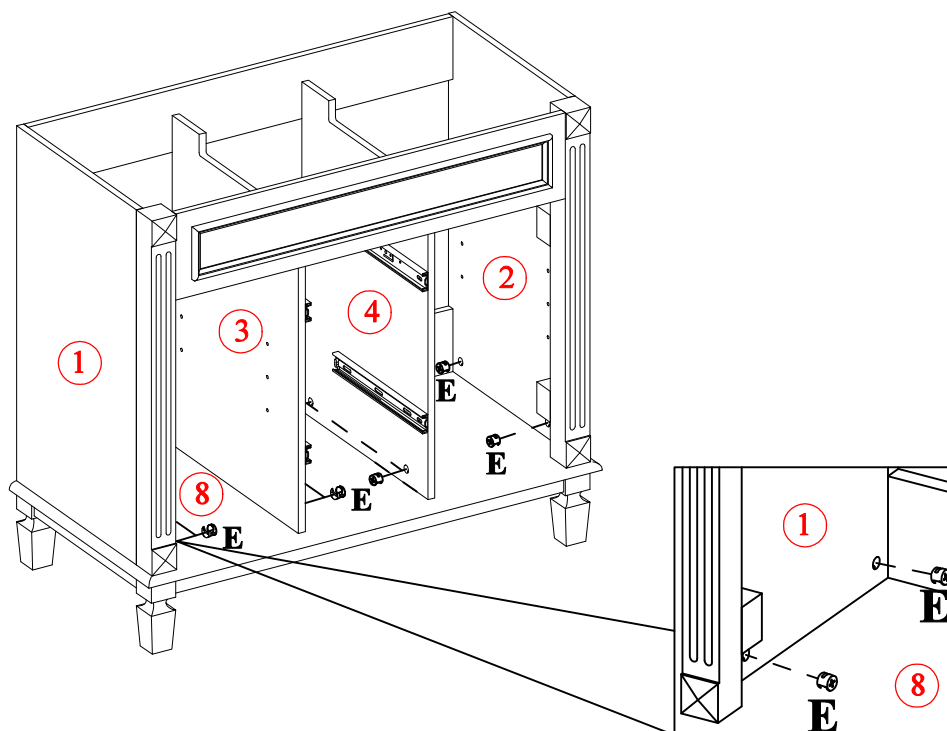

STEP: 8

L




4PCS


M






8PCS

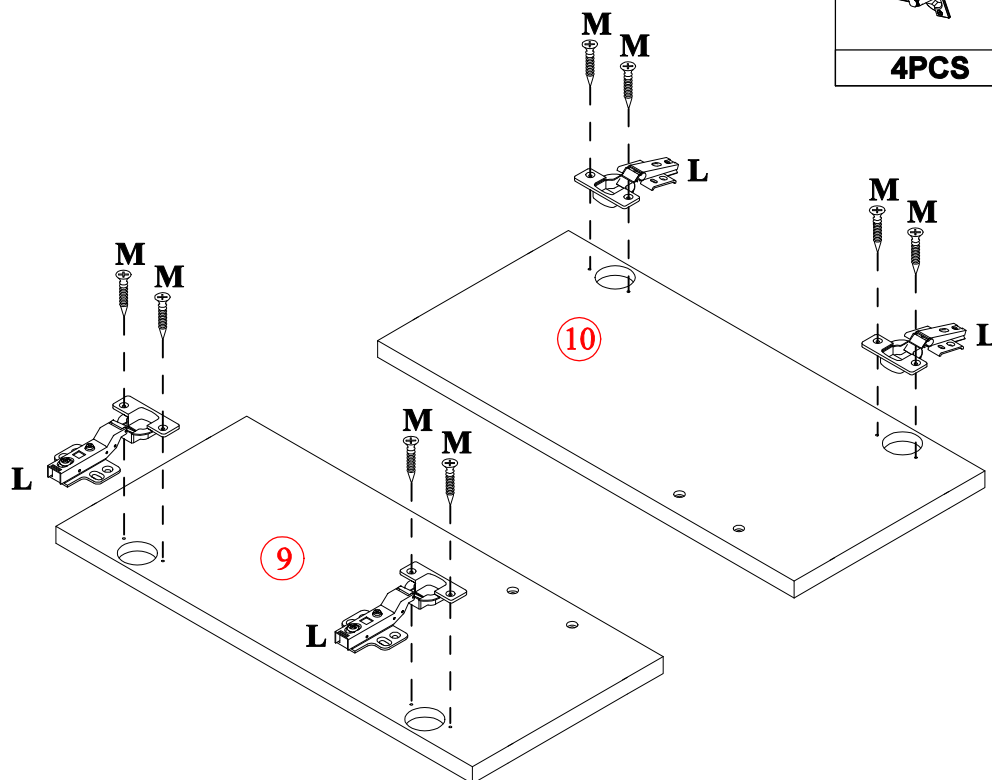

STEP: 9



I	J	M
		
2PCS	4PCS	16PCS

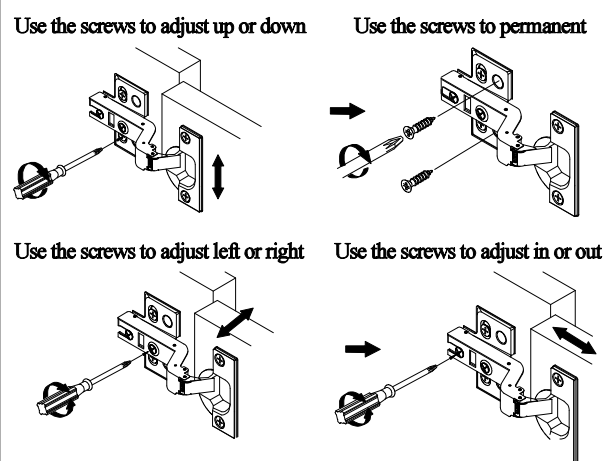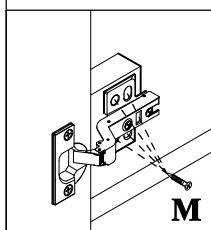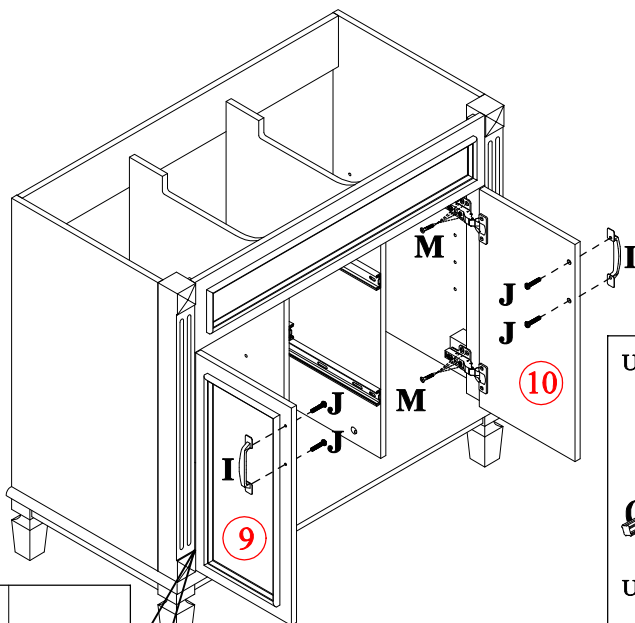


STEP: 10


N


8PCS

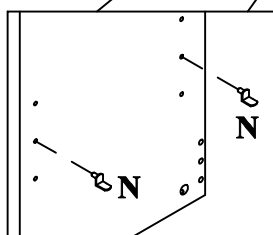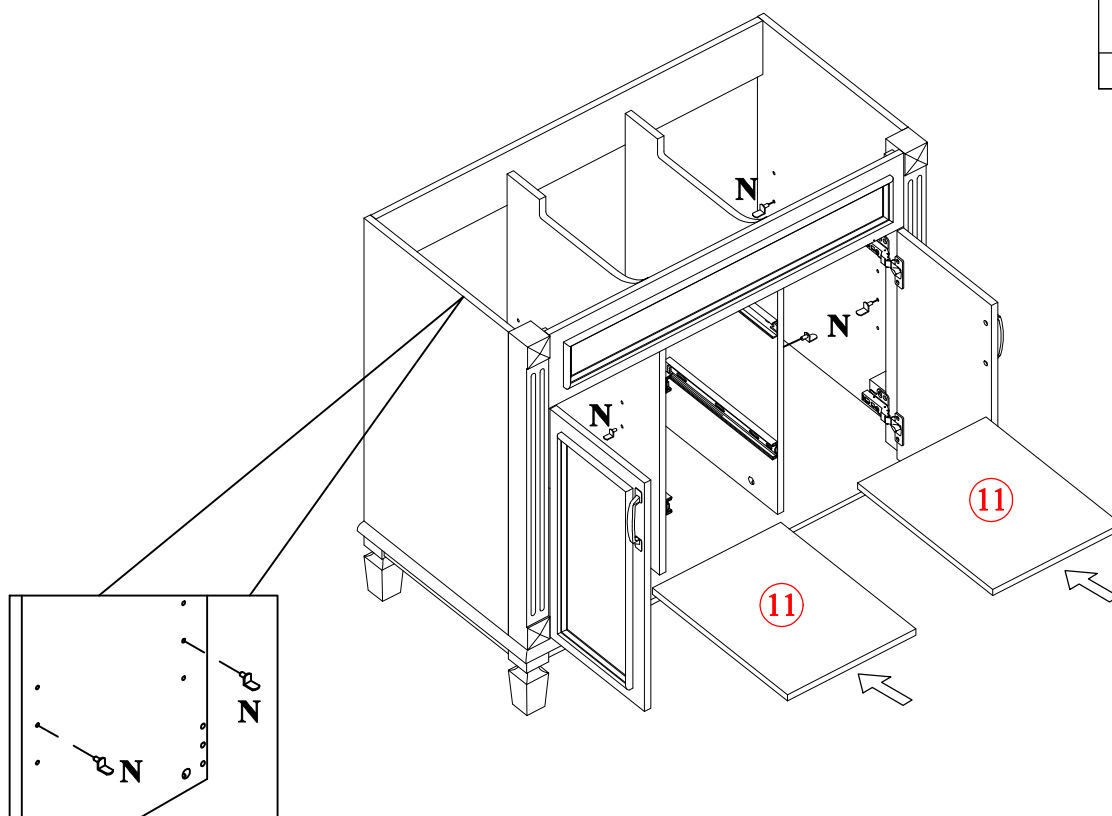


STEP: 11

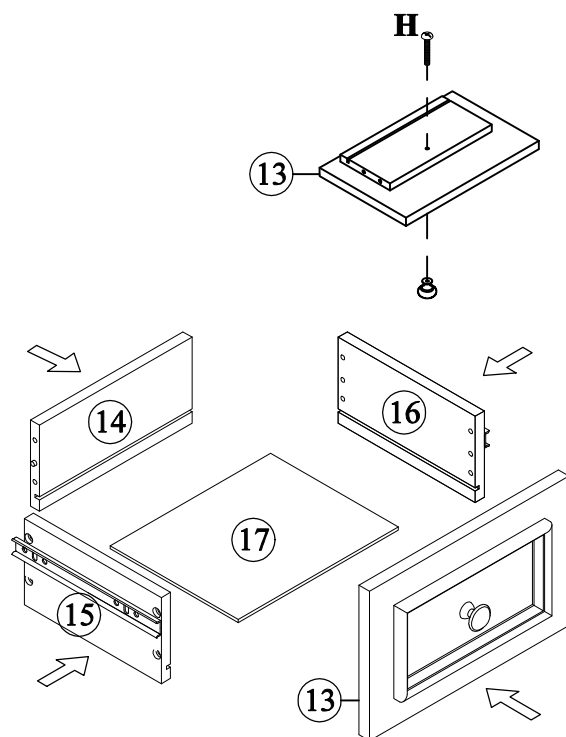

H	K	G
		
1PC	1PC	8PCS

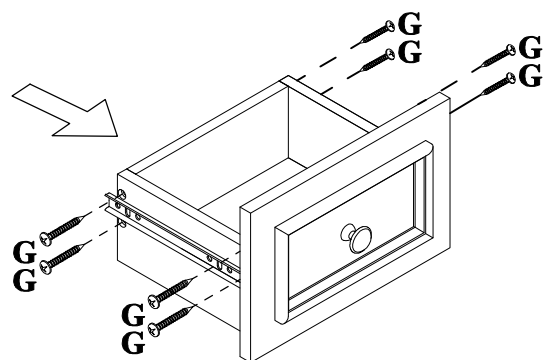


STEP: 12

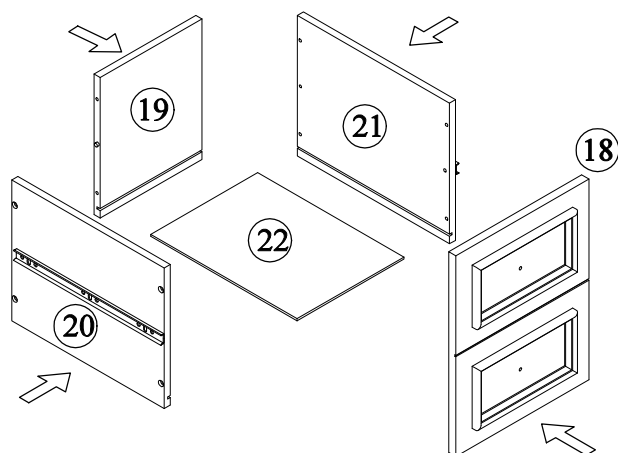



G

8PCS

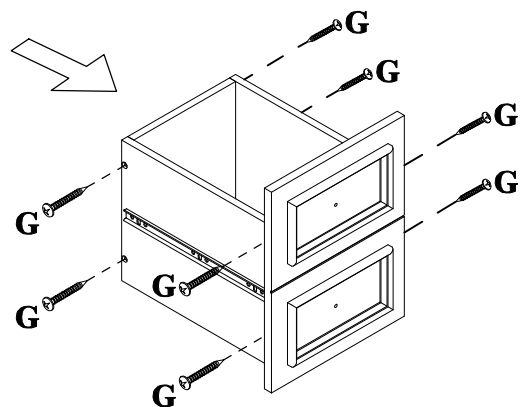


STEP: 13

H		K	
2PCS		2PCS	


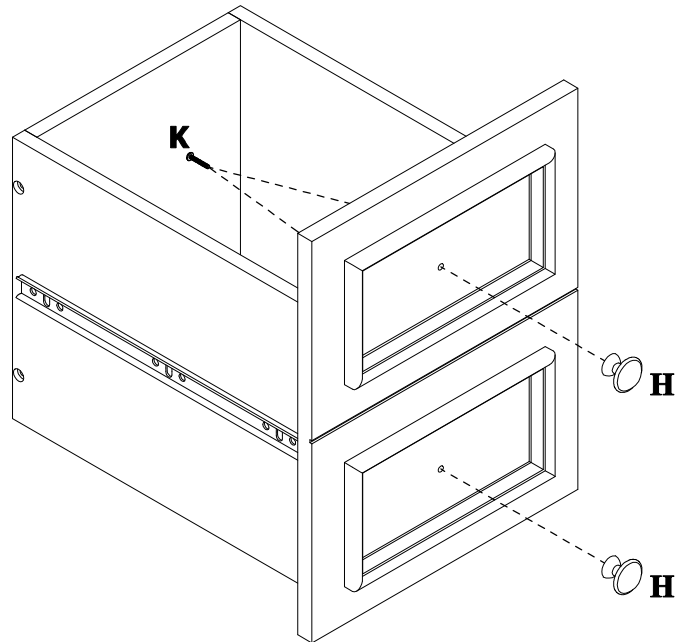


STEP: 14

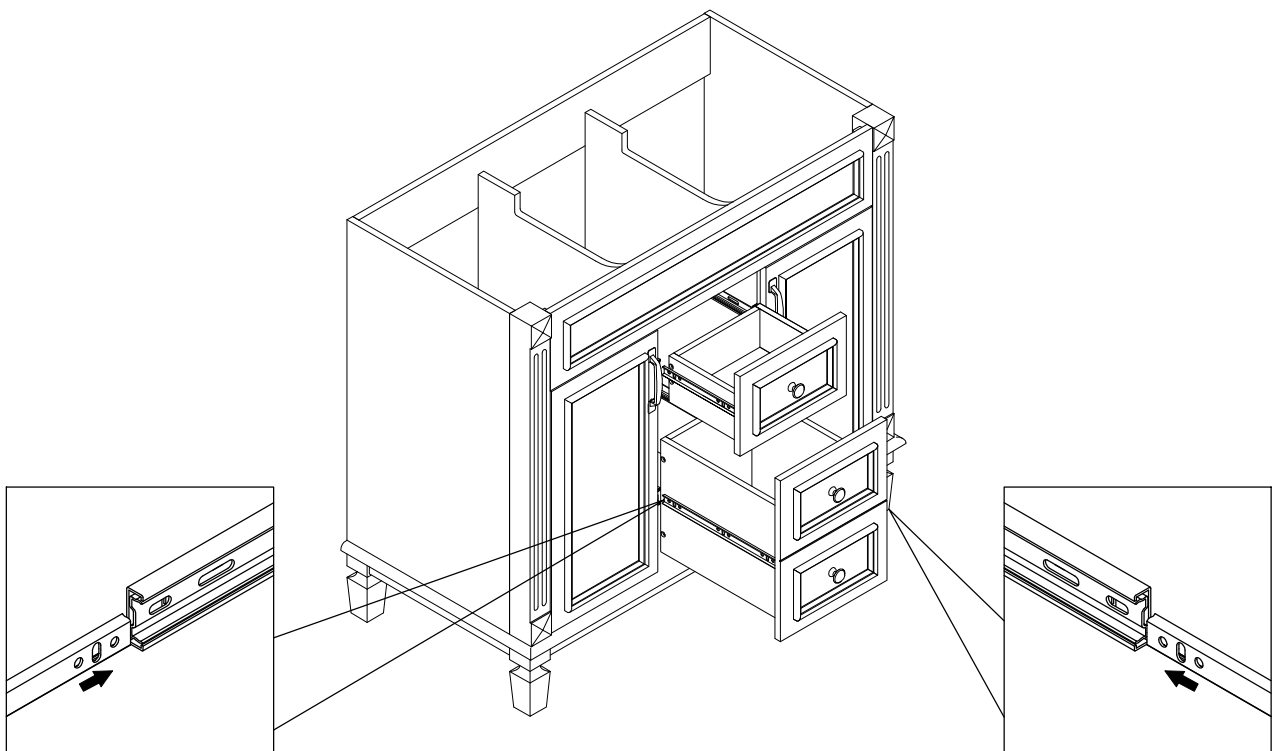


STEP: 15

Q

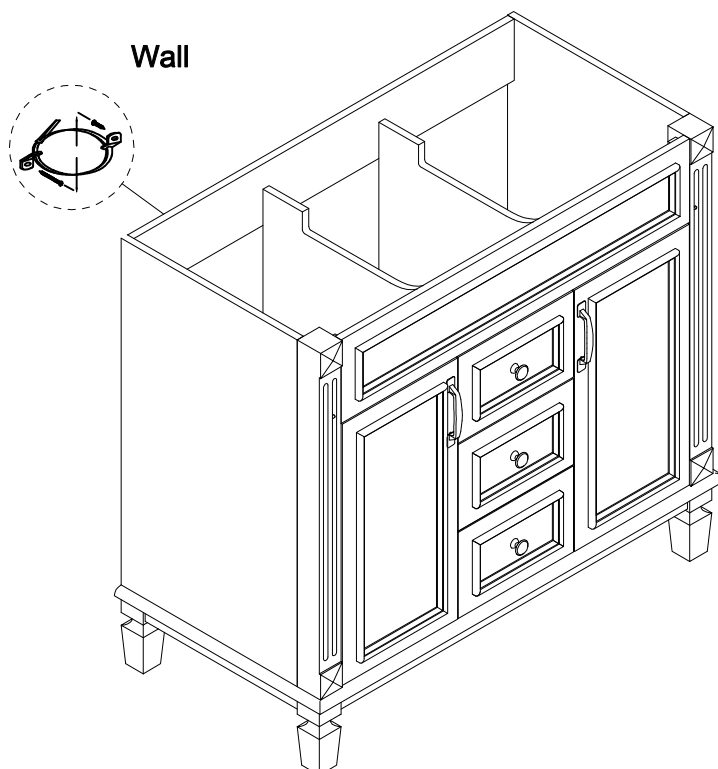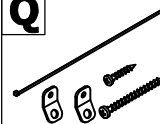


STEP: 16

**Install the sink on the cabinet with glue.
Let stand for 24 hours**

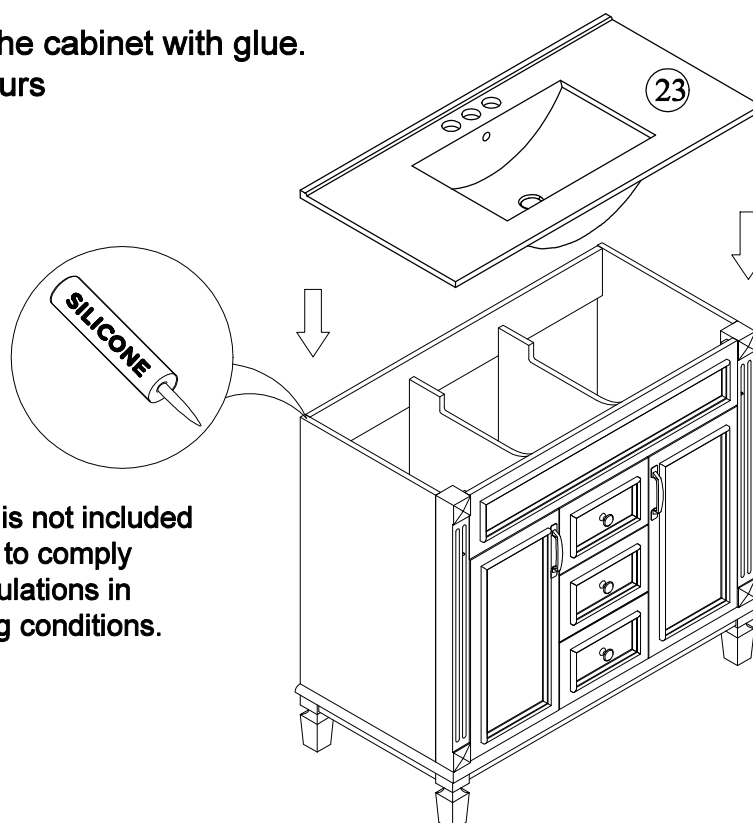


***Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.**

STEP: 17

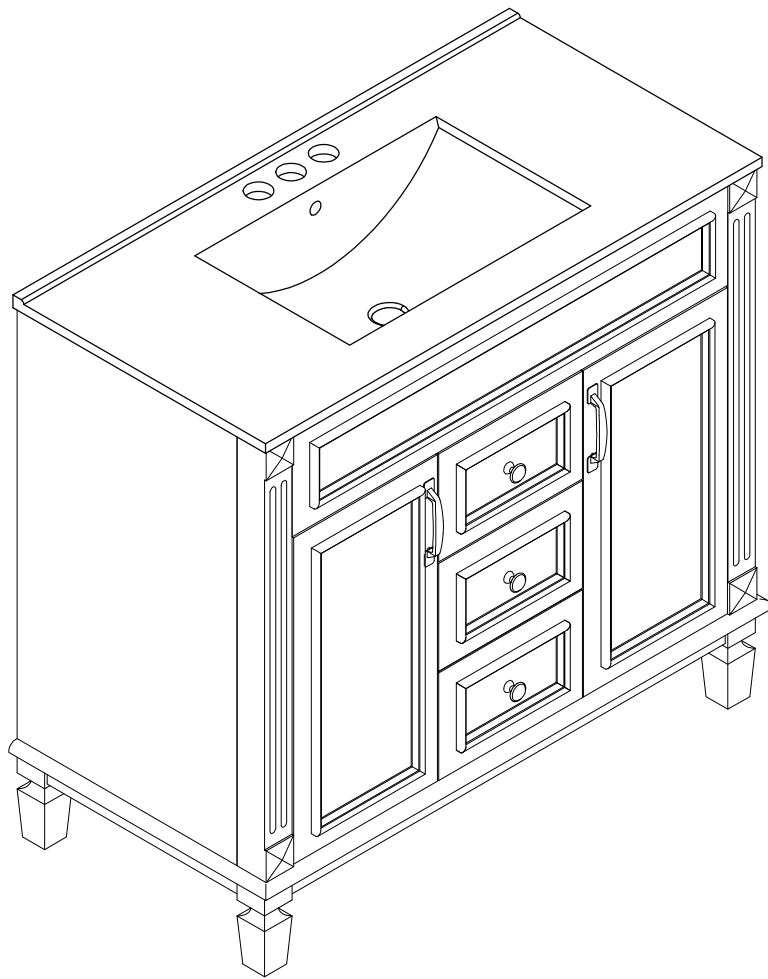


HINGE ADJUSTMENTS

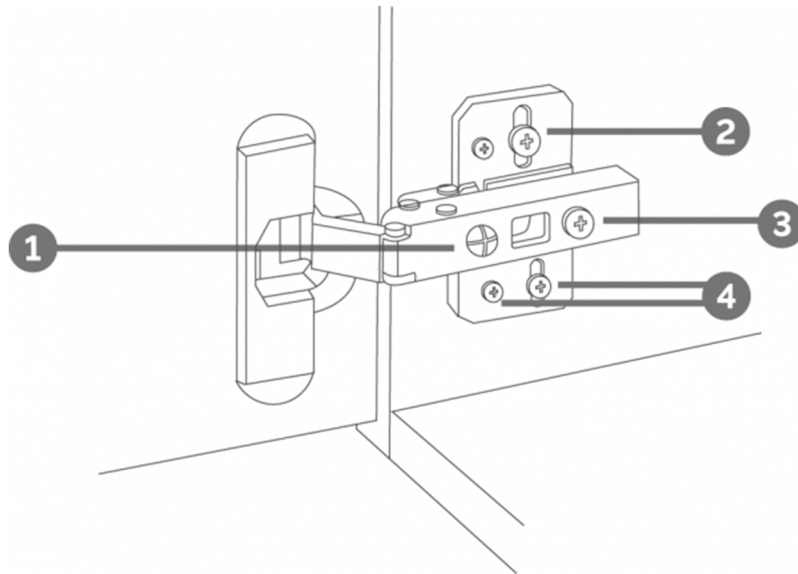


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

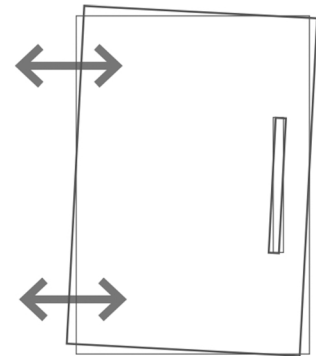

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

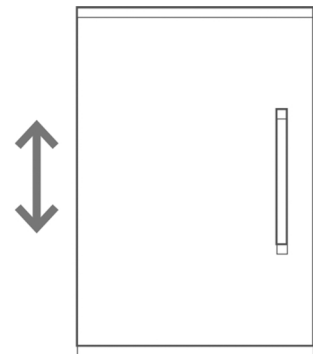

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

