
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment.

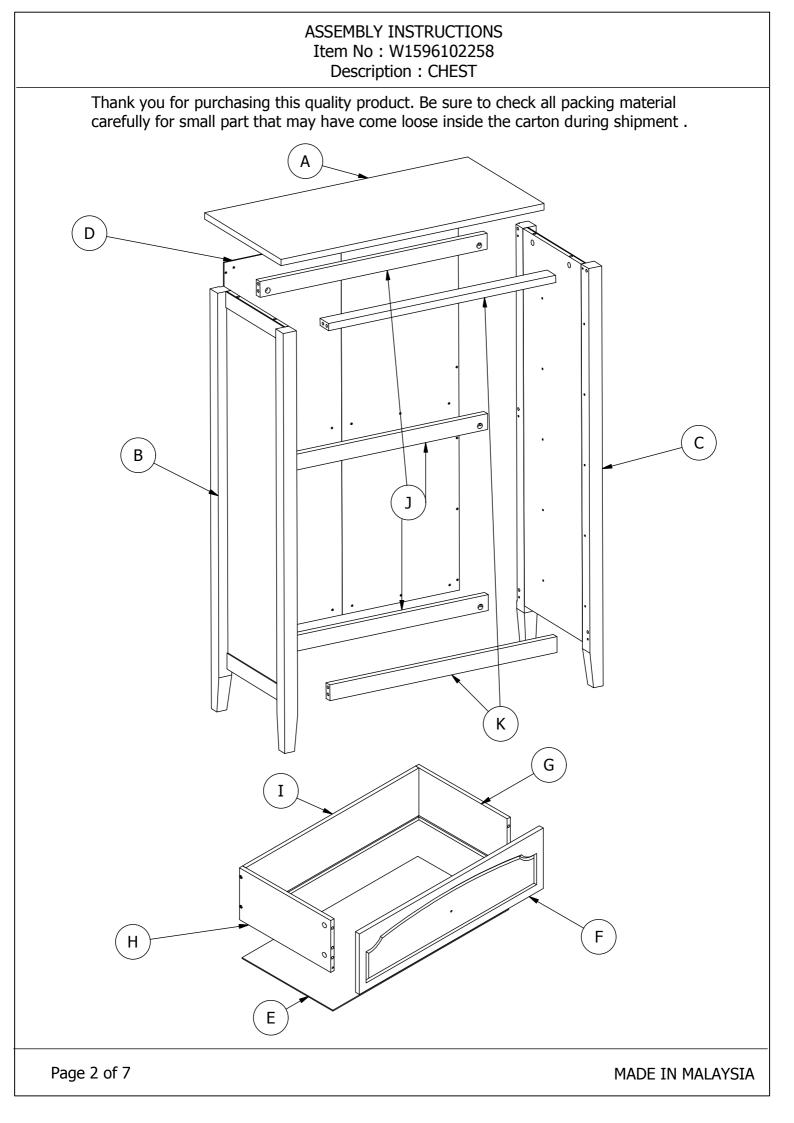

W1596102258



Thank you for purchasing this quality product . Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment .


PART	LIST:						
No.	Description	Sketch	Quantity	No.	Description	Sketch	Quantity
A	Table Top		1 Pc	F	Drawer Front Panel		5 Pcs
В	Cabinet		1 Pc 1 Pc	G	Drawer Right Panel		5 Pcs
	Panel			Н	Drawer Left Panel		5 Pcs
	Cabinet Right Panel						
C				Ι	Drawer Back Panel		5 Pcs
	Cabinet Back Panel		1 Pc				
D				J	Drawer Inner Bone		3 Pcs
E	Drawer Bottom Board		5 Pcs	К	Drawer Outer Bone		2 Pcs

HARDWARE LIST											
No.	Description	Sketch	Size	Quantity	No.	Description	Sketch	Size	Quantity		
1	Drawer Runner Slide	A A A A A A A A A A A A A A A A A A A	Standard	5 Sets	6	Wooden Handle			5 Pcs		
	Silue				7	Handle Screw		M4x22	5 Pcs		
2	Dowel		24x8.5	34 Pcs	8	Chipboard		M3.5x12	40 Pcs		
3	Ultra Shallow Cam		15x9.5	34 Pcs		Screw	U.M.				
4	CSK Cap Woo Screw		M6x40	20 Pcs	9	Panel Screw (Black)	Daman	M3.5x12	30 Pcs		
5	Wood Dowel		8x30	20 Pcs	10	Allen Key		M4	1 Pc		


Page 3 of 7

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment .

Step 1: Prepare the Cabinet Right Panel (B) & Cabinet Left Panel (C) then assemble the Drawer Runner Slide (1) on the pre-drilled holes with Chipboardboard Screw (8).

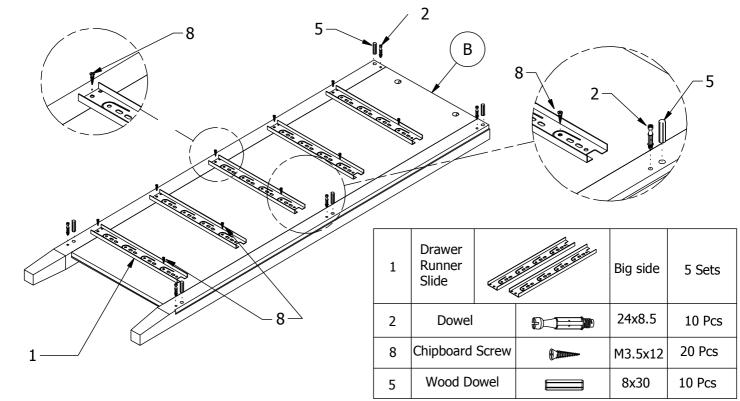


Step 2: Attach the Drawer Inner Bone (J) & Drawer Outer Bone (K) with Ultra Shallow Cam (3) to ready the cabinet structure as picture shown. ▼

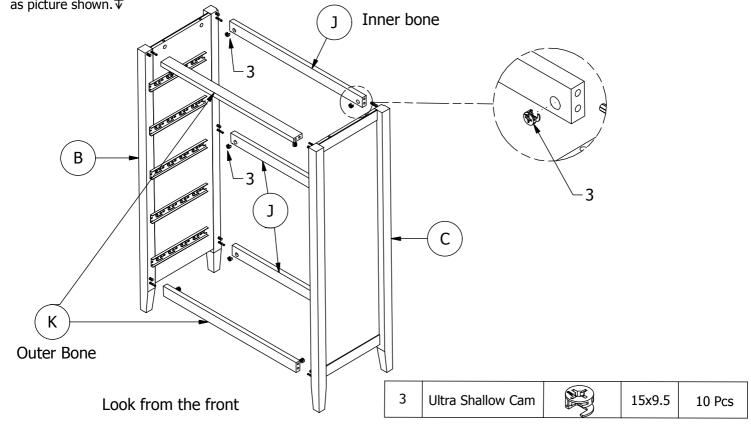


Page 4 of 7

Thank you for purchasing this quality product . Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment .

Step 3: Insert the Dowel (2) onto the pre-drilled holes on the bottom part of Table Top (A).

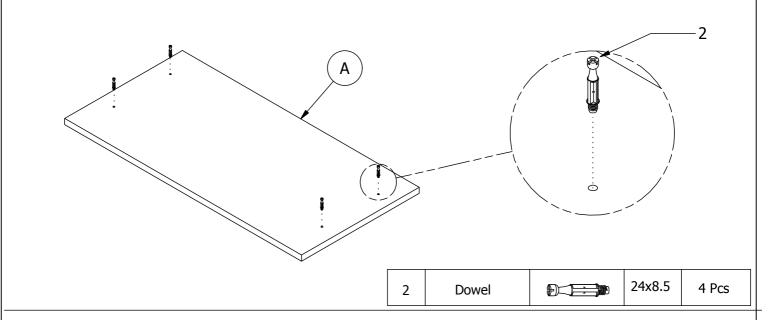


Step 4: Ready the cabinet structure and flip the Table Top (A) to cover on top of the cabinet. Then tighten the attachment with Ultra Shallow Cam (3) to the Dowel pre-installed in previous step 3. You would need to ready a screwdriver to perform this step.

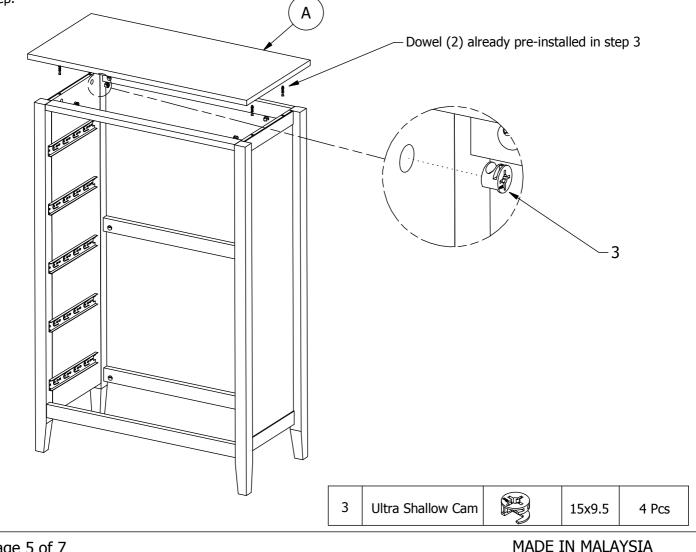

Thank you for purchasing this quality product . Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipment .

Important: Wood Dowel (5) ONLY to be inserted on pre-drilled holes of Drawer Right & Left Panel (G & H)

Step 5: Lay the Drawer Front Panel (F) on even-layered flat surface, put in the Dowel (2) on each side and take the Drawer Panel (G & H) insert into the Pre-drilled holes of the Front Panel, tighten the part with Ultra Shallow Cam (3). Next, slide in the Drawer Bottom Board (E) finish up with screwing the Wooden Handle (6) with using Handle Screw (7).

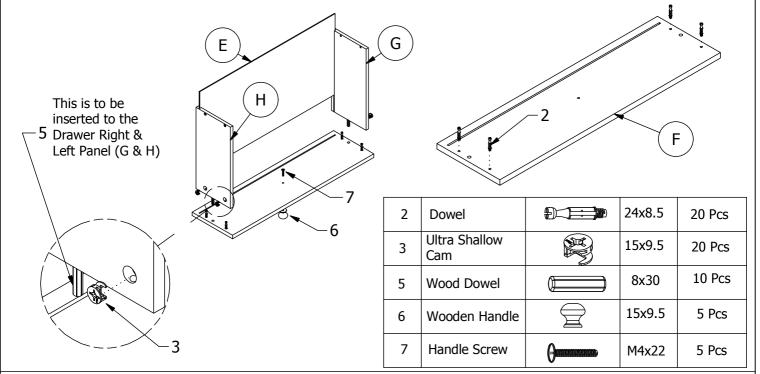

Step 6: Setting up the Drawer with its Drawer Back Panel (I) with CSK Cap Screw (4) with the help of Allen Key (10). Assemble the Drawer Runner Slide (1) to the Drawer Panel (G & H) by using Chipboard Screw (8).

