ASSEMBLY INSTRUCTIONS

ITEM #: WF313002

Thank you for purchasing this quality Product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. idenlify and count all parts and compare with the parts list below.



ASSEMBLY INSTRUCTION:

- 1. Remove hadware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior start of assembly.
- 3. Please follow attached instruction in the sme sequence as numbered asure fast and aesy assemblly.

WARNING!

1. Dont attempt to repair or modify parts that are proken or defective. Prease contact the store immediately.

- 2. This productis for home use only and not intended for commercial esatablishments.
- 3. Two persons are required for assembly.

4. Approximate assembly time 1/2 hours.5. Component parts and fittings contained in the box. Prease sort out all parts before you begin to assemble the

item. This is to make sure you always use the correct part. 6. It is STRONGLY RECOMMENDED that you ANCHOR this product toling furniture can cause serious injuries and death. To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wallr other solid surface, using the anchor straps provided appropriate fixings.


No.	Component		Q'ty
A		Sink	1
В		Side Panel-Left	1
С		Side Panel-Right	1
D		Middle Panel-Left	1
E	\sum	Middle Panel-Right	1
F		Shelf	1
G		Bottom	1
Н		Back Panel	1
I		Front Rail	1
К		Door-Left	1
L		Door - Right	1

No.	Component		Q'ty
м		Drawers flip-Front	1
Ν		Drawers flip-side Left	1
0		Drawers flip-side Right	1
Р		Drawers flip-Back	1
Q	$\displaystyle \longleftrightarrow$	Drawers flip-Bottom	1
R		Drawers-Front	1
s		Drawers side-Left	1
Т		Drawers side-Right	1
U		Drawers-Back	1
V		Drawers-Bottom	1

No.	Hardware		Q'ty
1	(EI)	Cam Lock	20
2	os m	Cam Lock Screw	20
3		Wooden	36
4	OLDE	Srews Ø4x25	14
5	R R	Handles	2
6	Q	Srews Ø4x30	4
7	00	Knob	2

Hardware Q'ty No. 8 Srews Ø4x20 2 1 9 **D**w Srews Ø3x15 8 Flap Stay 10 1 11 Ðm Srews Ø3x12 4 12 Door Magnet 2 13 Srews Ø3.5x15 6 Com. 14 Angle Bracket 4 15 Srews Ø3.5x12 16 (D) Sala Not Included ⋑

<u>STEP : 1</u>

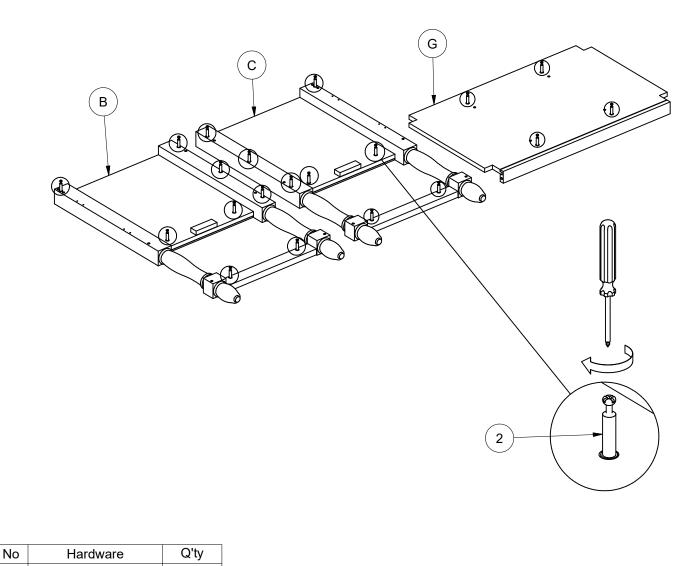

Cam lock Screw

20

