

Intelligent toilet

Operation

instruction

- First of all, for your purchase of our products,
Express our sincere thanks!
- Please read this manual carefully before use,
In order to use the product correctly.



Thank you for choosing our smart toilet. Please read this manual carefully and use it correctly. Please keep this manual properly and read it carefully before use.

※ note: this instruction manual contains after-sales service guide.

Function introduction ----- 01

Installation method ----- 02

Commissioning after installation ----- 05

Notifications ----- 07

Common troubleshooting ----- 10

Daily maintenance ----- 12


Rear wash	The buttock washing nozzle sprays water with set temperature and water pressure according to the set position, and thoroughly cleans the buttock position after defecation.
Feminine wash	Women's washing nozzle sprays water with set temperature and water pressure according to the set position, which is specially designed for women's washing, effectively preventing contact and infection.
Position adjustment	When cleaning, the nozzle can be adjusted forward or backward to meet the cleaning requirements of users in different seating positions.
Comfort wash	When cleaning, the nozzle can be set to move back and forth to enhance the cleaning effect.
Instant thermal cleaning	The living water can instantly reach the set water temperature with the high-power heater, and the number of times of washing is unlimited at any time.
Water pressure regulation	By setting, the water pressure intensity is adjusted to the washing water pressure applicable to the user.
Water temperature regulation	By setting, the outlet water temperature is adjusted to the temperature suitable for users.
Warm air drying	Built-in heating air outlet system, when the temperature is set, the warm air blown out can dry the cleaned water drops.
Air temperature regulation	By setting, the drying air temperature is adjusted suitable for the user.
Seat ring heating	After the heating state is set, the warm seat can make you feel warmer when going to the toilet in cold winter.
Seat temperature regulation	By setting, the temperature of the race can be adjusted suitable for the user.
Sense seat	After seating, it automatically senses that the toilet is in a standby state.
Blackout flushing	When the water is not cut off, the toilet can be flushed when the power is cut off, does not affect the use of the toilet.
Automatic drying	After cleaning, the drying function will be turned on automatically, more convenient for function setting.
Off-seat flushing	After the user leaves the seat ring, the toilet will automatically start flushing.
Seat inner wall moistening	When the human body is seated, some water will be sprayed to wet the inner wall of the toilet.
Intelligent diagnosis	Diagnose and prompt the toilet when some abnormal phenomena occur.
Pre-wet	Remote control of the toilet seat.
Night lamp illumination	Equipped with luminous lamp, it can emit soft light after being turned on, convenient for night use.
Spray rod cleaning	It can start the spray rod extension function, carry out manual cleaning, deeply clean the spray rod.
Intelligent power saving	In the standby state, the sitting temperature is kept at a specific temperature to save the power.
Nozzle self-cleaning	After seating and leaving the seat, the nozzle automatically sprays strong water flow to clean the nozzle.
Soft close	The seat ring and the seat cover slowly fall down to prevent noise.
Digital display screen	Display the temperature by numbers, indicate the function status by icons, and understand the usage requirements more intuitively.
Electric leakage protection	The product is equipped with an electric leakage protection device, which can cut off the power supply before the human body has any perception to protect the personal safety.
Low temperature protection	When the sitting temperature is set to heating, after seating, the seat ring temperature will automatically enter a specific control program to prevent cryogenic burns.
Radar induction	When a person approaches the toilet, the lid will be opened automatically.
Foot touch flushing	When the foot is placed on the front end of the infrared sensor of the product for 1 second or more, the intelligent toilet will automatically flush.
Foot sense open seat	When the foot is placed on the front end of the infrared sensor of the product for 1 second or more, the seat ring of the intelligent toilet will automatically be opened.
Bubbles guard	After this function is turned on, the toilet will automatically spray a layer of fine bubbles to cover the water seal, effectively inhibit bacteria and odor, and also prevent water splash.
Voice intelligent control	Man-machine dialogue by the set instructions to start the corresponding functions of the toilet.
No water pressure limit	The product has built-in water storage tank and pumping system, non affected by the external water quantity.
App control	After being connected with the mobile phone applet through Bluetooth, the corresponding functions of the toilet can be started on mobile phone interface.
Side key	Multi-function buttons are designed on the side of the product, and the product can be used if the remote controller is out of power or fails.
Colorful knob	The knob designed on the side of the product has different colors in different functions, easy operation.

※ Note: Products or configurations in different periods correspond to different functions, so please refer to the physical objects finally received.

03 Installation method

Reference drawing of water intake and drainage position

Installation of sealing ring

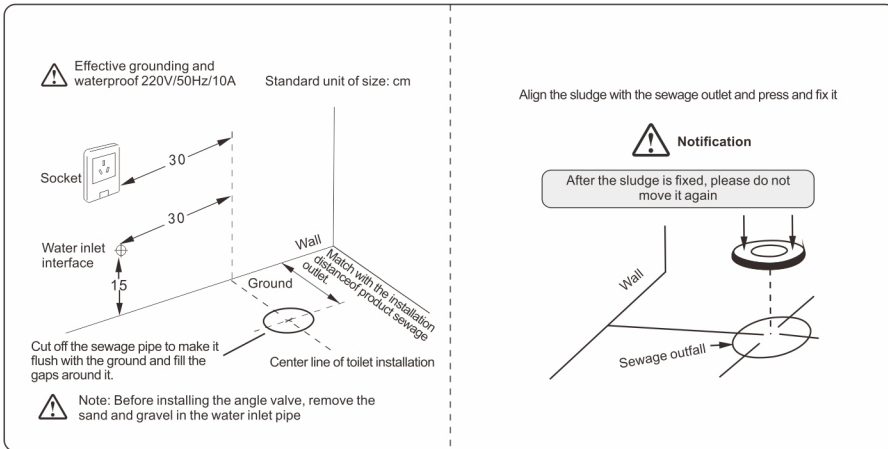

Fix the toilet

1. Clean the ground first, keep it dry, and conduct a comprehensive inspection of the sewage pipe to see if there is any sediment, waste paper and other debris blocking in the pipe. At the same time, check whether the front, back, left and right sides of the ground where the toilet is installed are horizontal. If the ground is uneven, level the ground when installing the toilet.
2. Determine the center of the sewage outlet and draw a cross center line.
3. Turn the toilet slightly, determine the center on the drain outlet of the toilet, and draw a cross centerline, which should extend to the outside around the bottom of the toilet.
4. Install the intelligent toilet vertically, and make sure that the crosshair on the toilet matches the crosshair of the sewage outlet on the ground, and press the sludge hard. Then, put a circle of glass glue around the bottom of the toilet, and keep the front, back, left and right levels after the toilet is installed.




Warning


It is forbidden to fix ceramics with cement, otherwise it may cause ceramic cracking. Keep it still for 24 hours before use.

03 Installation method

Installation of water inlet pipe

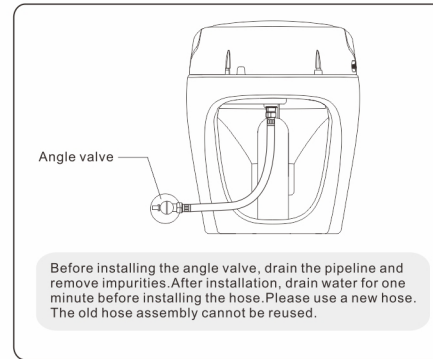


Power-on

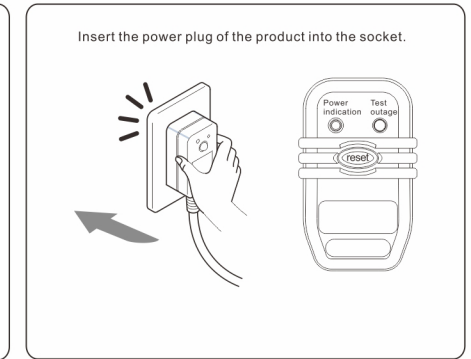

Installation of remote control

1. Install the remote control bracket.

Clean the position where the remote control bracket is to be installed, then tear off the back glue of the bracket, press it firmly on the wall, and keep it for a while before placing the remote control.

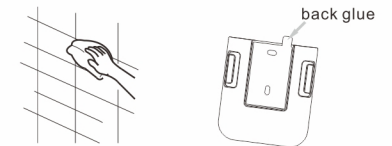

2. Battery:

Open the battery cover at the bottom of the remote control, put in the AAA battery correctly, and then covers the battery cover.



Attention

1. The installation position of the remote control should be confirmed with the user, and the appropriate carrying distance should be selected.
2. In order to prevent the battery from cracking and leaking, please observe the following terms;
 - Please use a new battery of the same specification when replacing the battery;
 - Please remove the battery when not in use for a long time;
 - When replacing the battery, be careful that the polarity is not reversed.




Warning

- Do not spill water on the remote control, otherwise the product may not work properly.
- Please place the remote control on the remote control bracket when not in use. (Please be careful not to drop the remote control when using it)
- Falling of the remote control may cause malfunction or damage.


03 Installation method

When it is necessary to disassemble or install the upper half, it should be carried out according to the following requirements.


1. Disconnect the power supply and pull out the power plug.

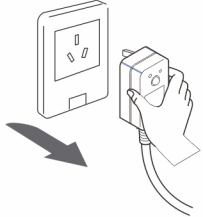

2. Close the angle valve and remove the hose from the angle valve.

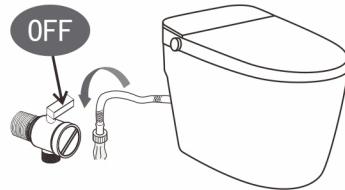


3. Disassemble the upper half.

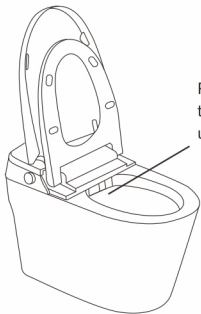

Put your hand into the gap here, and lift it up hard to remove it.

Note: Please unplug the foot sensor cable before removing the cover.

4. Disassemble and install.

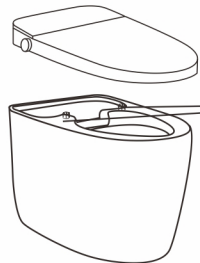

Align the two holes of the upper cover with the two buckles and press them down.

Note: After the upper cover is installed, remember to connect the foot sensor and other wires back.

04 Commissioning after installation

Open the angle valve: before turning on the power supply, open the angle valve to provide water for the whole machine.

⚠ Note: After opening the angle valve, stick paper towel on the pipe joint to make sure there is no water leakage.

Confirm and commissioning.

1. Check whether it is effectively grounded.

- It is necessary to carry a power polarity line detector to check whether the socket of the customer's home is effectively grounded. If it is not effectively grounded, it is not allowed to use this product. If the customer forces it to use, all consequences shall be borne by the customer.



ground connection

4. Check the lighting function


- Press the "Lighting" button on the remote control briefly to turn the lighting function on or off.

5. Check the power saving function

- Press the "Energy Saving" button on the remote control briefly to turn on or off the power saving function.


2. Check the power supply

- Confirm that the power plug has been plugged in, press the reset button, and the indicator lights up. According to the test, the power supply is cut off, and the indicator lights off, indicating that it is normal and can be put into use. Then press the "Reset" button on the plug to power up. After power-on, you can hear the buzzer of the system.

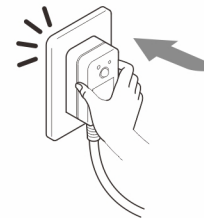

6. Check the human body's seating sensing function

- Put the wet wipes in the seating sensing position to simulate the human body's seating. When the system senses that someone is seated (the buzzer beeps), clean the spray bar to flow out, and the system function can be enabled.

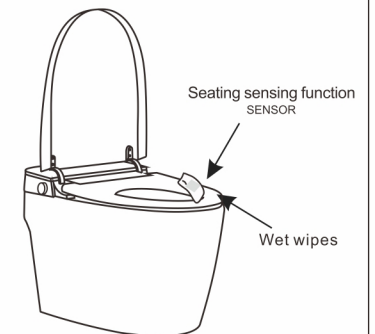


3. Check the seat temperature adjustment function

- Press the seat temperature button on the remote control briefly to adjust the seat temperature.

04 Commissioning after installation

7. Check the washing function

- 1. When the power is turned on and the machine is started, the human body seating function is effective. When the washing function is not running, press the buttock washing or woman washing key on the remote control to turn on the washing function.
- 2. Press the □ button to stop.
- 3. Temperature adjustment: Press the water temperature button on the remote control briefly to adjust the water temperature.
- 4. Water pressure intensity: During the cleaning process, press the water pressure button on the remote control briefly to adjust the water pressure intensity.
- 5. Spray bar position: During cleaning, press the nozzle forward button or the nozzle backward button of the remote controller for a short time to adjust the spray bar position.

 Note: In checking the washing function, please block the sprayed water with your hands.

8. Check the drying function

- 1. When the power is on and the machine is started, the human body seating function is effective. When the drying function is not running, press the drying key on the remote control to turn on the washing function.
- 2. Press the □ button to stop.
- 3. Temperature adjustment: Press the air temperature button on the remote control briefly to adjust the air temperature.

9. Check the cleaning function of spray bar.

- When the machine is powered on and turned on, it is effective for the human body to leave the seat. Press the spray bar cleaning button on the remote control briefly, and the spray bar will stretch out, which is convenient for manual cleaning.

10. Check the automatic flushing function.

- Press the "Flush" button on the remote control for a short time, and you can perform an automatic flush in any state of startup.

If the user purchases the automatic style, please check the following functions:

- Press the on the remote control "Toilet seat ring turn"/"Cover turn" Turn the flip function on or off.

Place your foot on the front end of the right foot sensor for 0.5 seconds or more to turn on or off this function.

If the user buys the sensing flush style, please check the following functions:

- Place the foot in front of the right foot sensor for 1 second or more, and the whole machine will automatically flush.

05 Notifications

Please read this section carefully. The precautions listed here are important contents related to safety. Please be sure to observe them.

Logo description is as follows:








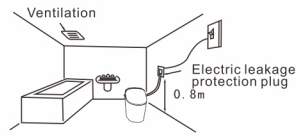

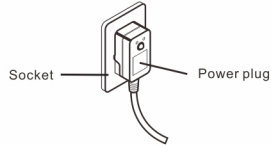
Warning

False operation neglecting this sign may cause serious injuries or other accidents.









Notification




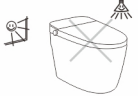
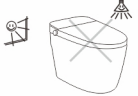




False operation neglecting this sign may cause serious injuries or other accidents.

 Warning	 Prohibition of disassembly	Never disassemble or modify the product. Otherwise, it will cause fire, electric shock and damage caused by abnormal actions.
	 Don't splash water	Do not splash water on the product body and the power plug, or it will cause fire or electric shock. 
	 Must observe	<p>This is an electrical product, so please do not place it in a place where it is easy to be splashed by water or with high humidity. When using in the bathroom, please install a ventilation fan to keep the bathroom well ventilated. Otherwise, it will cause fire or electric shock.</p> <p>Please set the socket for power supply as follows. If it is not set according to the following requirements, it will cause fire.</p> <ol style="list-style-type: none"> 1. the load of the socket must be greater than 2KW; 2. The installation position of the socket is more than 0.8m above the ground, and as far away as possible from the bathtub or shower.  <p>Do not use loose or faulty socket, or it may cause fire or electric shock.</p>
	 Grounding	<p>The grounding wire of this product is grounded, so please be sure to connect it to the grounding wire. If grounding is not connected, electric shock will be caused in case of fault and leakage.</p> <p>Please make sure that the power plug is inserted into the AC 220V/50Hz socket. Otherwise, it will cause machine failure or fire caused by heat.</p> <p>The sequence of phase line, zero line and grounding line in the socket must be correctly connected.</p> 

05 Notifications

 Warning	 Must observe	<p>Be careful of low burns</p> <ol style="list-style-type: none"> When sitting on the seat ring for a long time, please adjust the seat ring temperature to normal. For the following user, please adjust the seat temperature to normal. <ul style="list-style-type: none"> Children, the elderly and other people who can't adjust the temperature to a suitable level by themselves; Patients, disabled people and other people with mobility disabilities; Sleepy people who take sleeping pills (such as sleeping pills, cold medicines, etc.), drink deeply and are excessively tired.
	 Prohibit	<p>Make sure the power plug is inserted completely. If not completely inserted, it will cause fire due to electric shock or heat. Please disconnect the power supply when cleaning.</p> <p>Do not disconnect the power plug with wet hands, otherwise it will cause electric shock.</p> <p style="text-align: right;"> Do not wet your hands</p> <p>Do not continue to use the product when it fails.</p> <ol style="list-style-type: none"> in the following cases, please disconnect the power plug and close the inlet angle valve <div style="border: 1px solid black; padding: 5px;"> <p>The malfunction</p> <ul style="list-style-type: none"> Water leakage from the inside of water pipes and products. Abnormal sound and odor. The product is unusually hot The product is cracked Product smoking Toilet clogged </div> <ol style="list-style-type: none"> If you continue to use it in case of failure, it will cause problems such as fire, electric shock and indoor water seepage. <p>Do not damage or replace the power cord, power plug and connecting cable without permission.</p> <div style="border: 1px solid black; padding: 5px;"> <p>Do not scratch, process, get close to high temperature, bend, twist, stretch, put down heavy objects or bundle them.</p> </div> <ol style="list-style-type: none"> If it is damaged and still used, it will cause electric shock, short circuit and fire; The power cord of this product adopts Y-type connection. If the power cord is damaged, it must be replaced by our company or our authorized professional service personnel. <p>Do not use water other than tap water.</p> <ol style="list-style-type: none"> Otherwise, it will cause dermatitis and other problems; If there is foreign matter mixed in and accumulated in the piping, it will cause failure. <p>Patients with pacemakers should not use this product. Otherwise, it will cause electromagnetic interference, which will damage the function of pacemaker and cause life danger.</p> <p>Do not put lit cigarettes into the toilet or place high-temperature and combustible materials near the toilet, otherwise it will cause a fire.</p> <p style="text-align: right;"> Prohibit No high-temperature</p> <p>Don't let people with physical, sensory or mental defects or lack of experience and knowledge (including children) use this appliance. Unless they get the supervision or guidance of the person responsible for safety on the use of the product.</p> <p>Please don't let children play on the seat ring or the seat cover, and don't step on or sit on the seat cover, otherwise it will cause malfunction and safety accidents.</p> <p style="text-align: right;"></p>

05 Notifications

 Notifications	 Prohibit	<p>Do not lean back against the seat cover, or the seat cover will be damaged.</p> <p style="text-align: right;"></p> <p>Do not expose the product to strong light or direct sunlight for a long time. Otherwise, the plastic parts will be discolored and the temperature of the seat ring will be unstable.</p> <p style="text-align: right;"></p> <p>Do not bend or twist the water supply hose, otherwise it will leak water due to the slack of the connecting part.</p> <p style="text-align: right;"></p> <p>When closing the seat cover and seat ring, please do not use too much force, otherwise the product will be damaged.</p> <p>Please do not flush anything except excrement and toilet paper with toilet bowl, otherwise it will cause toilet bowl blockage, sewage outflow and indoor water seepage.</p>
	 Must observe	<p>When the filter screen of the angle valve is taken out, the angle valve must be closed first, otherwise it will cause water leakage. Once the filter screen of the valve is taken out, it must be tightened when reinstalling it, otherwise it will cause water leakage.</p> <p>When the toilet is blocked, cut off the power supply first, and then dredge it with the pipeline dredger sold in the market. If the power supply is not cut off, the automatic flushing water will continue to work, which will cause sewage overflow and indoor water seepage.</p> <p>When the room temperature in the bathroom is low (zero degrees Celsius or below), please raise the indoor temperature, otherwise the water pipes and products will be damaged due to freezing, which will lead to water leakage.</p> <p>Do not wipe the product body with dry cloth or toilet paper, or it will scratch the product.</p> <p>Do not use it in case of power failure or water cut-off, otherwise the function of the product will not be implemented, causing abnormal .</p> <p>It is forbidden to move the product from the cover plate, otherwise it will cause mechanical failure.</p> <p>Do not pour urine on the toilet body and nozzle, or it will cause malfunction or pink and brown stains.</p> <p style="text-align: right;"></p> <p>When it thunders, please disconnect the power plug, otherwise it will cause failure.</p> <p style="text-align: right;"></p> <p>When traveling or not in use for a long time, please cut off the waterway and circuit, otherwise it will cause safety accidents.</p> <p style="text-align: right;"></p>

06 Common troubleshooting



Caution Do not disassemble, repair or modify it by yourself except for maintenance technicians. (may cause fire or electric shock)

When the product works abnormally, please confirm the following items. If it still cannot be eliminated, please contact our company or local after-sales service department.

I. Machine body

Fault symptom	Confirmation items	Treatment
Can't turn on the machine	Is there a power outage?	Please wait until the power is restored.
	Is the power plug connected in properly?	Please insert the power plug into the socket.
	Is the power turned on?	Please turn on the power.

II. Buttocks wash, women washing function

Fault symptom	Confirmation items	Treatment
Can't spray water	Is the water cut off?	Please wait till the water is restored
	Is the angle valve closed?	Please open the angle valve
	Is the nozzle blocked by foreign matter?	Please clean the nozzle
	Does the human body seat sensing switch act?	Please adjust your sitting position.
Insufficient water temperature	Is the gear too low?	Please reset the water temperature
	Is it set to "no heating" state?	
Halfway off water	Is it the washing time to stop automatically?	Please start the cleaning function again
	Does the human body seat sensing switch act?	Please adjust your sitting position and restart
Water depression	Is the water pressure strength in a weak position?	Please reset the water pressure
	Is the filter screen blocked?	Please clean the water inlet filter
	Is the water pipe blocked?	Restore pipeline state

06 Common troubleshooting

III. Drying function

Fault symptom	Confirmation items	Treatment
Warm air temperature is low	Is the gear too low?	Please reset the air temperature.
	Is it set to "no heating" state?	
Warm air stops halfway	Is it drying time to stop automatically?	Please start the drying function again.
	Does the human body seat sensing switch act?	Please adjust your sitting position and restart.

IV. Seat ring heating

Fault symptom	Confirmation items	Treatment
Seat ring temperature is low	Is the power saving function turned on?	Exit the power saving function
	Is the gear set too low?	Set the seat ring temperature again

V. Automatic flushing

Fault symptom	Confirmation items	Treatment
No automatic flushing	Is the water cut off?	Please wait until the water is restored
	Is the angle valve closed?	Please open the angle valve
	Is the angle valve blocked?	Please clean the angle valve filter
	Is the seating time shorter than 10S?	Please sit down for more than 10S



Warning


Be sure to cut off the power supply before cleaning the product surface.
Do not let water or detergent flow into the product or into the power plug.
● It may cause electric shock, short circuit and fire.



Must observe

1. Nozzle cleaning


When the power is on and the human body leaves the seat, press the "Nozzle Cleaning" button of the remote controller for a short time to turn on the spray bar cleaning function (if the remote controller does not have this button, this function can also be turned on by holding down the seat temperature button for more than 3 seconds). When this function is turned on, the spray bar will stretch out. At this time, please gently wipe it with a soft cloth or a toothbrush. Finally, press the "Stop" key of the remote control to exit the spray bar cleaning.

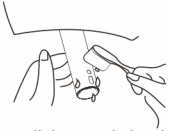

● Do not press or pull the nozzle hard, or it will cause damage or malfunction.

2. Cut off the power supply


Always cut off the power supply before cleaning the product body.

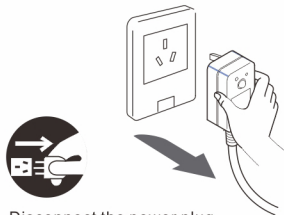

Disconnect the power plug


3. Wipe with soft cloth which is soaked and wrung out

Difficult cleaning dirt can be wiped with diluted neutral detergent. Do not use acidic and alkaline detergents, detergent powder, gasoline thinner, benzene and other cleaning products.

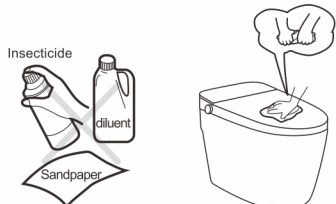

4. Clean filter screen

When the user feels that the water flow is less than usual during use, first close the angle valve, then disassemble the filter screen in the angle valve (twist it with a dollar coin), and clean the filter screen under the faucet with a brush. During cleaning, the filter screen must be completely separated from the water supply hose.

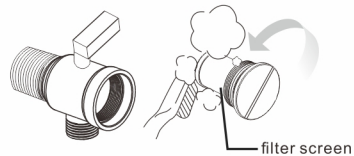

product warranty card

Thank you for purchasing our products. In order to protect your rights and interests, our company guarantees the following: Please contact the purchasing office or our after-sales service office if you find product quality problems.

Product Name	Intelligent toilet	Product model	
Purchase date		Serial number	
Customer Name		Warranty period	2 years from the date of purchase
Contact address			
Maintenance records	Faults and solutions	Repair date	Repair personnel

User retention association

Product assurance related matters

- * When purchasing this product, please fill in the product guarantee carefully and keep it properly.
- * Within 30 days from the purchase date, if any quality problem is found in the normal use of the product, the company will be responsible for replacement after being certified by the company's technicians.
- * During the warranty period, the company will repair for you free of charge if the fault occurs under normal use as mentioned in the instruction manual, precautions, labels and other contents.
- * For the services within the scope of paid maintenance services during the warranty period, maintenance fees will be charged as appropriate.

Paid maintenance service

- * After installation due to improper use or artificial failure and damage.
- * Faults caused by unauthorized disassembly or modification.
- * Faults caused by natural disasters such as fire, typhoon, flood, earthquake, lightning and abnormal voltage.
- * Install the machine according to customer's requirement.
- * The service life of consumable parts has expired.
- * The product has been repaired by technicians not approved by the company.
- * Faults and damage caused by use outside the ordinary home (e.g. in public places).

Please fill in the warranty card information completely, tear off the "User receipt" and send back to the company, otherwise you will not enjoy the warranty policy!

The user name		Contact phone number	
Contact address			
Buy the shop		Purchase date	
Product model		Satisfaction	<input type="checkbox"/> satisfied <input type="checkbox"/> commonly <input type="checkbox"/> Not satisfied with
Series no.		Customer signature	

User retention association