INSTALLATION REQUIREMENTS

Tools Required

ADJUSTABLE PIPEWRENCH	ADJUSTABLE WRENCH	UTILITYKNIFE	PLIERS	TAPEMEASURE	LEVELER
SAFETYSHOES	SAFETYGLASSES	SCREWDRIVER			

Materials Required

- Plumbers Putty
- Gypsum Cement(optional)
- Protective Covering for the Bathtub
- Wall Coverings (asnecessary)
- Construction Adhesive(optional)
- Silicone Sealant/Caulking
- Nails

INCLUDE PARTS	DESCRIPTION
	Flexible Tube
	P-Trap
	Adapter
	Bathtub

INSTALLATION NOTES

- Read the entire installation manual before beginning the installation. If installing a rim-mounted faucet (only on certain models), make sure there is no interference with the overflow drain before drilling any holes
- Position a protective covering or similar material in the bottom of the unit to protect the bathtub's surface from being scratched

CLEARANCE REQUIREMENTS

- Measure the area where you intend to install the bathtub to ensure you have adequate space available for the installation

SITE REQUIREMENTS

Sub-floor Preparation

- Check the flooring where the bathtub is going to be installed and make repairs as needed. Make sure the sub-floor is level. It is strongly recommended to prepare a waterproof layer for the sub-floor beforehand
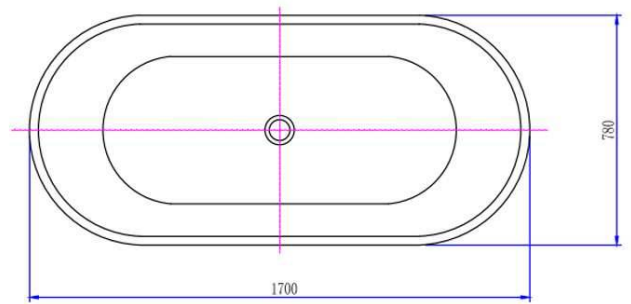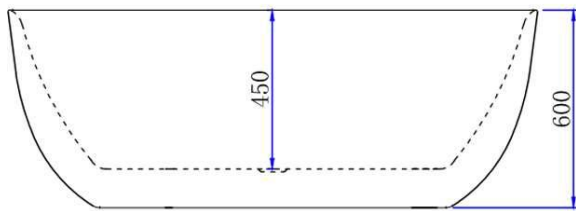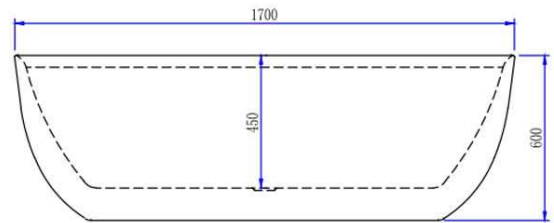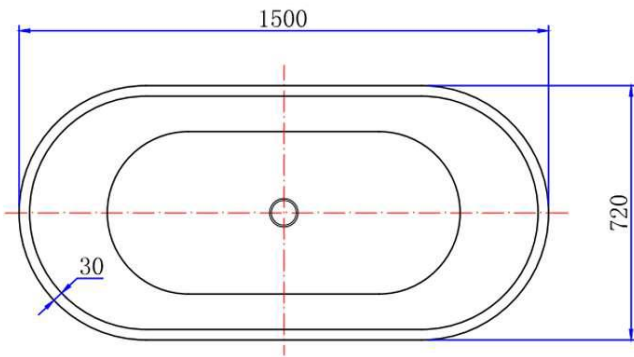
FAUCET INSTALLATION ON THE BATHTUB (OPTIONAL)
INSTALLATION DU ROBINET SUR LA BAIGNOIRE (OPTIONNEL)

2" [50]

4 5/16" [110]
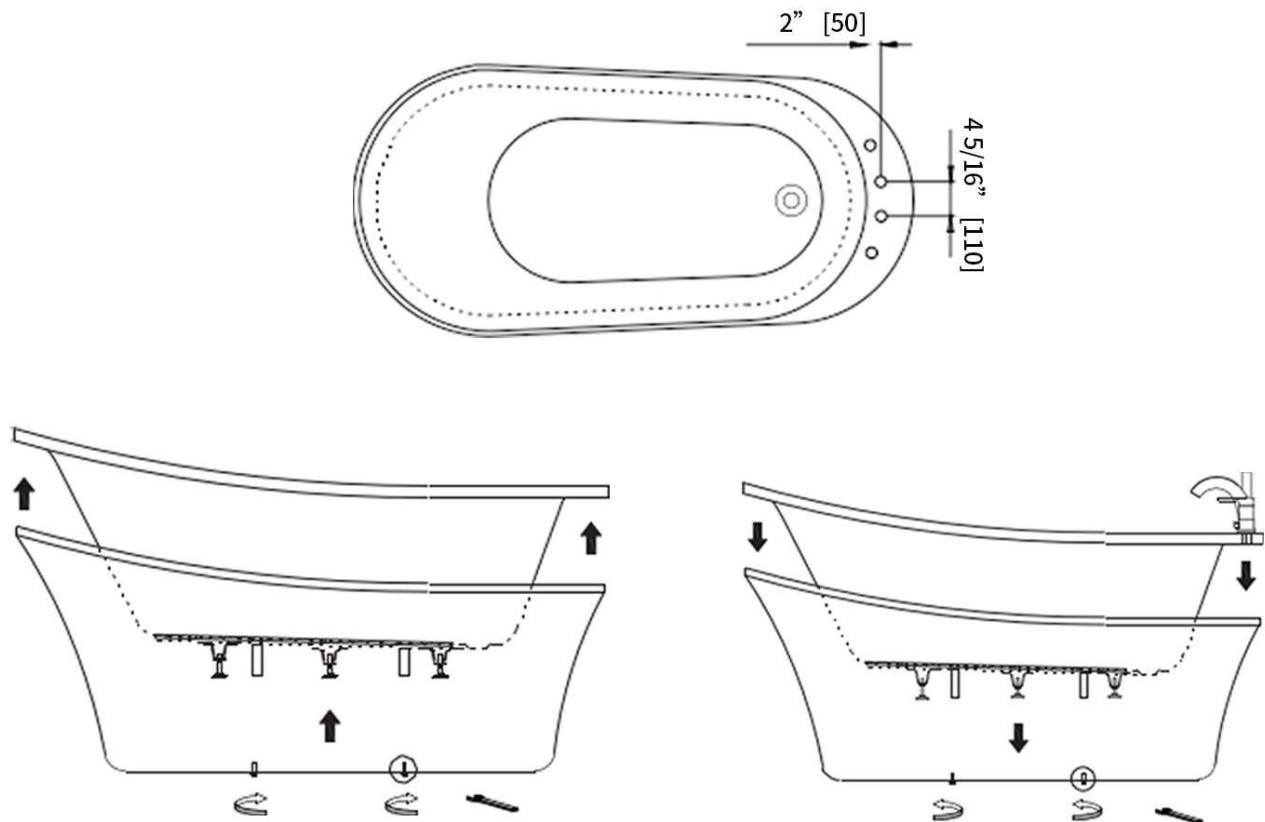
- Locate where you will drill the holes into the acrylic, and stick masking tape onto that area. This will prevent the acrylic from chipping

- Drill holes for the faucets on the bathtub at the desired location

- Unscrew the bolts at the bottom of the bathtub using an adjustable key. Then carefully take out the top of the tub and place it on a throw rug or other protective floor covering to prevent damage to the bath and the floor

- Install the faucets according to the faucets' manufacturer instructions. Then assemble the top of the bathtub with the skirt, and secure the bolts at the bottom as shown in the illustration

Notes: Check all pipe connections to ensure no leakage occurs.

SPECIFICATION

84572

| 1500 |
| 720 |
| 30 |
| 450 | 600 |

84778

| 1700 |
| 450 | 600 |
| 780 |
| 1700 |

27572

| 1500 |
| 30 | 720 |
| 435 | 560 |

27778

| 1700 |
| 30 | 780 |
| 465 | 620 |

SPECIFICATION

1500

720

450

560

44572

1700

780

450

600

44778

1500

280

725

30

660

450

580

21572

1600

800

30

660

450

580

21680

1700

300

800

30

660

490
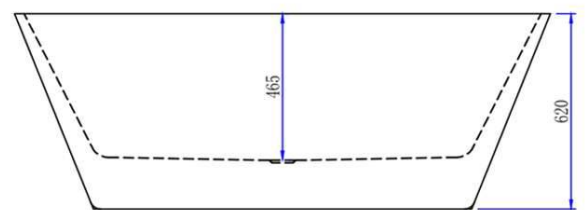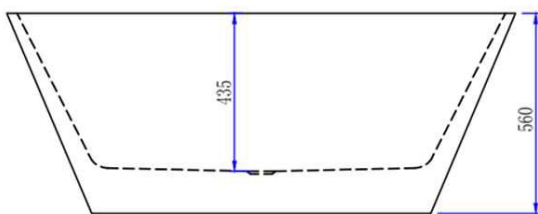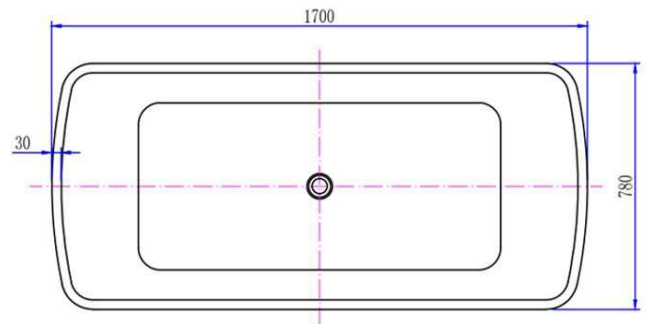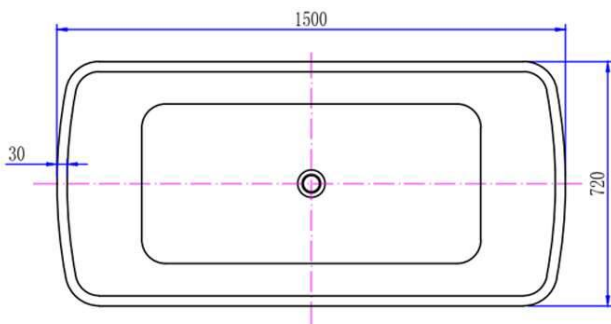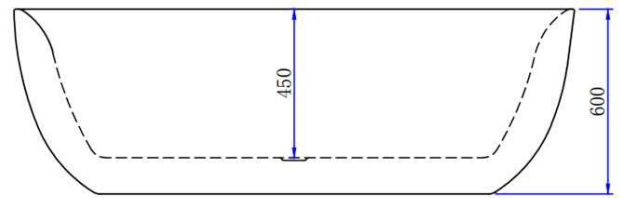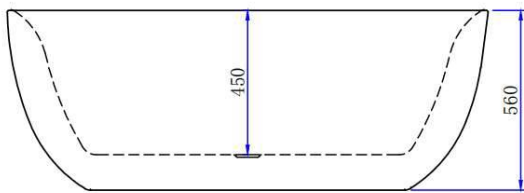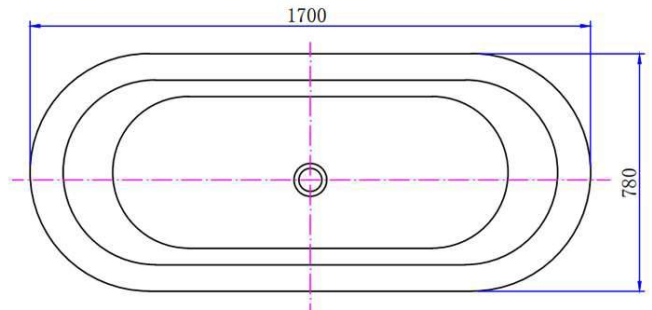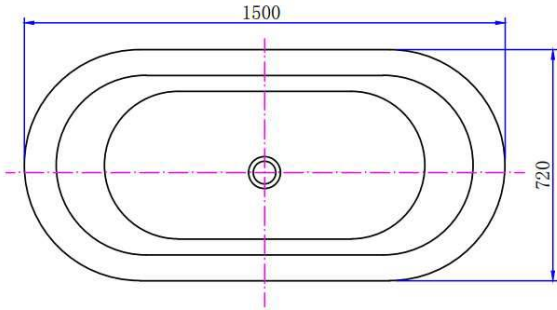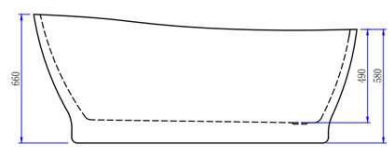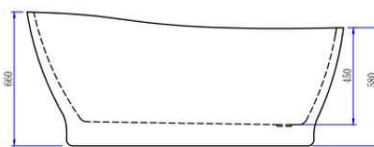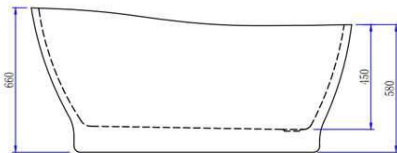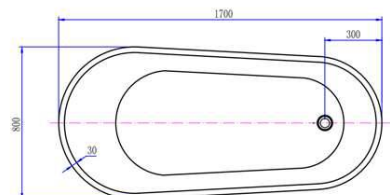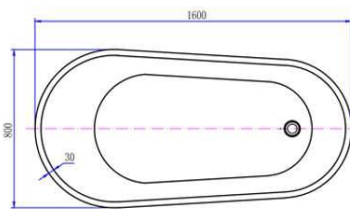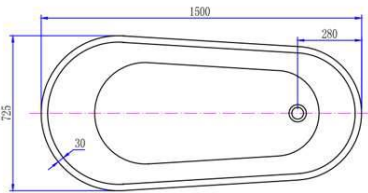
580

21785

SPECIFICATION

430 580

430 580

1500 250 730

1700 270 800

116573

116780

450 610

430 600

1500 370 730
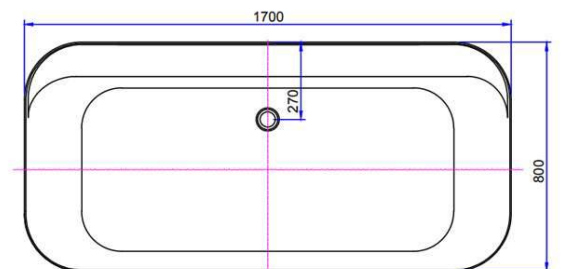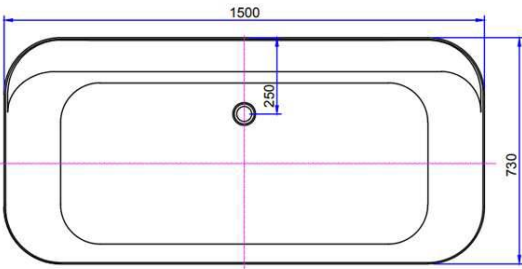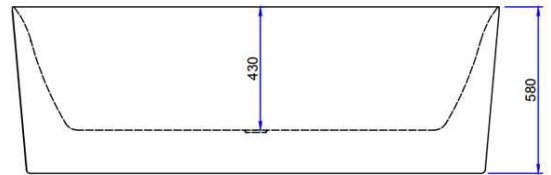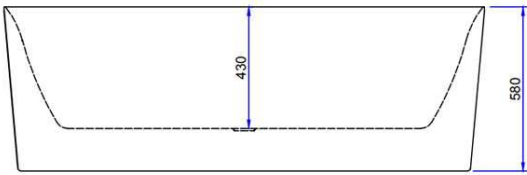
1700 450 780
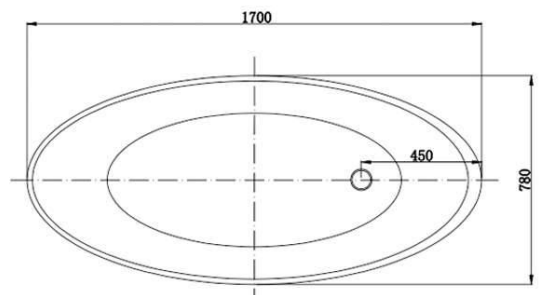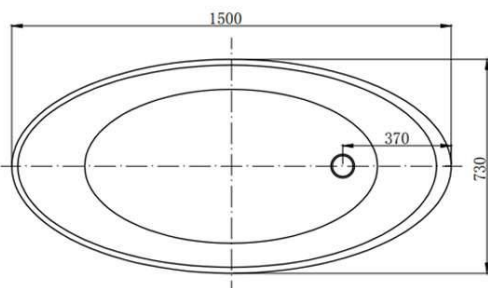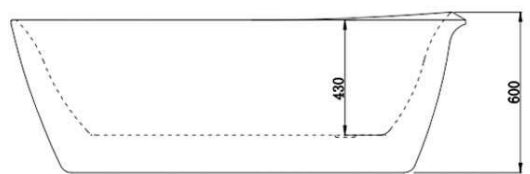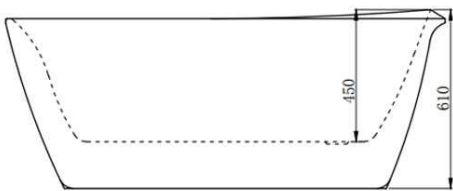
125573

125778

SPECIFICATION
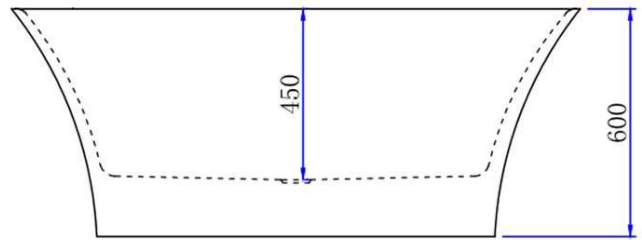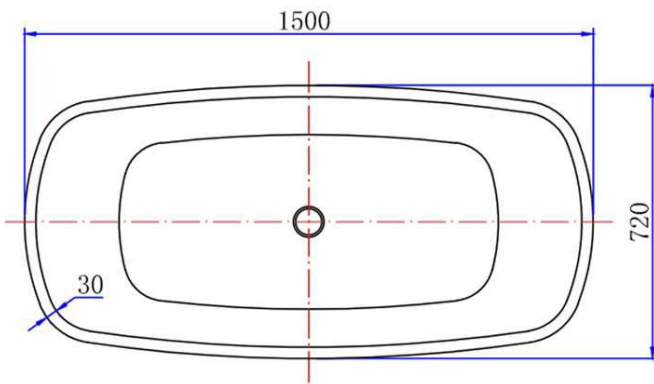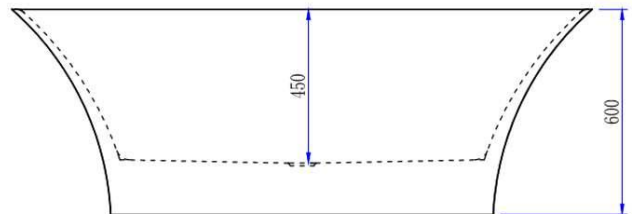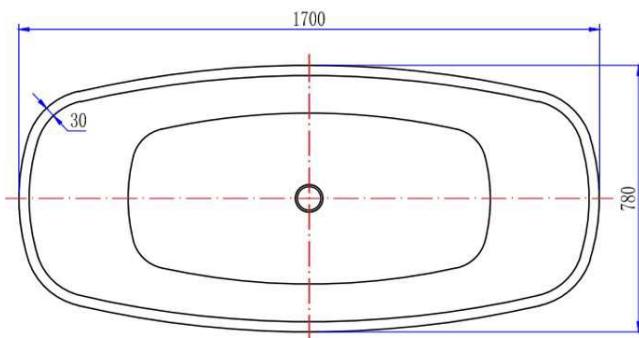
1500

720

30

80572

450

600

1700

780

30

80778

450

600

SPECIFICATION

11572

1500
30
720
450
580

11672

1650
360
720
30
455
580

11673

1580
215
730
25
450
580

11775

1680
240
730
30
460
580

11878

1780
25
210
780
465
600

SPECIFICATION

30 760 1500 470 600	30 780 1600 470 600	1700 30 820 470 600
16576	**16678**	**16782**
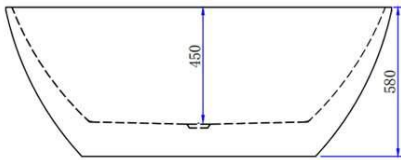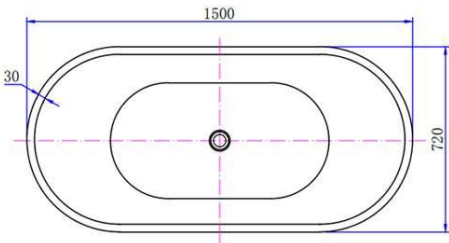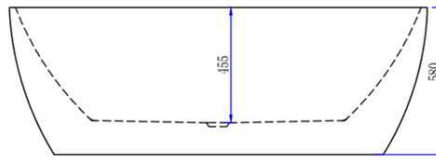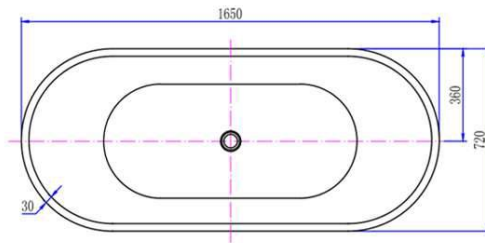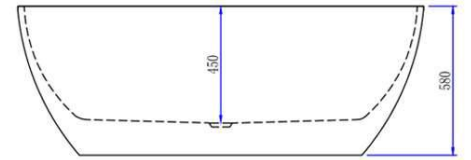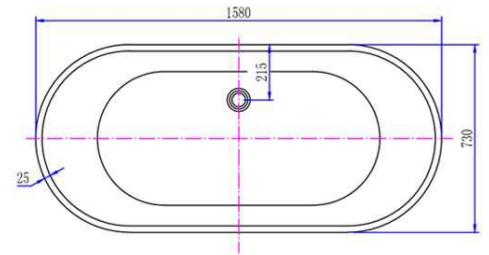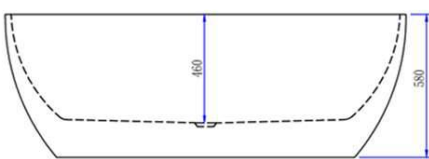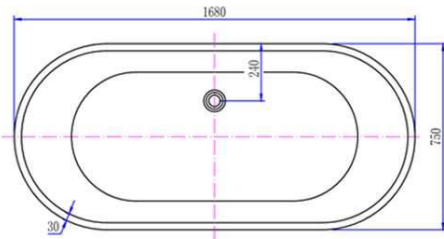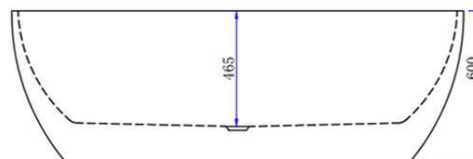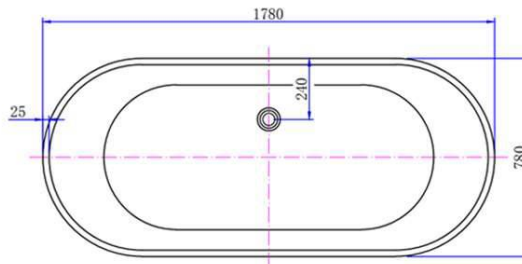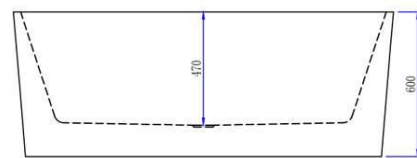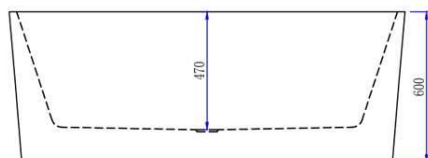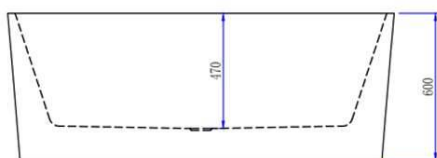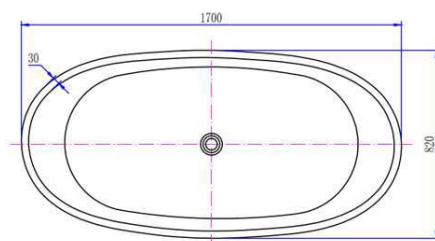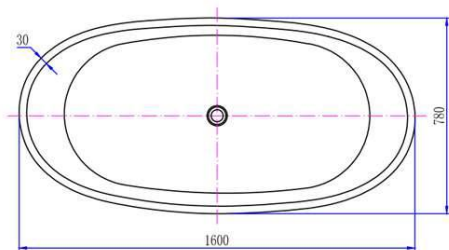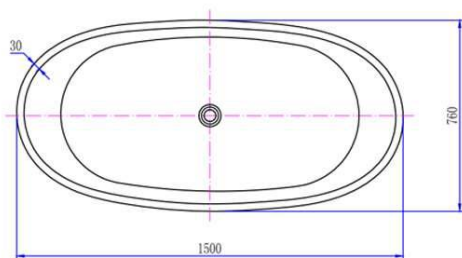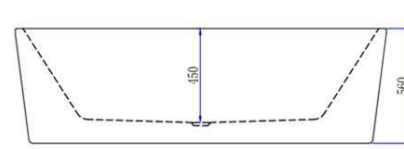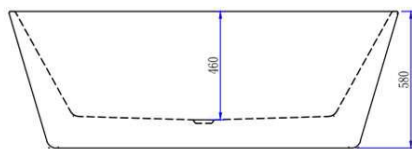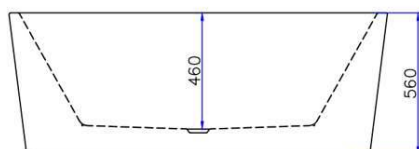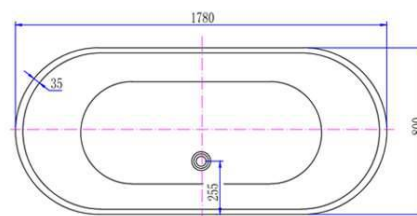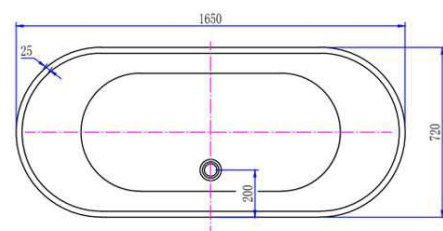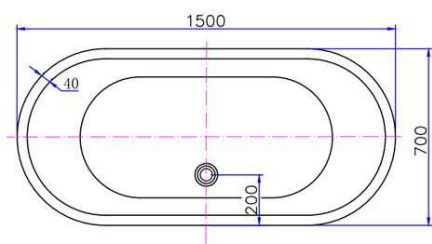
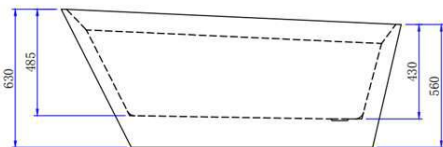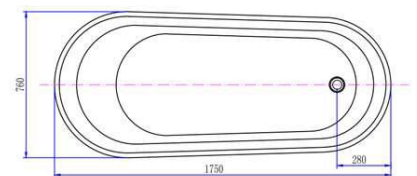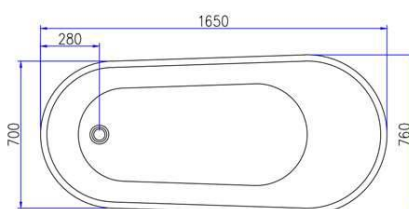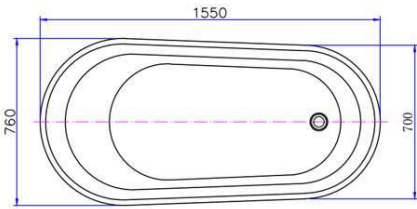|		
1500 40 700 200 460 560	1650 25 720 200 460 580	1780 35 800 255 450 560
1581	**1681**	**1881**

SPECIFICATION
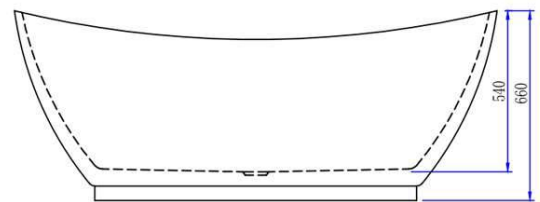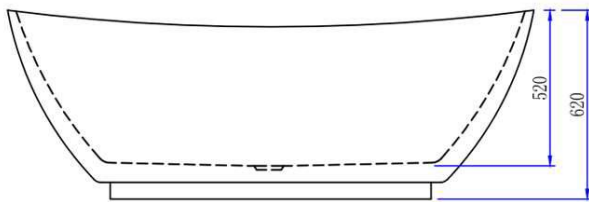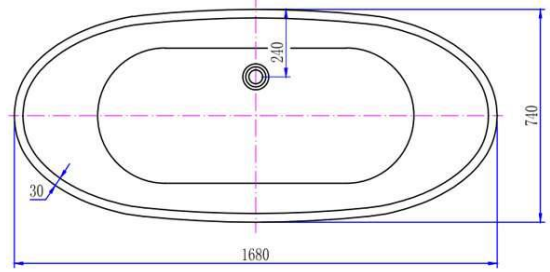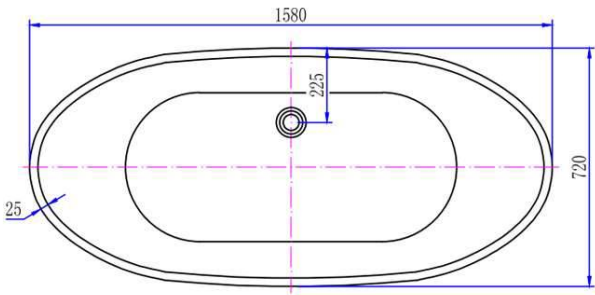
10672

10774
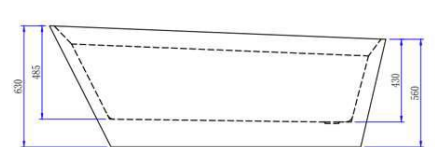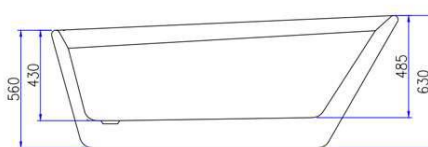
1506B

1606B

1706B

SPECIFICATION
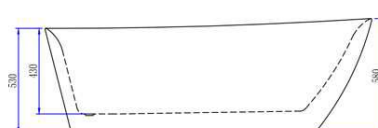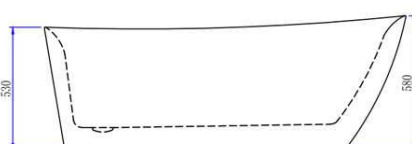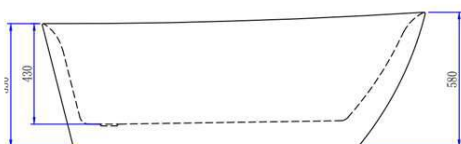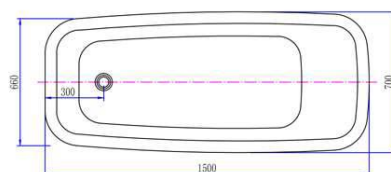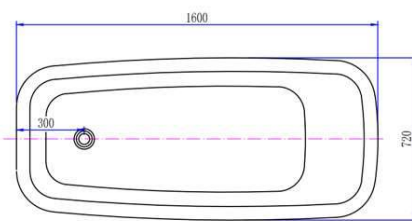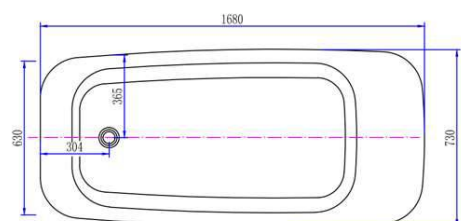
9773

9672

9570

93572

93778

SPECIFICATION
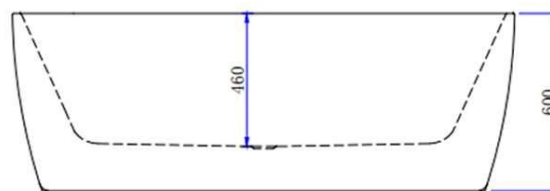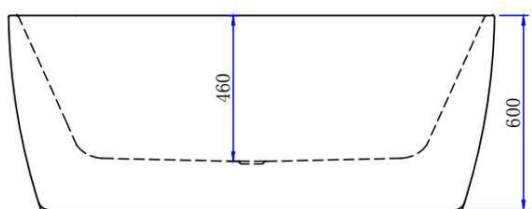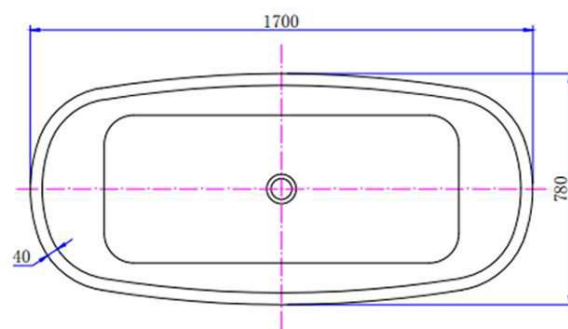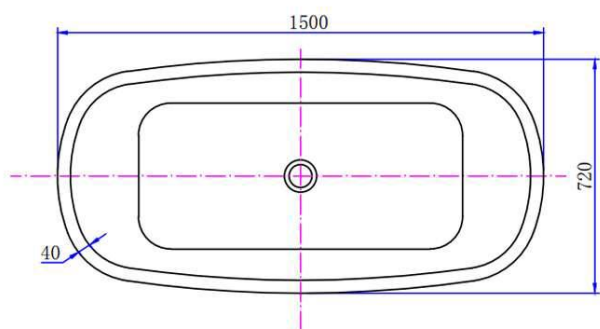
43572

43778
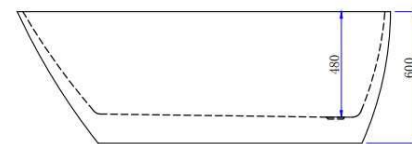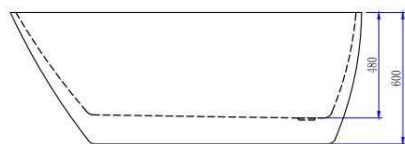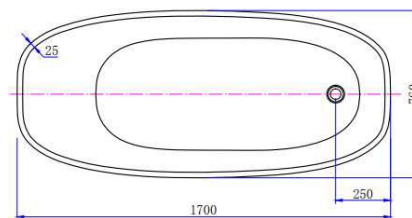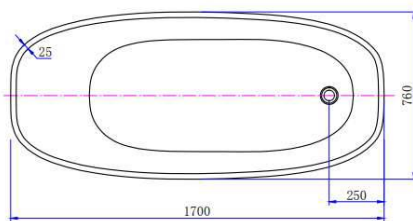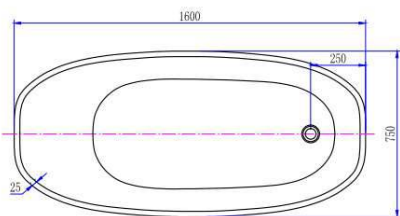
15575

15675

15776

INSTALLATION (Option #1)

Installation using a standard PVC P-Trap could be done similarly.
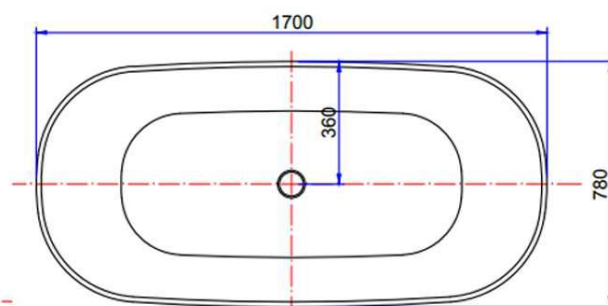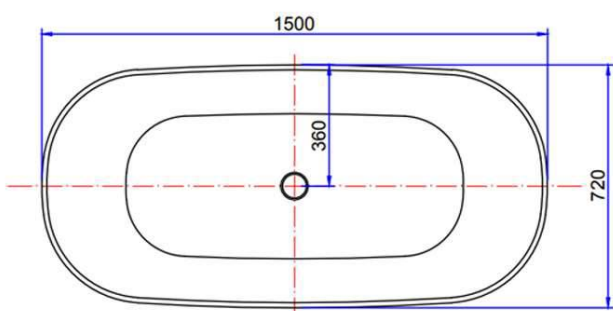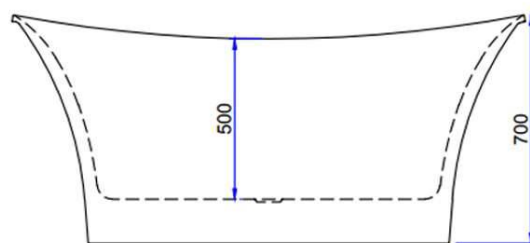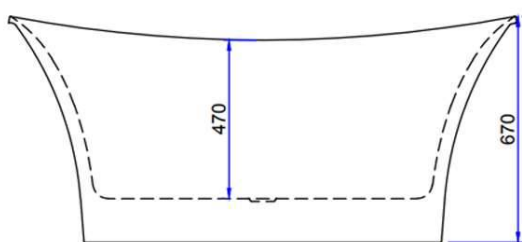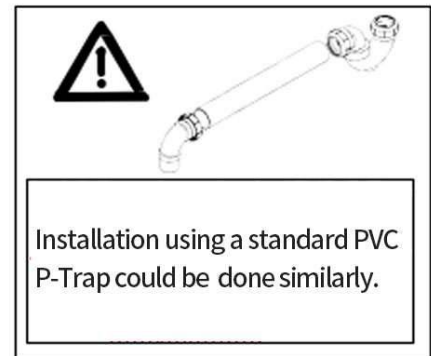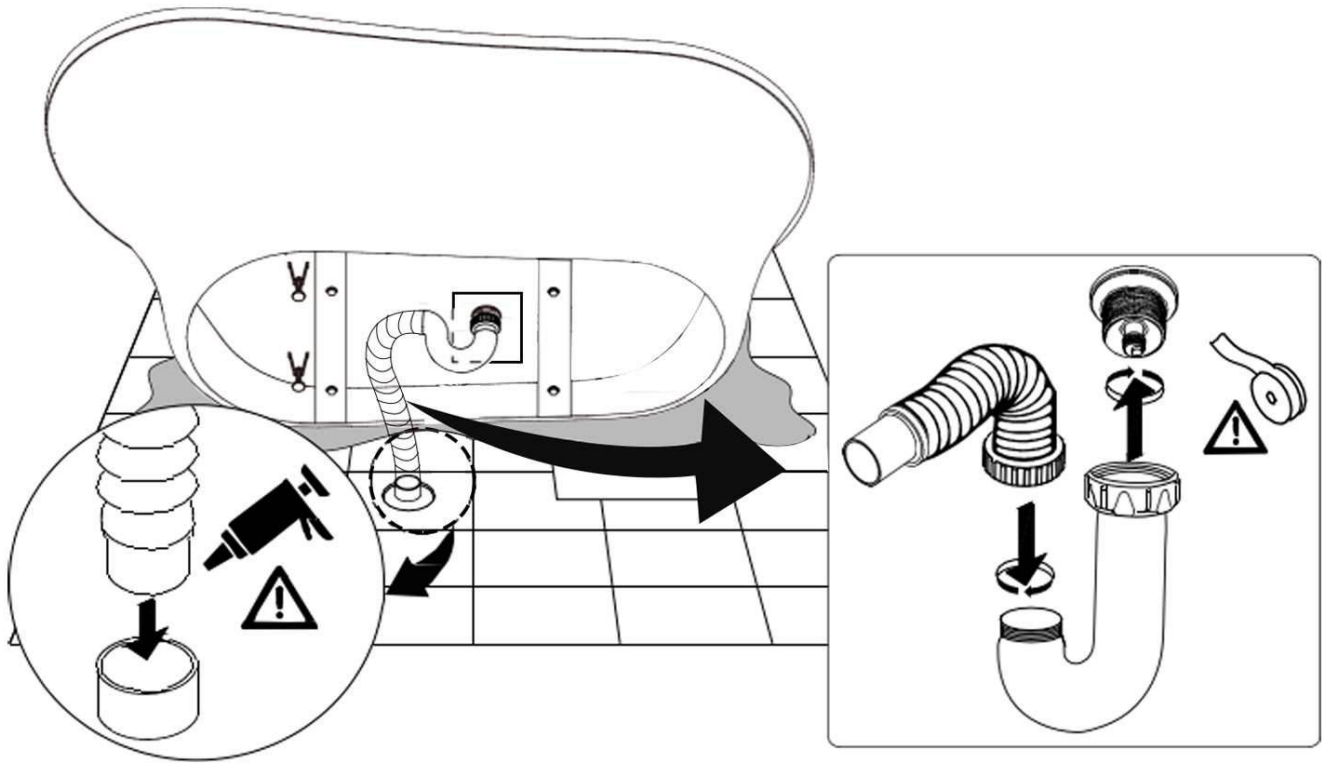
Option #1

- Screw the supplied Adapter to the preinstalled bathtub drain. Use Teflon tape and/or sealant

- Connect the P-Trap to the Adapter using PVC pipe sealant to adequately join the two parts

- Then, as shown in the illustration, connect the P-Trap to the Flexible Tube

- Connect the Flexible Tube to your existing floor drain as illustrated, using PVC pipe sealant to join the parts together

SECURING THE BATHTUB

BEFORE FIXING THE BATHTUB TO THE FLOOR, MAKE SURE YOU HAVE INSTALLED YOUR FAUCET(IF APPLICABLE) AND THAT YOU HAVE CHECKED FOR LEAKS
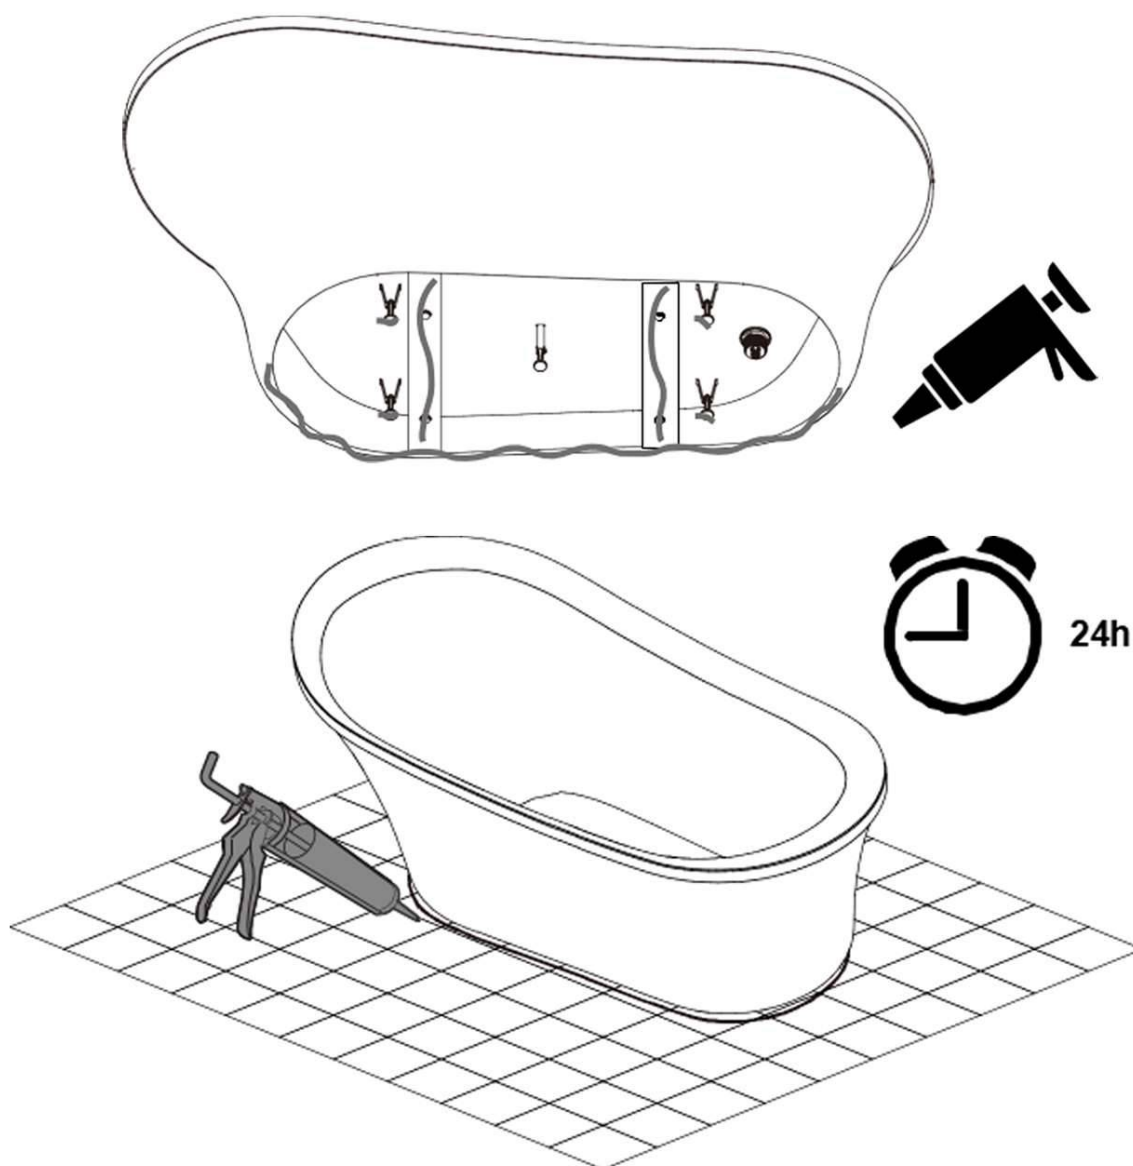
- Test for leak by filling up the tub and let it drain. Then check all plumbing connections for leaks

- Fix the bathtub to the floor by applying a strong Tub &Tile Adhesive under each edges of the tub that will be in contact with the floor: The rim, the lateral bars and the feet

- Finally, for a professional finish, draw a bead of silicone around the base

- Let it dry for 24 hours