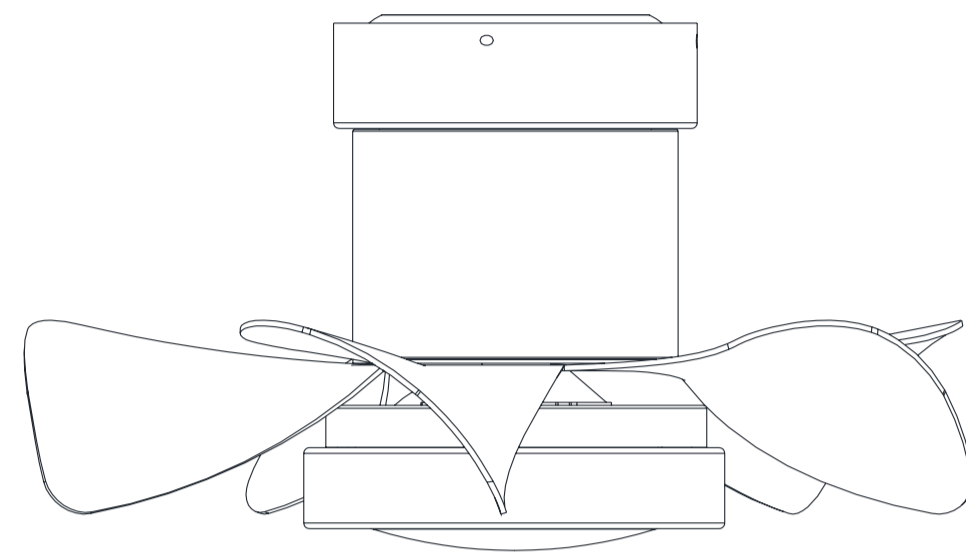# Creative design

Multi-Scenario
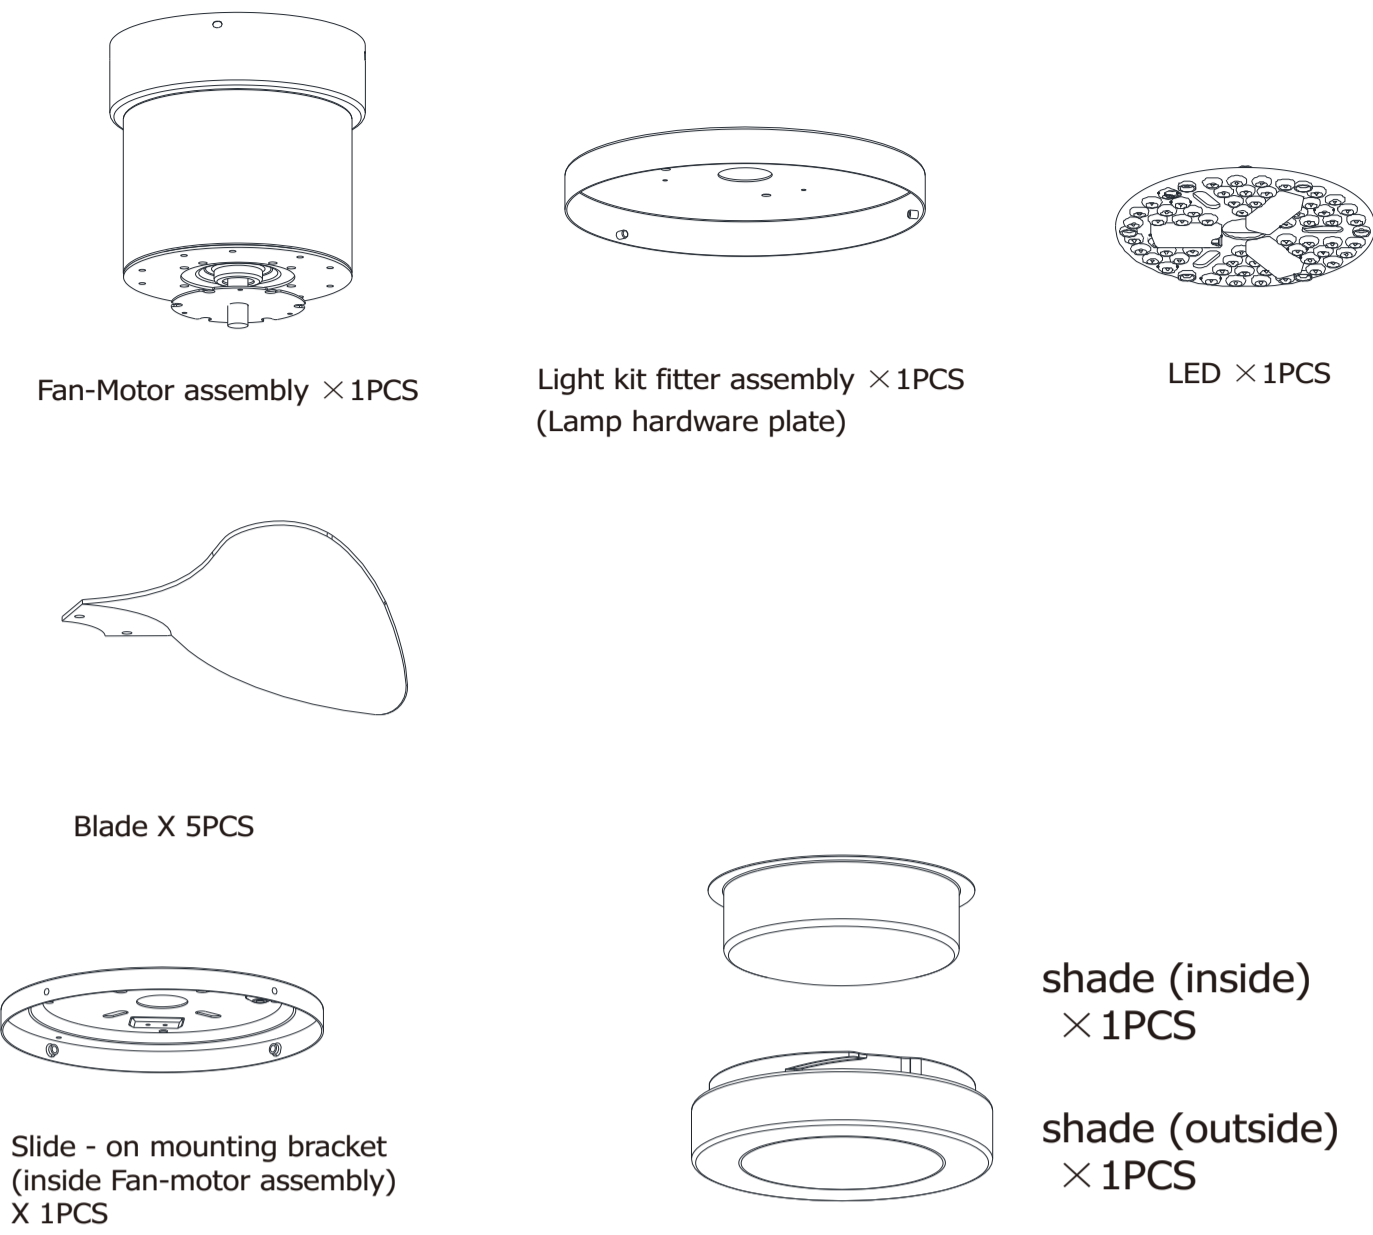hanging or Ceiling
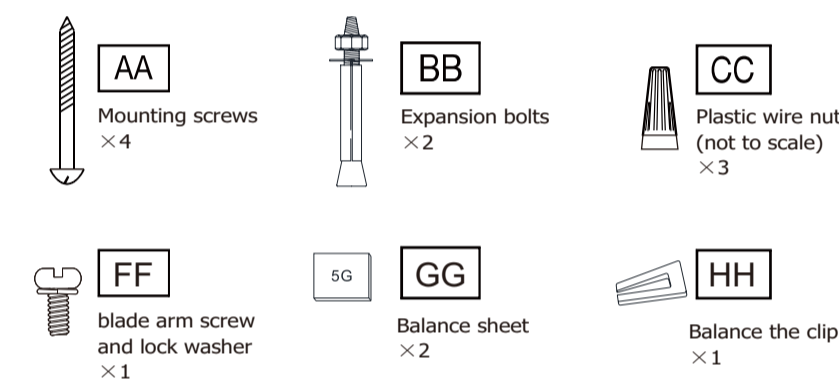
DEROCATE CEILING FAN

User Manual

Fan-Motor assembly ×1PCS

Light kit fitter assembly ×1PCS
(Lamp hardware plate)

LED ×1PCS

Blade X 5PCS

shade (inside) ×1PCS

shade (outside) ×1PCS

Slide - on mounting bracket
(inside Fan-motor assembly)
X 1PCS

Parts Kit

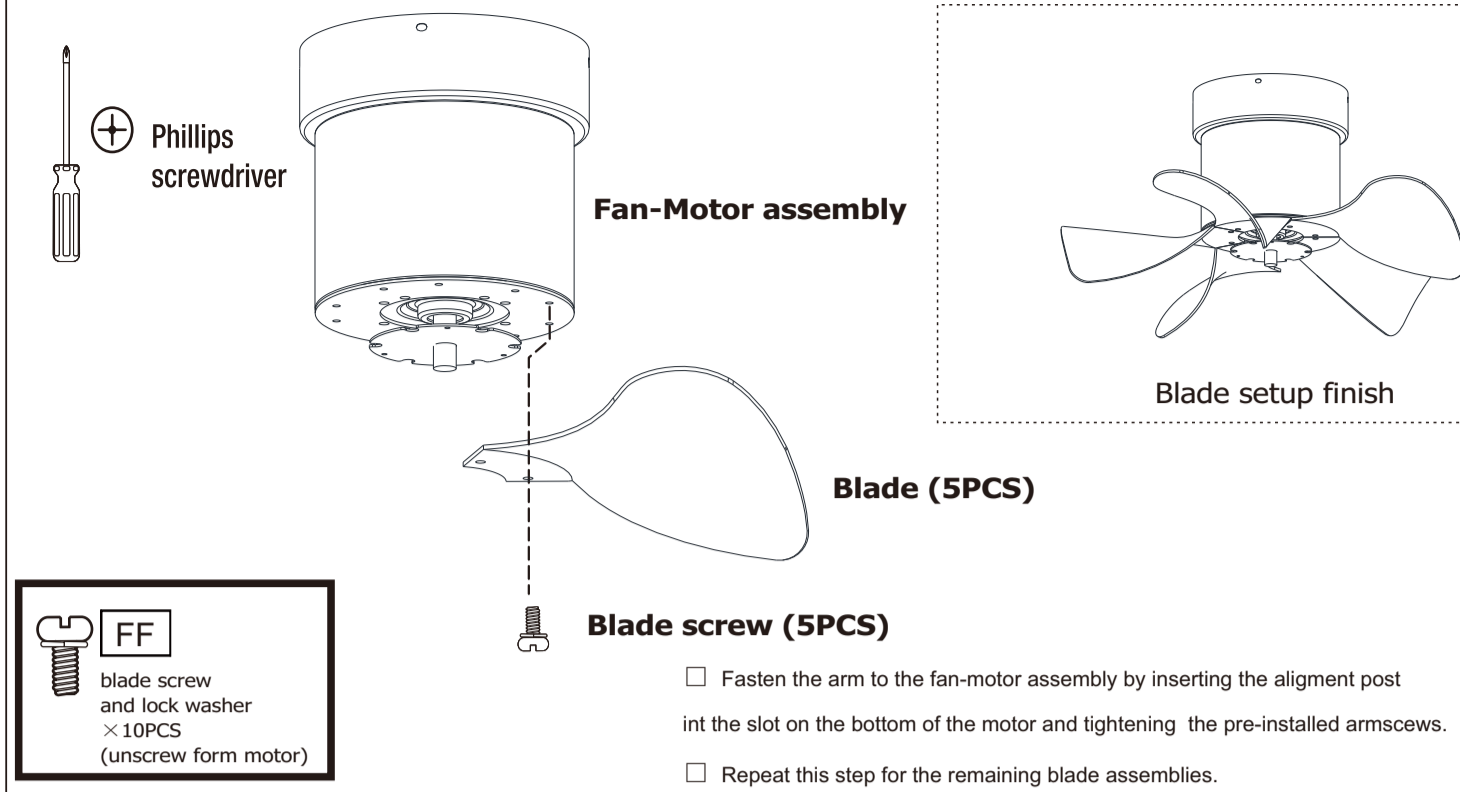| AA Mounting screws ×4	BB Expansion bolts ×2	CC Plastic wire nut (not to scale) ×3
FF blade arm screw and lock washer ×1	5G GG Balance sheet ×2	HH Balance the clip ×1

NOTE Hardware not shown to actual size.

Fastening the blade arms to the motor

Phillips screwdriver

Fan-Motor assembly

Blade setup finish

Blade (5PCS)

Blade screw (5PCS)

FF blade screw and lock washer ×10PCS (unscrew form motor)

☐ Fasten the arm to the fan-motor assembly by inserting the aligment post int the slot on the bottom of the motor and tightening the pre-installed armscews.

☐ Repeat this step for the remaining blade assemblies.

Assembly-Attaching the Lights

☐ Align the lamp hardware plate with the mounting hole of the motor assembly.

☐ Fasten the lamp hardware plate to the motor assembly with screws.

☐ Make sure all three screws are in place.

Fan-Motor assembly

Lamp hardware plate

Lamp hardware plate screws (3PCS)

Light kit fitter assembly setup finish

Assembly-Attaching the Lights

Fan-Motor assembly

LED Light

LED screws (3PCS)

shade assembly

☐ Aim the LED light at the screw hole of the hardware plate of the lamp.

☐ Attach the LED light to the lamp tray with screws.

☐ Install the lamp shade into the lamp dial by turning clockwise.

☐ Put the LED light source into the disc (the LED light source has a magnet,which can be directly magnetized on the disc).

☐ pass the LED lead of the motor through the hole in the middle of the LED light source.

☐ Then plug the male terminal of LED lead into the female terminal of LED light source.(as shown in figure)

shade assembly finish

The female terminal   The male terminal

Installation of the hanging bracket

CONCRETE CEILING

Mounting Bracket
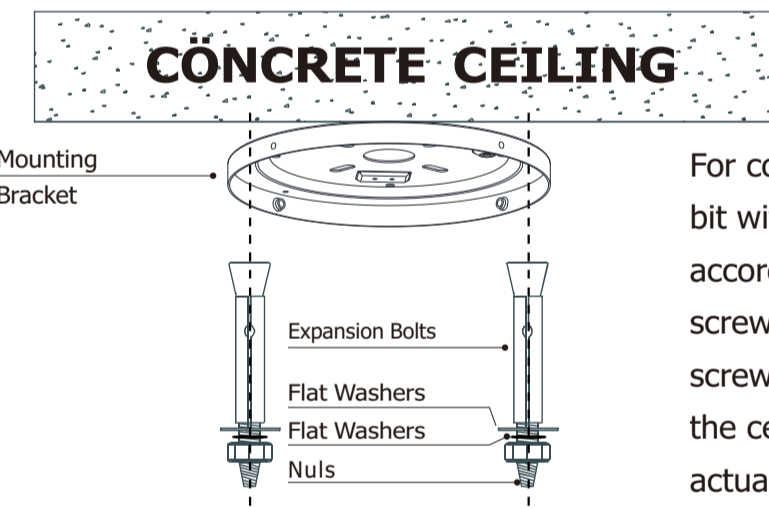
For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

Expansion Bolts
Flat Washers
Flat Washers
Nuls

STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

1)Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.

2)Remove the Mounting Bracket , drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers , Spring Washers and Nuts .

⚠ **IMPORTANT : SCREWS & NUTS MUST BE TIGHTENED TILL SNUG**

WOODEN CEIING

Mounting Bracket Washers
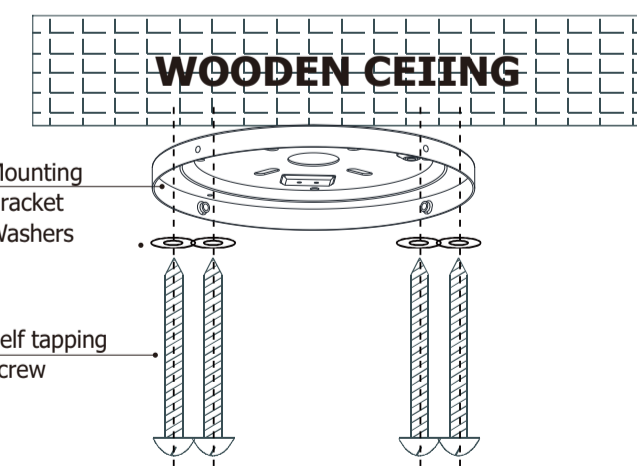
For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)

Self tapping screw

STEP 2 A-WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.

2) Remove the Mounting Bracket , drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceilng with the 4Self Tapping Screws &Washers

---

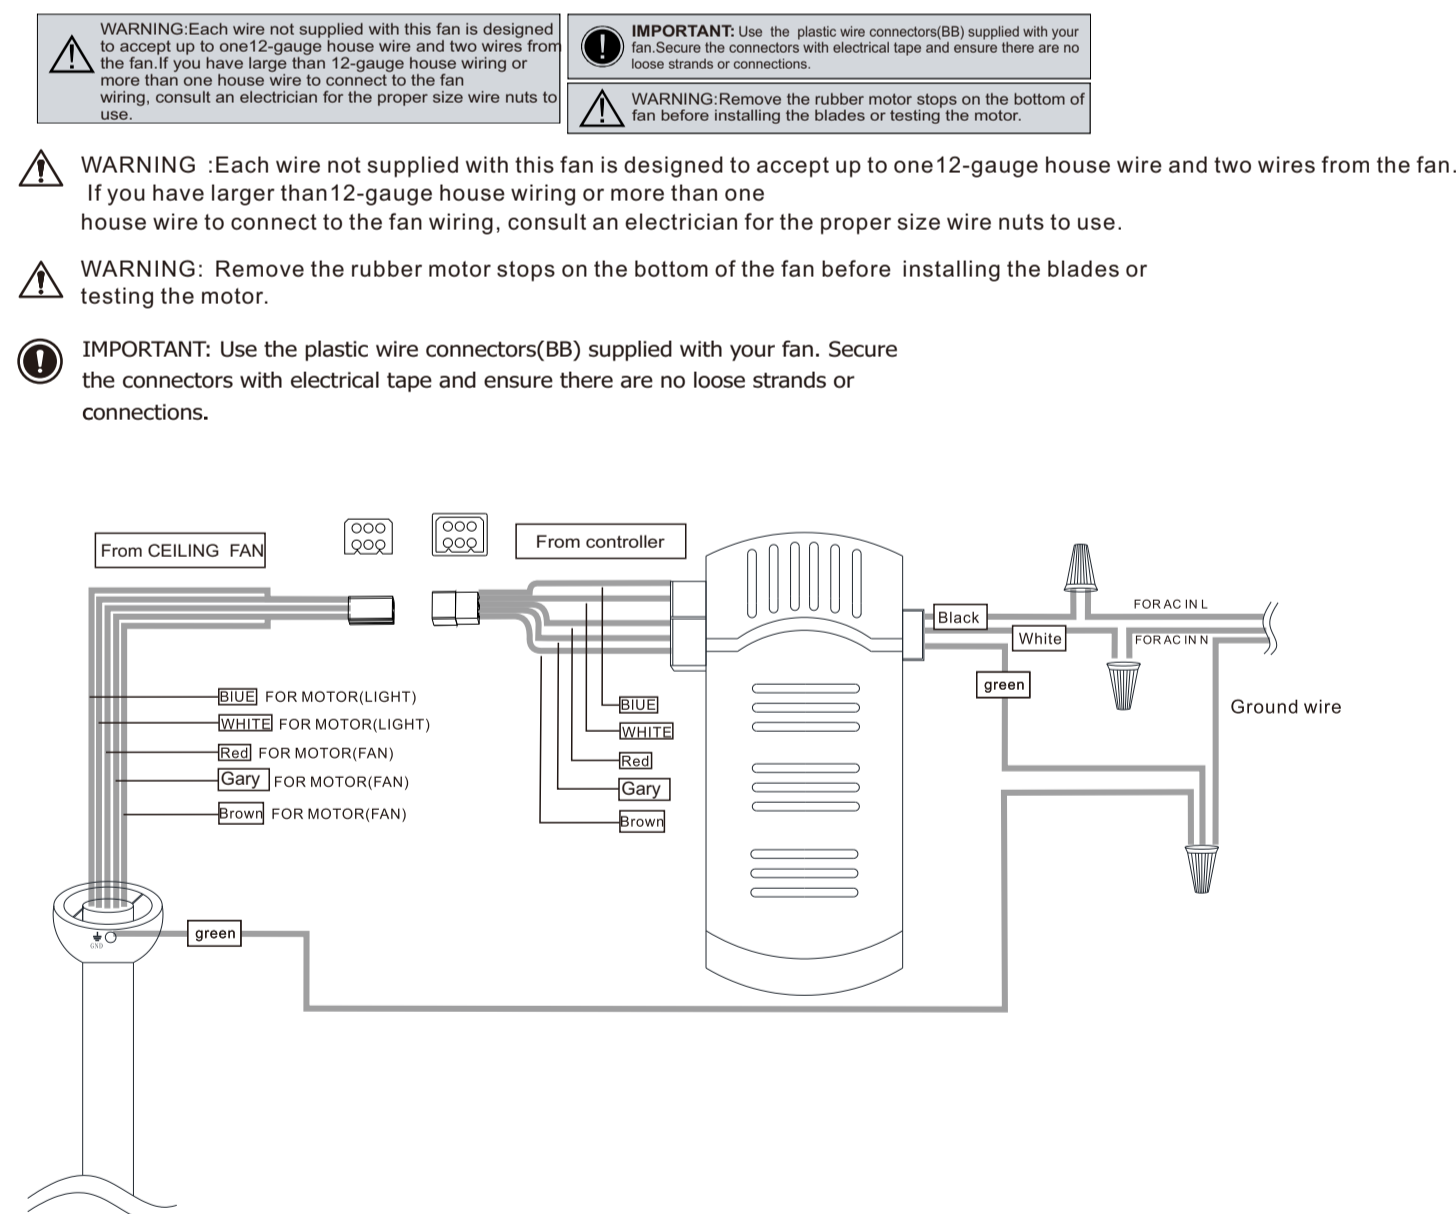## Install downrod assembly

Loosen and reserve

Screw off
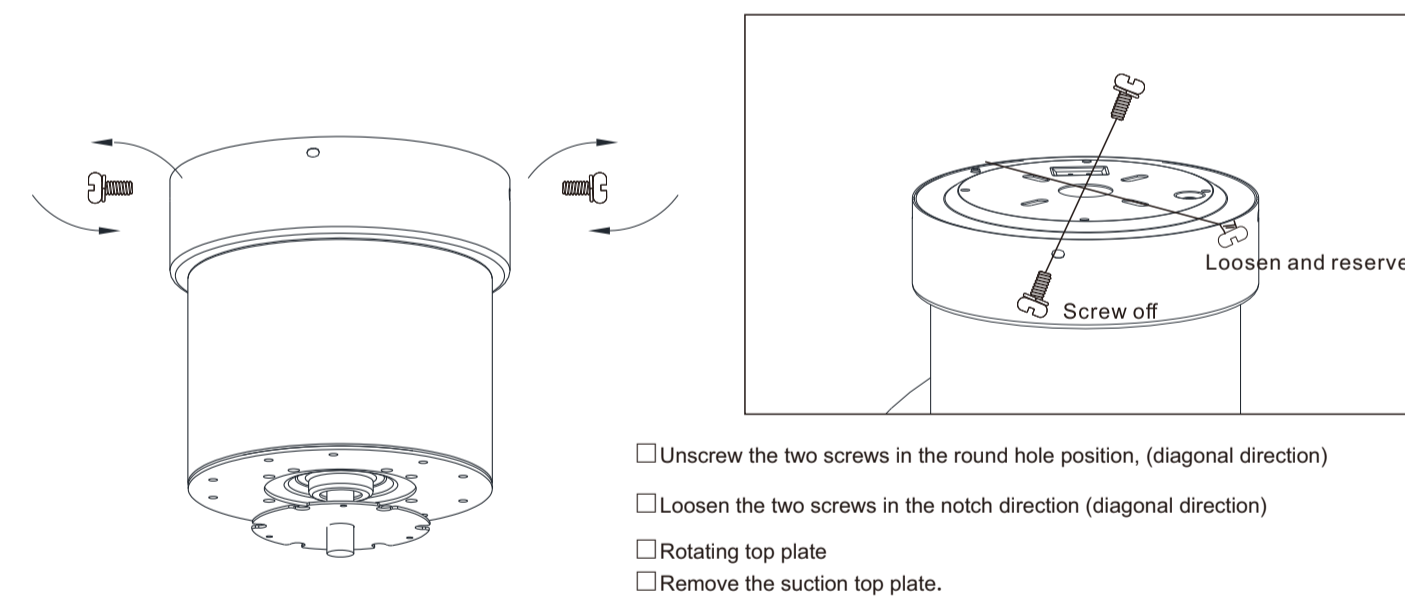
☐ Unscrew the two screws in the round hole position, (diagonal direction)

☐ Loosen the two screws in the notch direction (diagonal direction)

☐ Rotating top plate

☐ Remove the suction top plate.
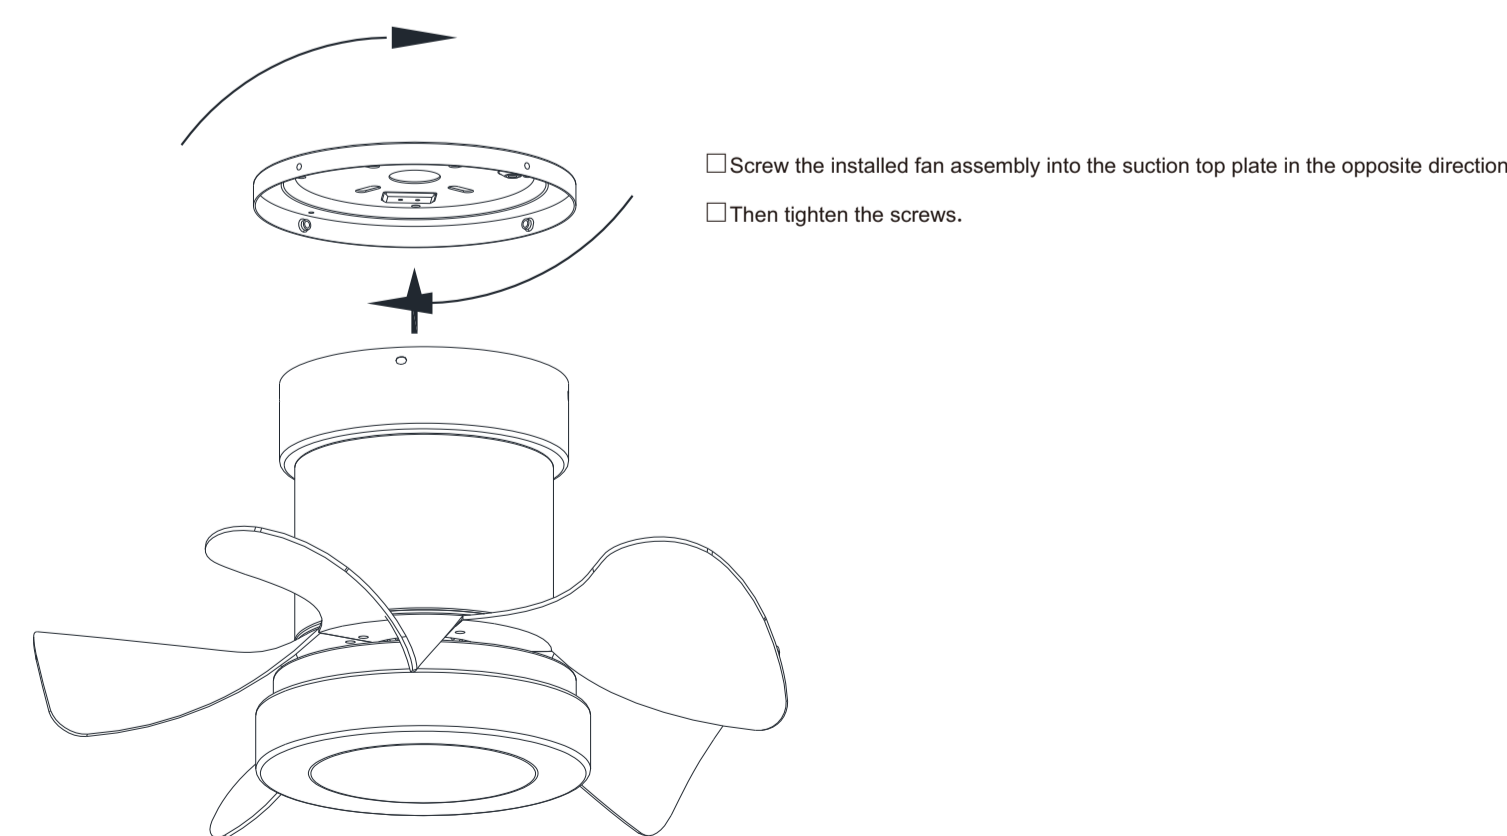
☐ Screw the installed fan assembly into the suction top plate in the opposite direction.

☐ Then tighten the screws.

Making the electrical connections

WARNING:Each wire not supplied with this fan is designed to accept up to one12-gauge house wire and two wires from the fan.If you have larger than 12-gauge house wiring or more than one house wire to connect to the fan wiring, consult an electrician for the proper size wire nuts to use.

IMPORTANT: Use the plastic wire connectors(BB) supplied with your fan.Secure the connectors with electrical tape and ensure there are no loose strands or connections.

WARNING:Remove the rubber motor stops on the bottom of fan before installing the blades or testing the motor.

⚠ WARNING :Each wire not supplied with this fan is designed to accept up to one12-gauge house wire and two wires from the fan. If you have larger than12-gauge house wiring or more than one house wire to connect to the fan wiring, consult an electrician for the proper size wire nuts to use.

⚠ WARNING: Remove the rubber motor stops on the bottom of the fan before installing the blades or testing the motor.

🛈 IMPORTANT: Use the plastic wire connectors(BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.

From CEILING FAN   From controller

BLUE FOR MOTOR(LIGHT)
White FOR MOTOR(LIGHT)
Red FOR MOTOR(FAN)
Gary FOR MOTOR(FAN)
Brown FOR MOTOR(FAN)

Black   White   FOR AC IN L
green   FOR AC IN N
Ground wire

green

1.Raise the fan and place the hangre ball onto mounting bracket.

2.Rotate the fan until the notch on hanger ball snapped into the slot on mounting bracket and sits firmly.

NOTE : THE DOWNROD AND HANGER BALL SHOULD NOT ROTATE IF THIS STEP IS DONECORRECTLY.

3.Loose the safety wire clamp.

4.Route the safety wire through the sideFan hole on mounting. bracket, and retighten the safety wire with safety wire clamp.

5.Connect the wire connector plugs correctly. The wire connector plugs design with fool proof device, please don't force to plug. Other wise it may affect the normal use of the light fan or burn the fan motor.

Use of remote control

ALL On/Off

Level 1~6

Fan On/Off

Forward

Auto off after 1hr~4hr

LIGHT ON/OFF

Reverse

Natural wind

FanSpeed Low Level
FanSpeed Middle Level
FanSpeed High level

FanSTOP

ALL On/Off

LIGHT On/Off

1H Auto off after 1hr
2H Auto off after 2hr
4H Auto off after 4hr

▽ Forward
≋ Natural wind
△ Reverse